



- 18 Senderspeicher
- 14-Band-Graphic-Equalizer
- Doppel-Cassettendeck
- 75 Ohm Antennen-/Kabelanschluß

Best.Nr.: 0679944/01
Ger.Bez.: UNIV.STEREO-TURM

GKz: G GERAET
WGT: 659 KOMPLETTE STEREO-TUERME
KD-Sektor: R RUNDUNK
BaumNr.: 00 KEIN DIAGNOSEBAUM VORHANDEN
Klassierung: STG STEREOG., TUNER, VERST., STEUERUNG
IFW-FehlerGru.: 205 RDF., VERST., TB., PHONO, CD, CB
Type/Privileg/Universum.Nr MODELL 3030
Beschreibung
VK-Preis: 999.00

Serviceart: 01 QUELLE-TKD
Garantie fuer Kunden 06 Monate
Sondervereinbarungen: 0 SIEHE SERVICEART

Garantiereparatur 9999999 QUELLE

KAT. **954**

DATUM **09.08.95**


SEITEN **040**

Inhaltsverzeichnis

	Seite
<u><i>Service Manual Verstärker V-155</i></u>	3
Bedienungselemente	4
Anschlüsse	5
Schaltplan Fernbedienungsgeber	6
Schaltplan Hauptplatine	7
IC-Anschlußbelegung	8
Explosionszeichnung	9
Verdrahtungsplan	10
<u><i>Service Manual CD-Player CD-155</i></u>	11
Bedienungselemente	12
Abgleich	13
Schaltplan Bedienungsplatine, Netzteil	14
Platinenlayout	15
Verdrahtungsplan	16
Explosionszeichnung	17
IC-Anschlußbelegung	18
<u><i>Service Manual Tuner T-155</i></u>	19
Bedienungselemente	20
Abgleich	21-22
Schaltplan Hauptplatine	23
Platinenlayout	24
Explosionszeichnung	25
Verdrahtungsplan	26
<u><i>Service Manual Cassettendeck C-155</i></u>	27
Bedienungselemente	28
Abgleich	29
Verdrahtungsplan	30
Schaltplan Hauptplatine	31
Explosionszeichnung Gerät	32
Explosionszeichnung Laufwerk Autorevers	33
Explosionszeichnung Laufwerk A/W	34
<u><i>Service Manual Equalizer EQ-155</i></u>	35
IC-Anschlußbelegung	36
Bedienungselemente	37
Schaltplan Hauptplatine	38
Verdrahtungsplan	39
Explosionszeichnung	40


SERVICE MANUAL

STEREO POWER AMPLIFIER

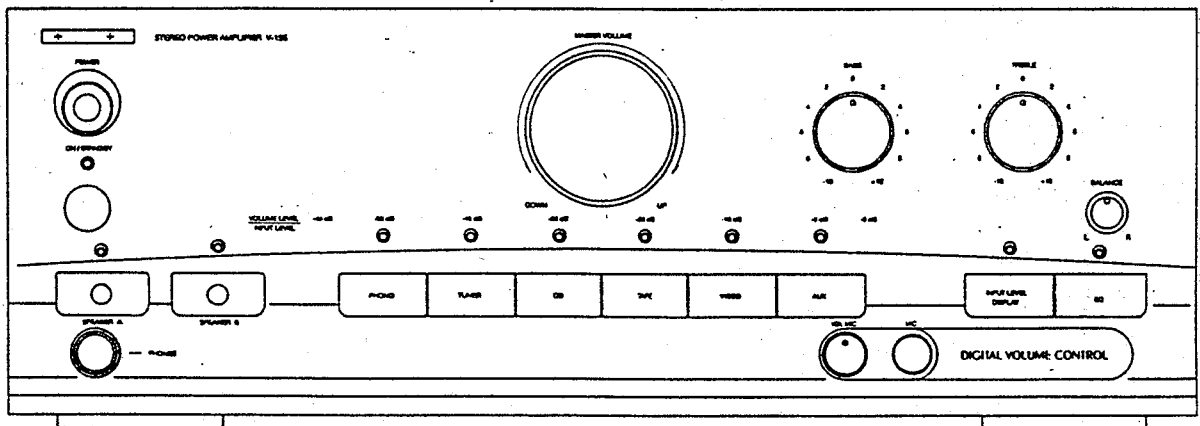


V - 155


CONTROL FUNCTIONS

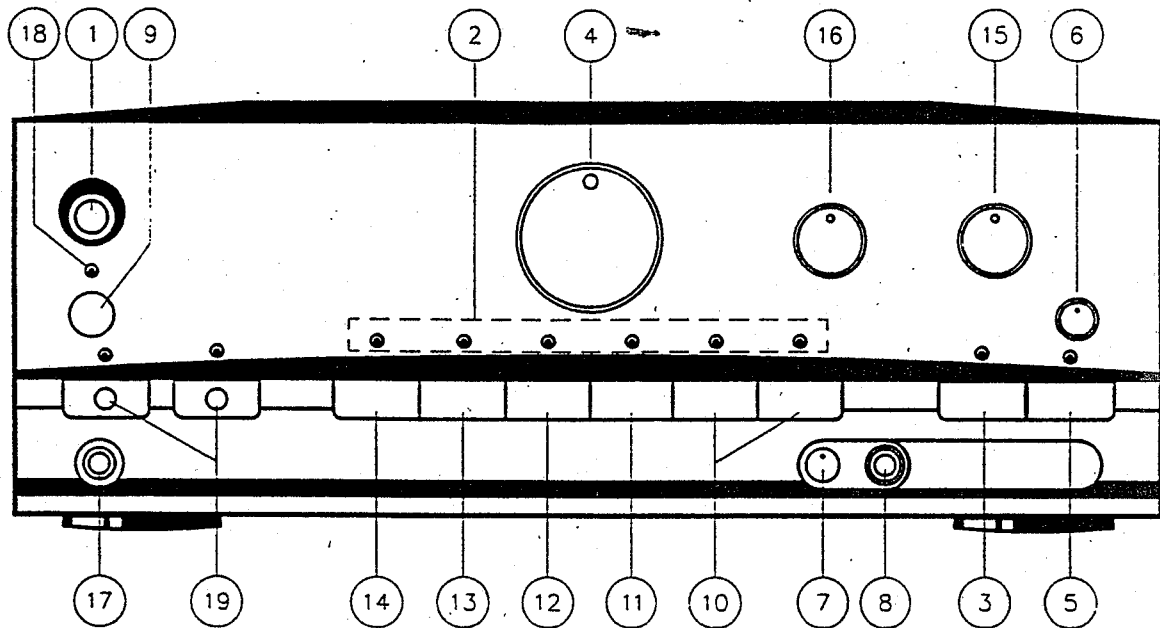


- | | |
|--|--|
| <ul style="list-style-type: none"> 1. POWER SWITCH 2. 3 FUNCTIONS LED DISPLAY INDICATORS 3. INPUT LEVEL DISPLAY 4. ARTIFICIAL INTELLIGENT MASTER VOLUME 5. EQUALIZER SWITCH 6. BALANCE VOLUME (L / R) 7. MIC LEVEL VOLUME 8. MIC JACK 9. REMOTE SENSOR 10. VIDEO AUX | <ul style="list-style-type: none"> 11. TAPE 12. CD 13. TUNER 14. PHONO 15. TONE CONTROL TREBLE VOLUME 16. TONE CONTROL BASS VOLUME 17. HEAD PHONE JACK 18. REMOTE STANDBY INDICATOR 19. SPEAKER SELECTION |
|--|--|

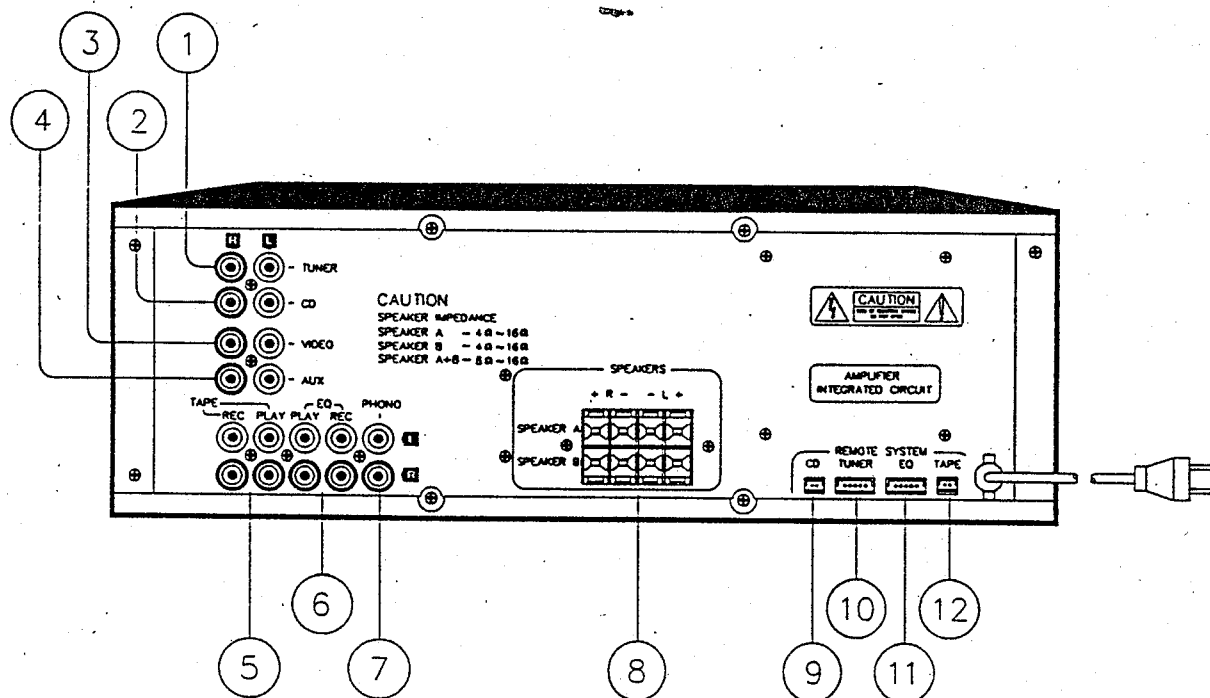


- | | |
|--|-----------------------------------|
| 1. TUNER TERMINAL | 7. PHONO TERMINAL |
| 2. CD TERMINAL | 8. SPEAKER TERMINAL |
| 3. VIDEO TERMINAL | 9. CD REMOTE SYSTEM CONNECTOR |
| 4. AUX TERMINAL | 10. TUNER REMOTE SYSTEM CONNECTOR |
| 5. TAPE (REC / PLAY) IN / OUT PUT TERMINAL | 11. EQ REMOTE SYSTEM CONNECTOR |
| 6. EQ (REC / PLAY) IN / OUT PUT TERMINAL | 12. TAPE REMOTE SYSTEM CONNECTOR |



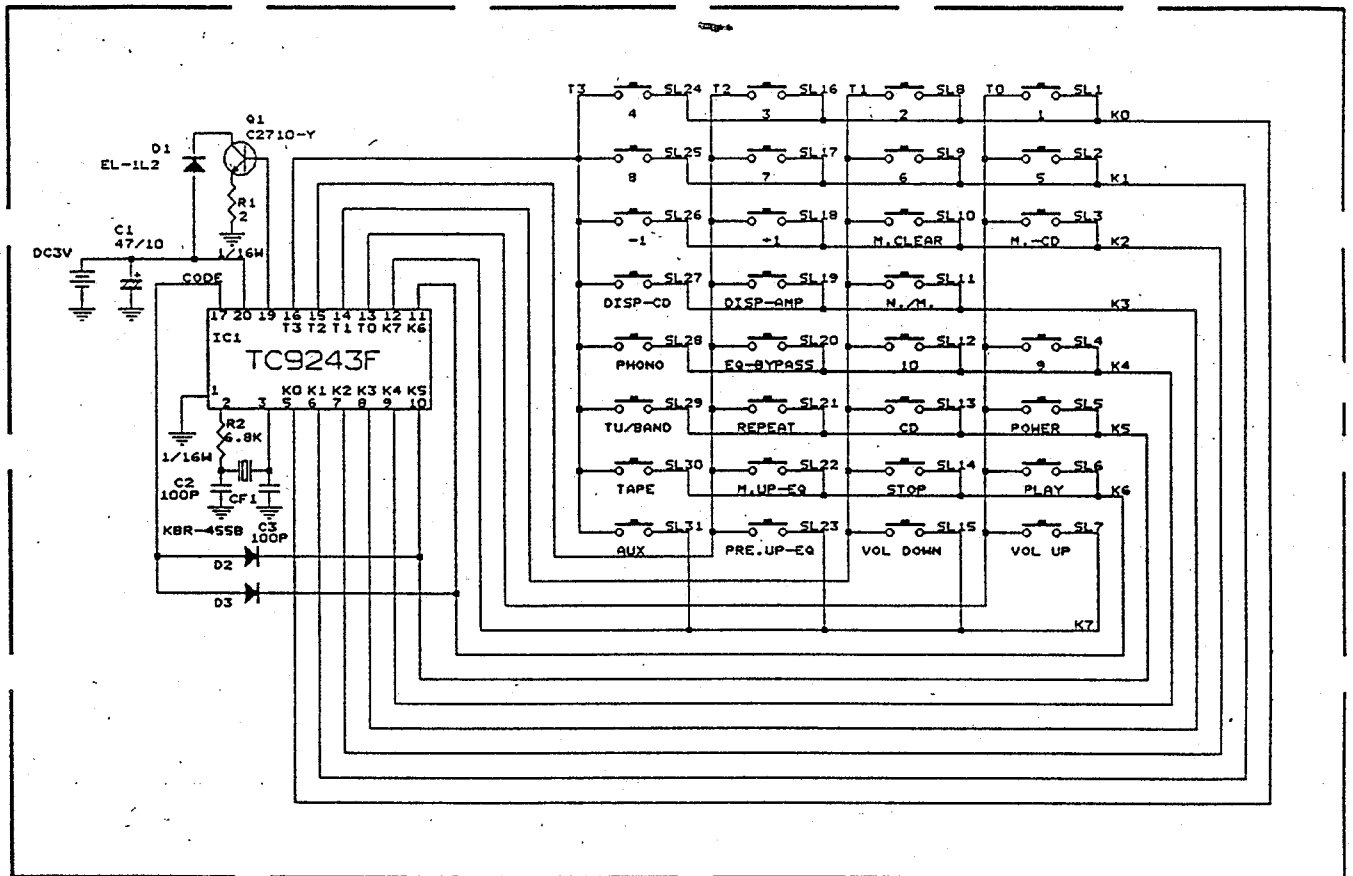


SCHEMATIC DIAGRAM

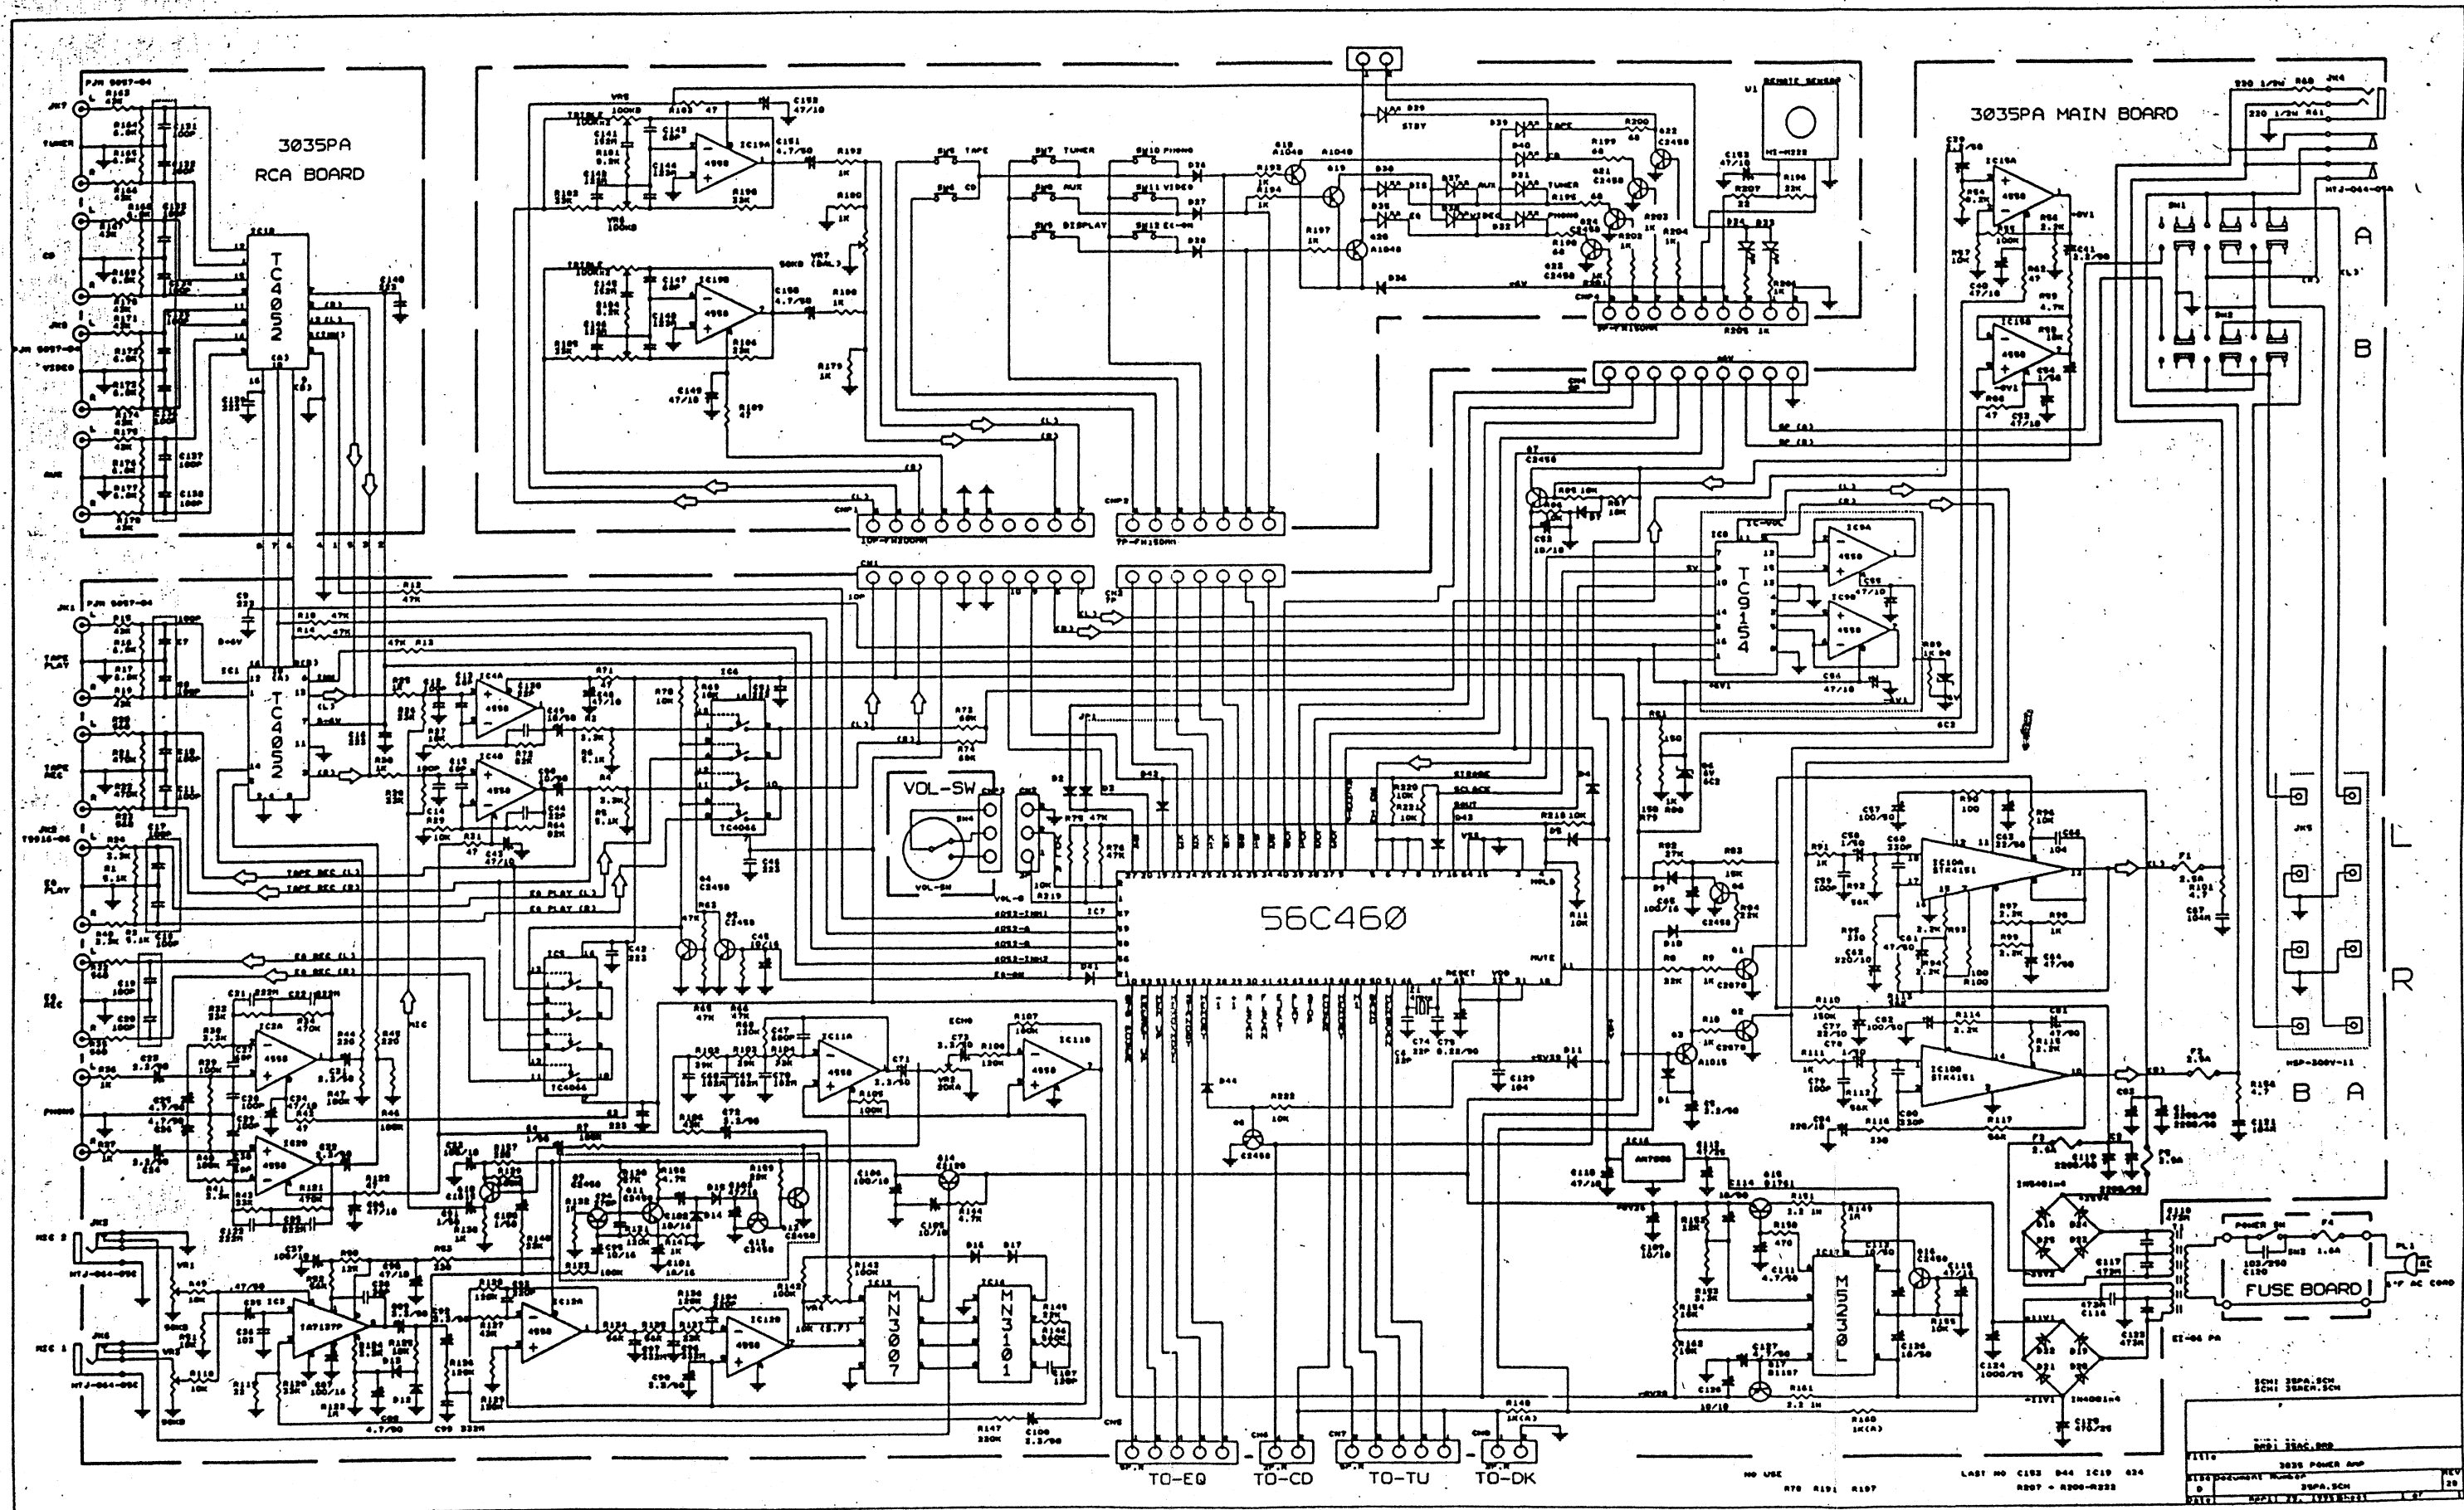


SCHEMATIC DIAGRAM

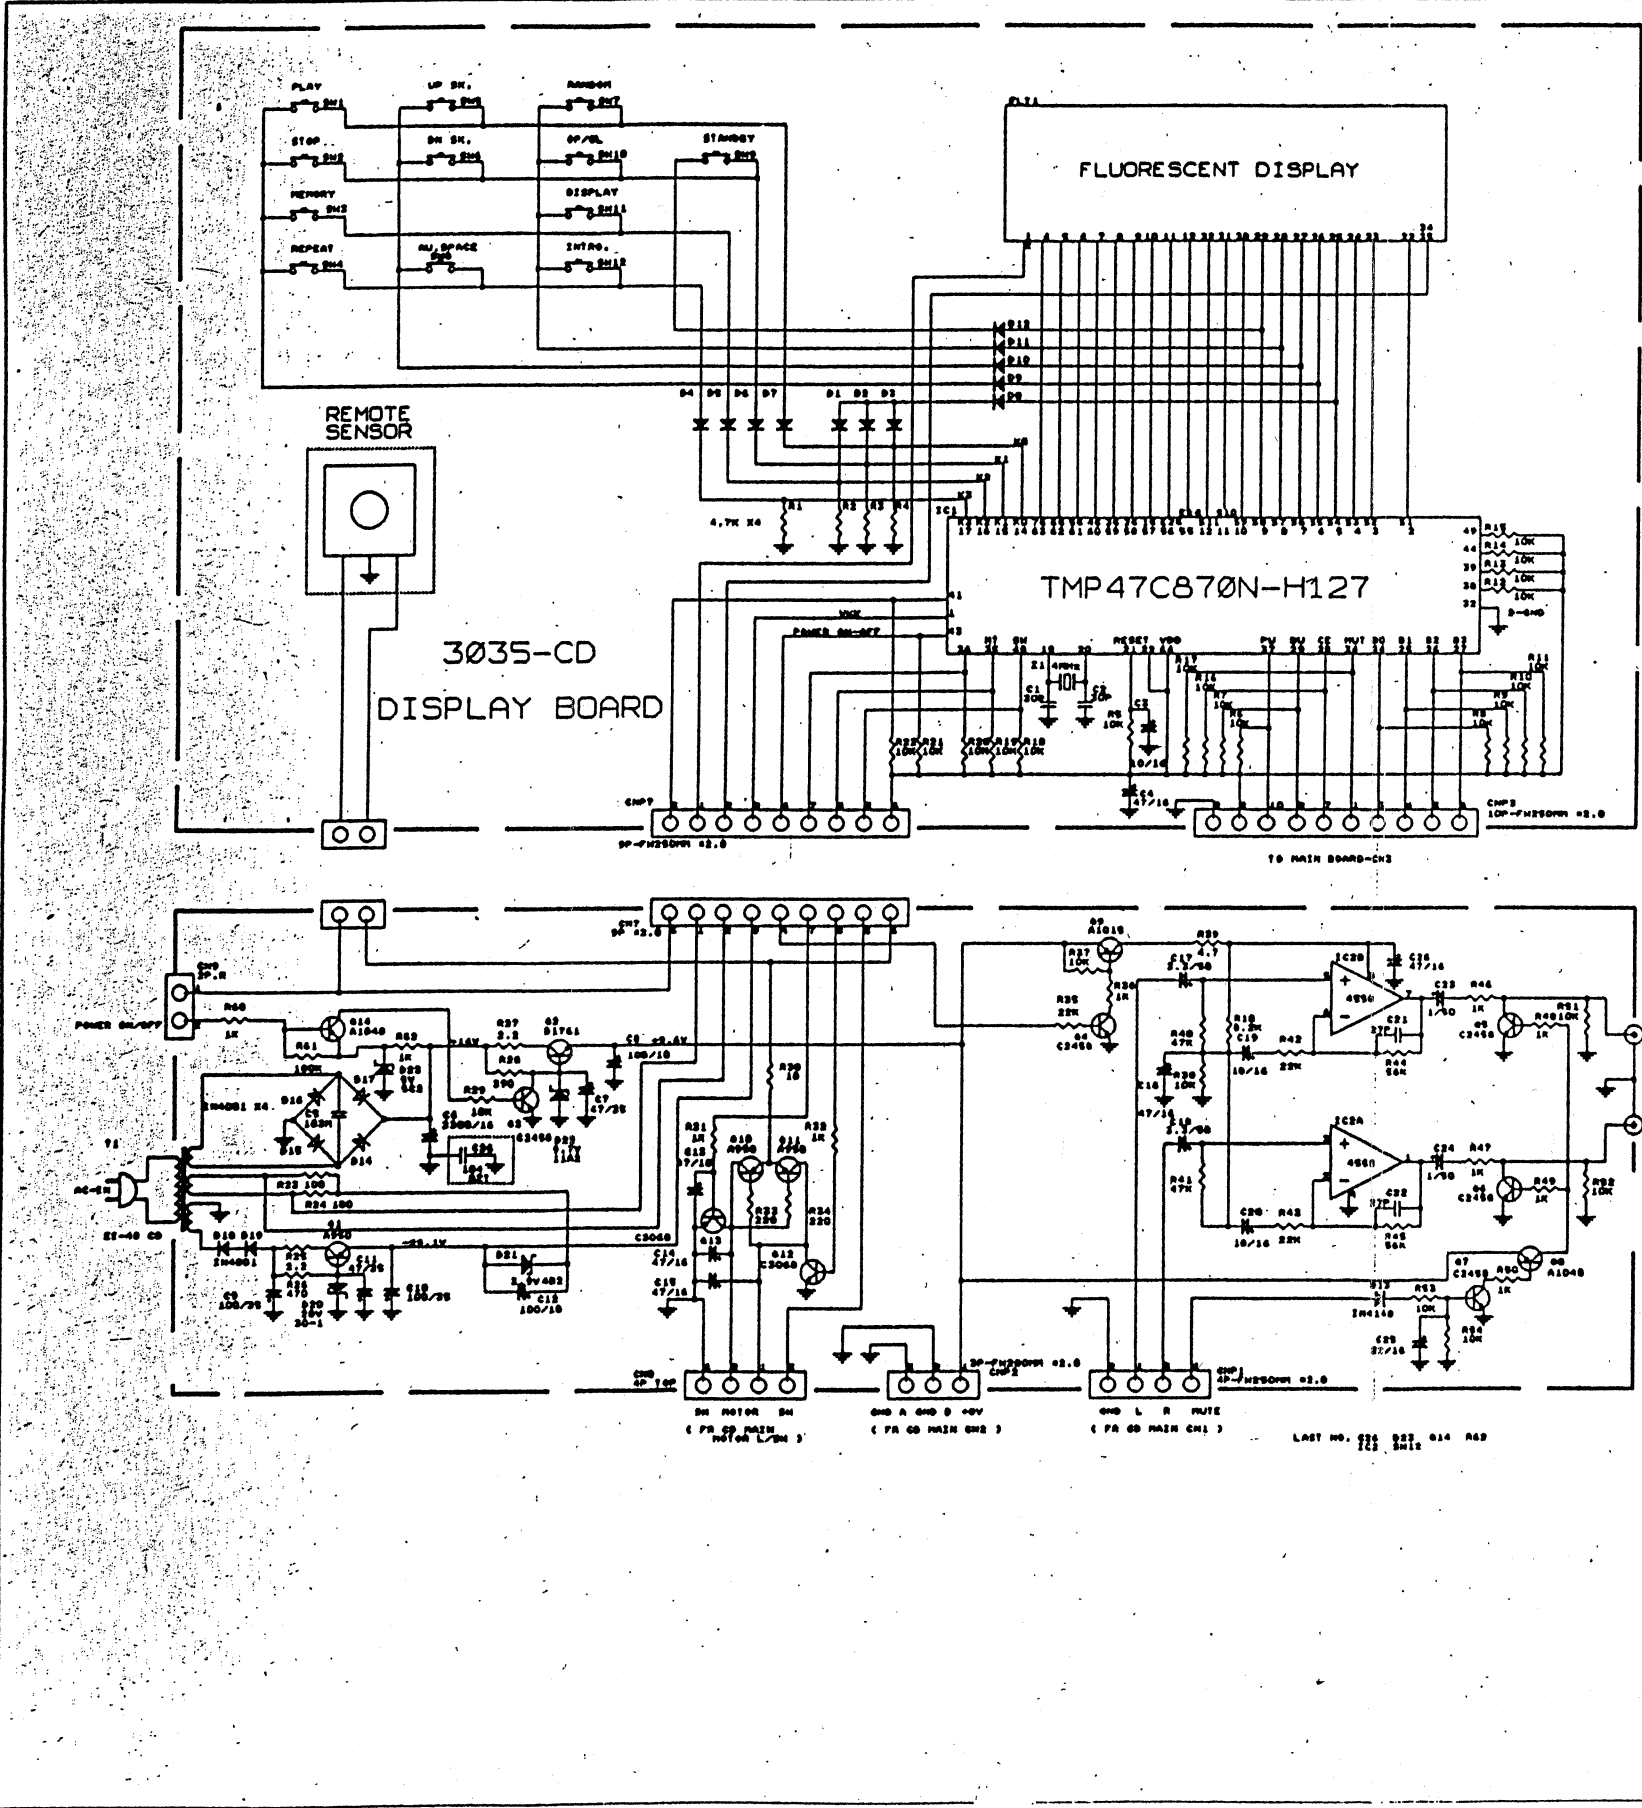


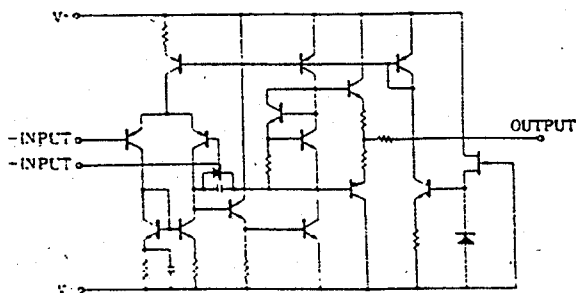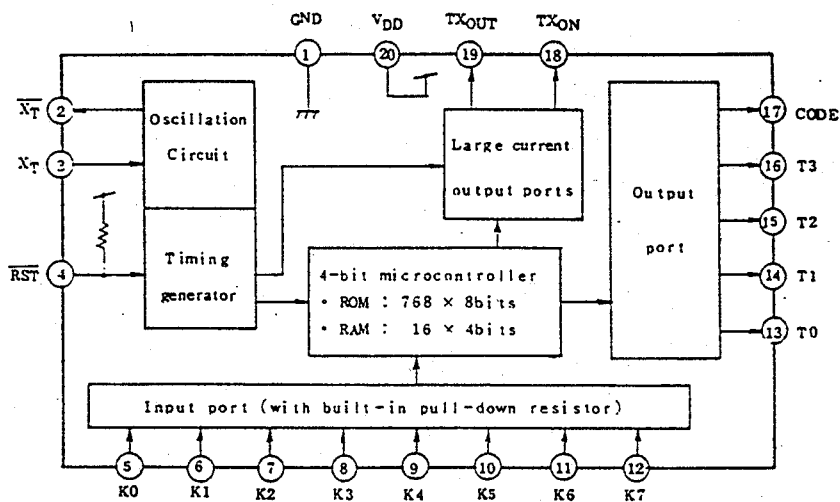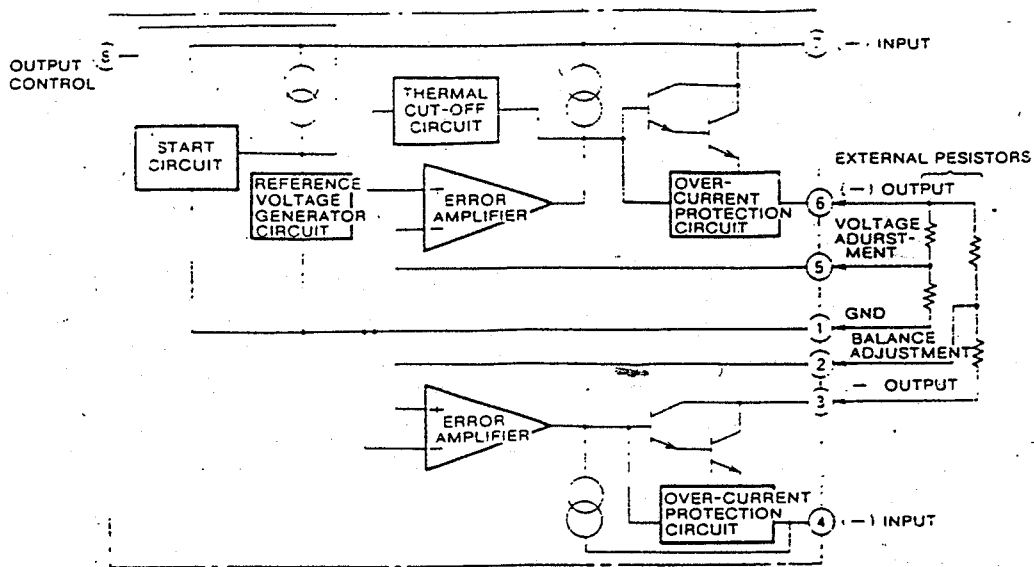

AN7806

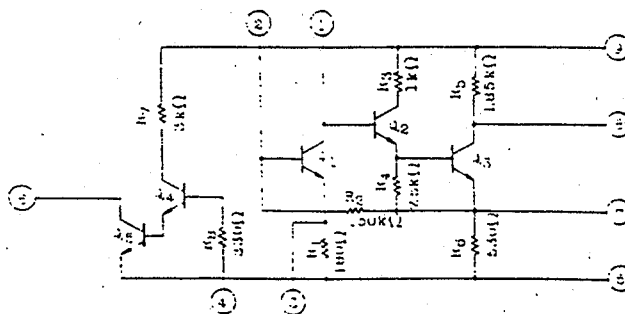


EXPLODED VIEW

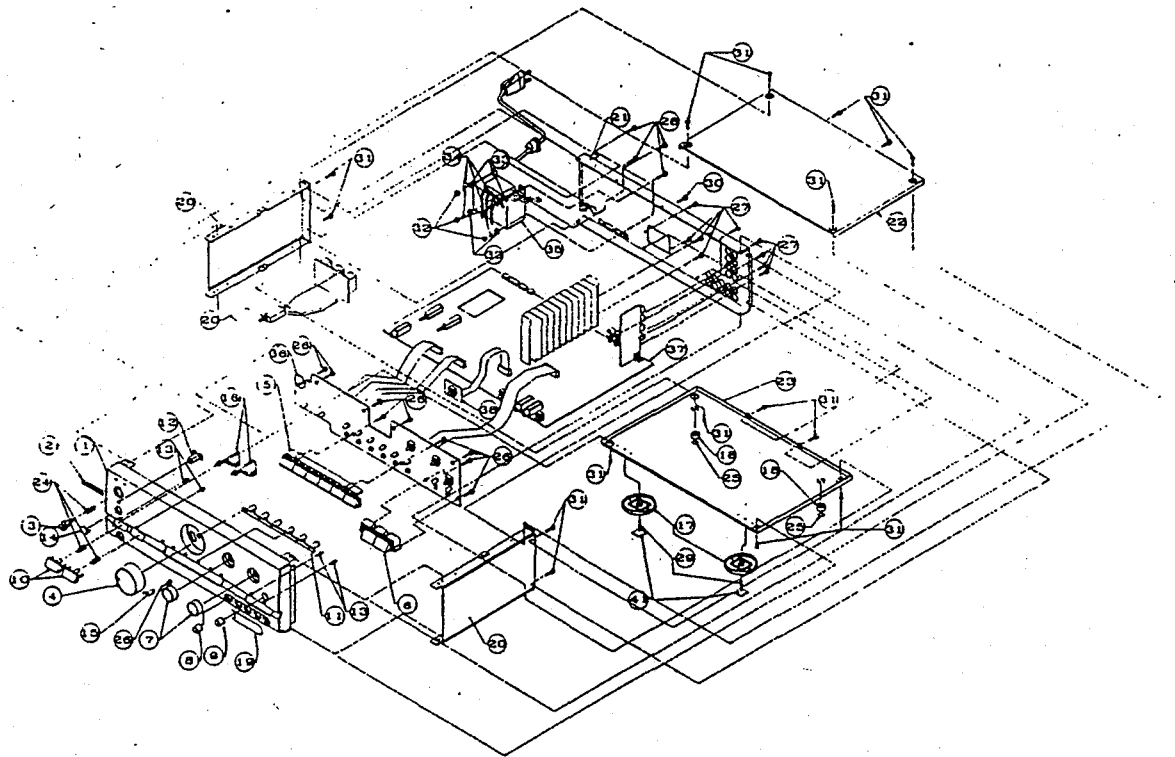


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	7035101103	AMP PANEL (V-155) (NO KARA)	1	21	8335110106	BACK COVER (AMP) (NO AC OUTLET)	1
2		BRANDNAME	1	22	6132110000	TOP COVER (AMP)	1
3	7335101000	AMP POWER KNOB	1	23	6235110000	BOTTOM COVER (AMP)	1
4	7335103000	AMP VOL KNOB	1	24	5235101000	AMP SPK SPRING (POWER, SPK2)	3
5	7335104103	AMP FUNCTION KNOB	1	25		RUBBER FOOT 12 X 12 X 2.0MM	4
6	7335105106	COMMON KNOB (AMP)	1			SCREW	
7	7335106000	AMP BASS & TREBLE KNOB	2	26		PA 2.6 X 8 (M3) (2683A)	11
8	7335107000	AMP MIC KNOB	1	27		PA 3 X 8	7
9	7335108000	AMP BAL & CASS REC KNOB	1	28	5601351001	BM 3.5 X 10 (FOR TRANSFORMER)	4
10	7335110000	AMP PUSH-KNOB (SPK)	2	29		BTB 3 X 4.5	2
11	7435101000	AMP FUNCTION KNOB LENS (TRANSPARENT)	1	30	5602300602	BTB 3 X 6 8C	8
12	7435102000	AMP STANDBY LED LENS (TRANSPARENT)	1	31		BTB 3 X 6 (BLACK) (FOR CHASSIS)	16
13	7435103000	AMP SPK DISPLAY KNOB LED LENS (TRANSPARENT)	4	32	5710350253	NUT : M3.5 (FOR TRANSFORMER)	4
14	7435104000	AMP SENSOR LENS (PURPLE)	1	33	5432109000	METAL WASHER D3.5 X 8 X 1MM	4
15	7435105000	AMP VOL KNOB LENS (TRANSPARENT)	1	34	5432106000	SPRING WASHER 3.5	4
16	7935102000	AMP SPK SW-STICK	2	35		TRANSFORMER	1
17	7935102201	FRONT FOOT (GOLDEN)	2	36		CONTROL PCB	1
18	7935105000	REAR FOOT	2	37		MAIN PCB	1
19	7635101102	MIC CUTSHEET (DIGITAL VOLUME CONTROL)	1	38		VOL PCB	1
20	6435110000	SIDE COVER (DECK & AMP)	2				

WIRING DIAGRAM

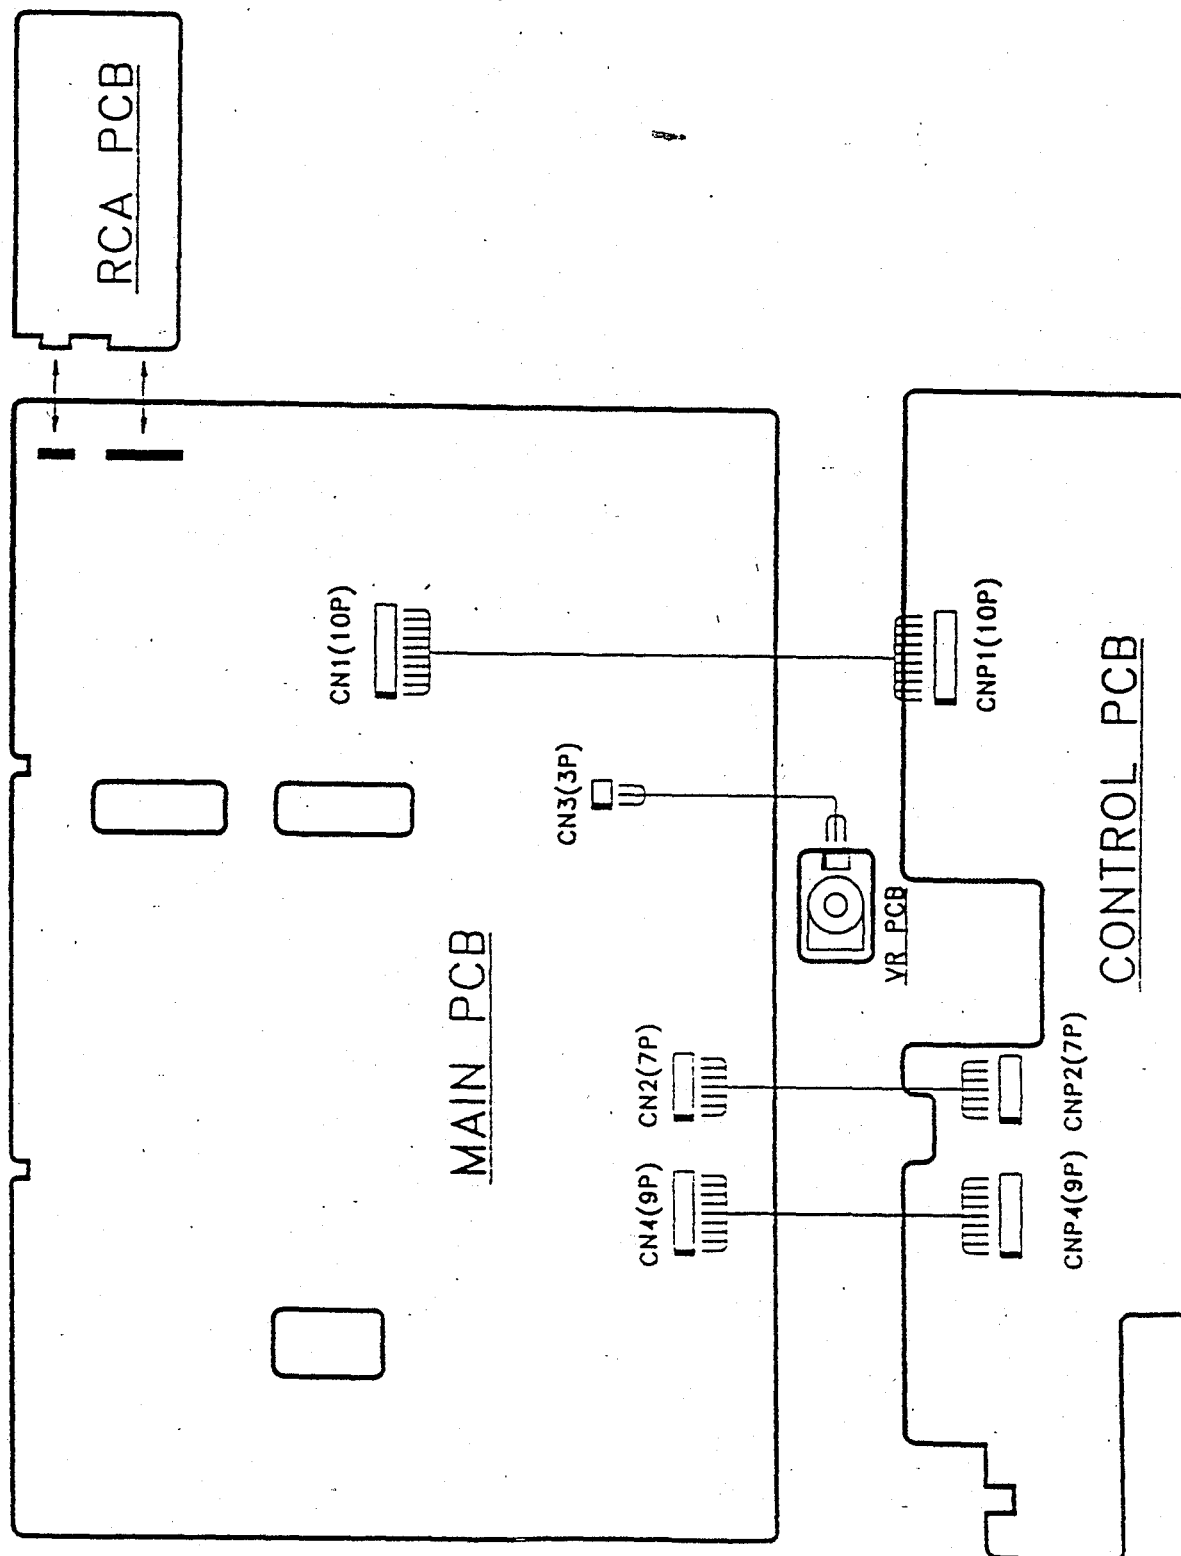


SERVICE MANUAL

COMPACT DISC PLAYER

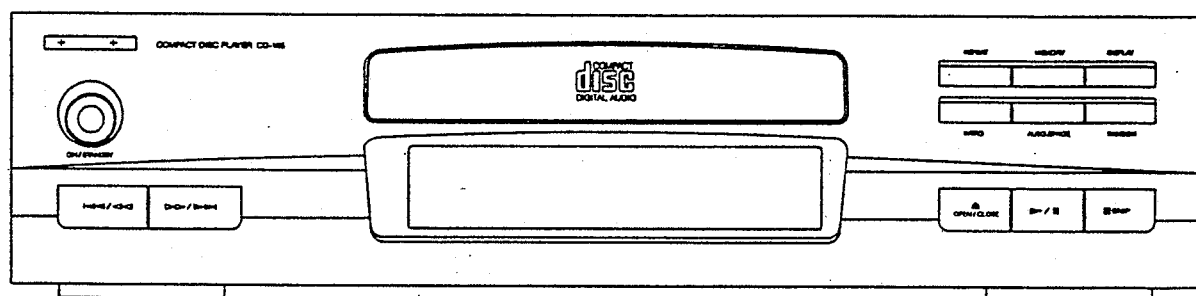


CD - 155

CONTROL FUNCTIONS

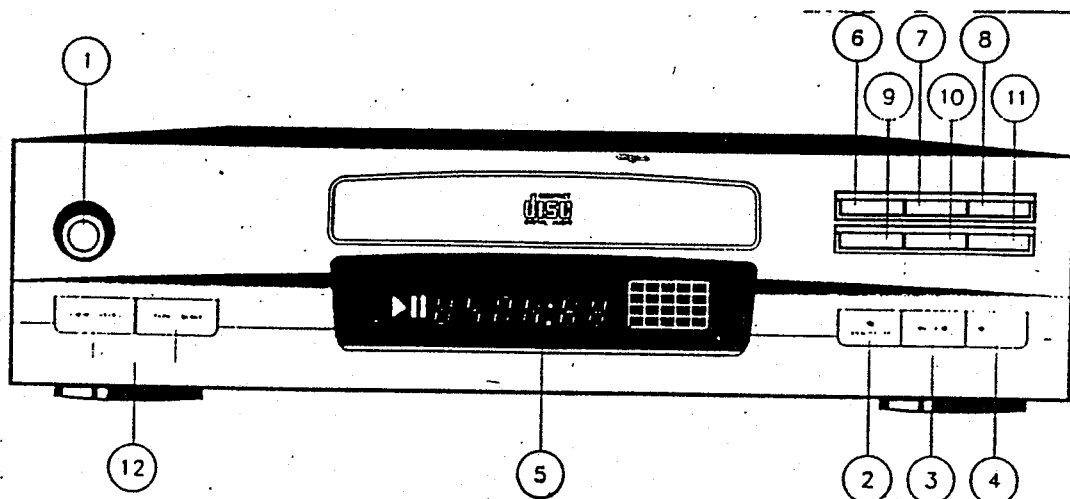

1. ON / STANDBY SWITCH
2. OPEN / CLOSE
3. PLAY / PAUSE
4. STOP
5. MUSICAL CALENDER
6. PEPEAT

7. MEMORY
8. DISPLAY
9. INTRO
10. AUTO SPACE
11. RANDOM
12. FastFWD, FastBWD

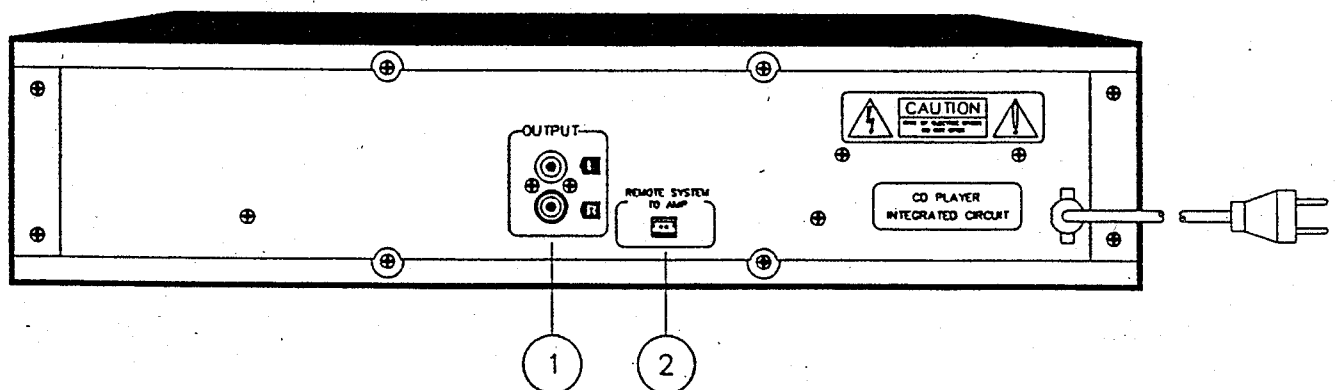

1. OUTPUT L / R TERMINAL

2. CD TO AMP REMOTE SYSTEM CONNECTOR



SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields etc.,



MEASUREMENTS AND ADJUSTMENTS

TRACKING BALANCE ADJUSTMENT


1. Position the baseline trace of the oscilloscope to the center horizontal graticule line oscilloscope setting:
 VOLT 1V / Div
 SWEEP 2m / sec
 INPUT COUPLING DC
2. Turn on the power switch and play the track 1 of test disc.
3. Connect the oscilloscope to TP3 (See Fig 3-1) and TP4 (Gnd)
4. Press the skip FF or REV using oscilloscope, adjust the VR1 so that A=B (See Fig 3-2)

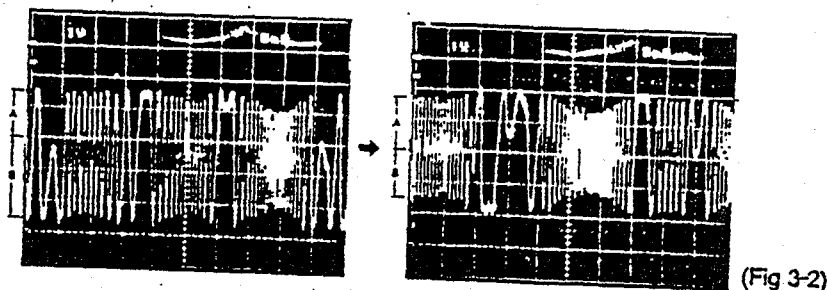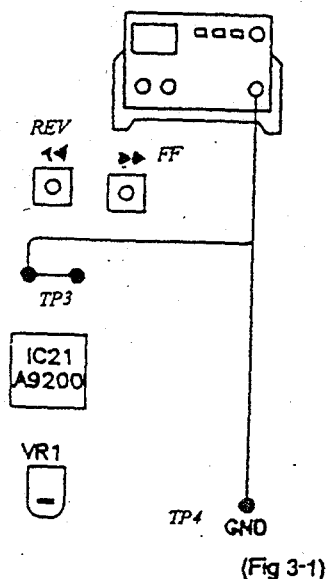

5. When the display : press the play button again and repeat procedure (4).

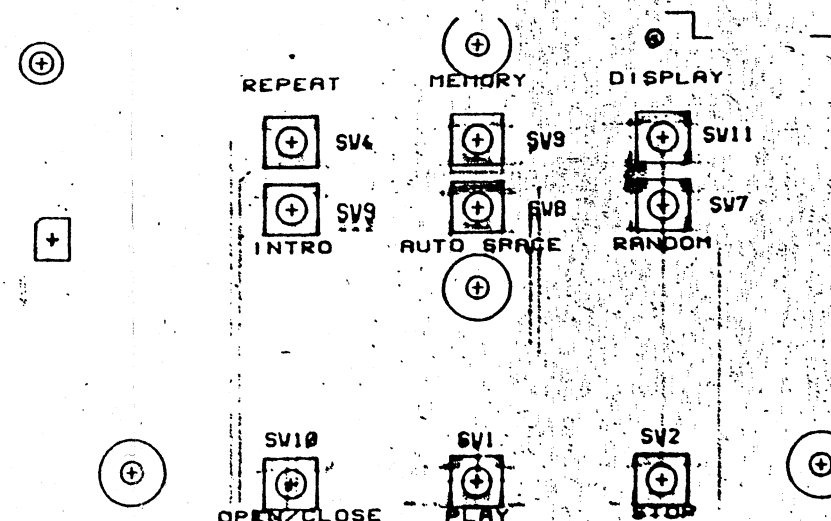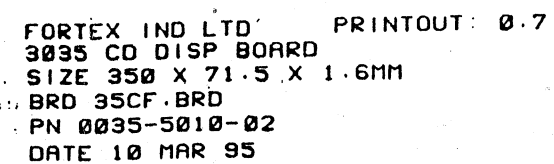


CONTROL PCB

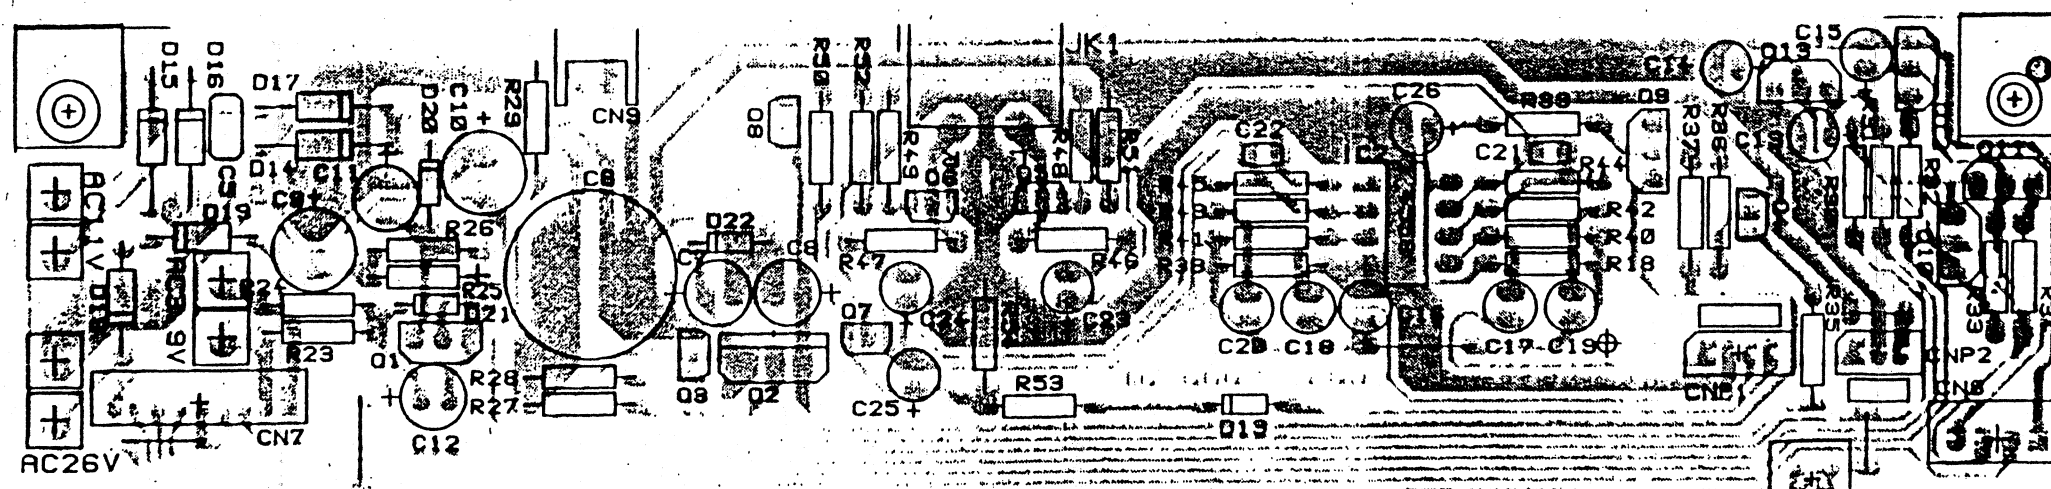


POWER PCB

SCHEMA' 2 DIAGRAM

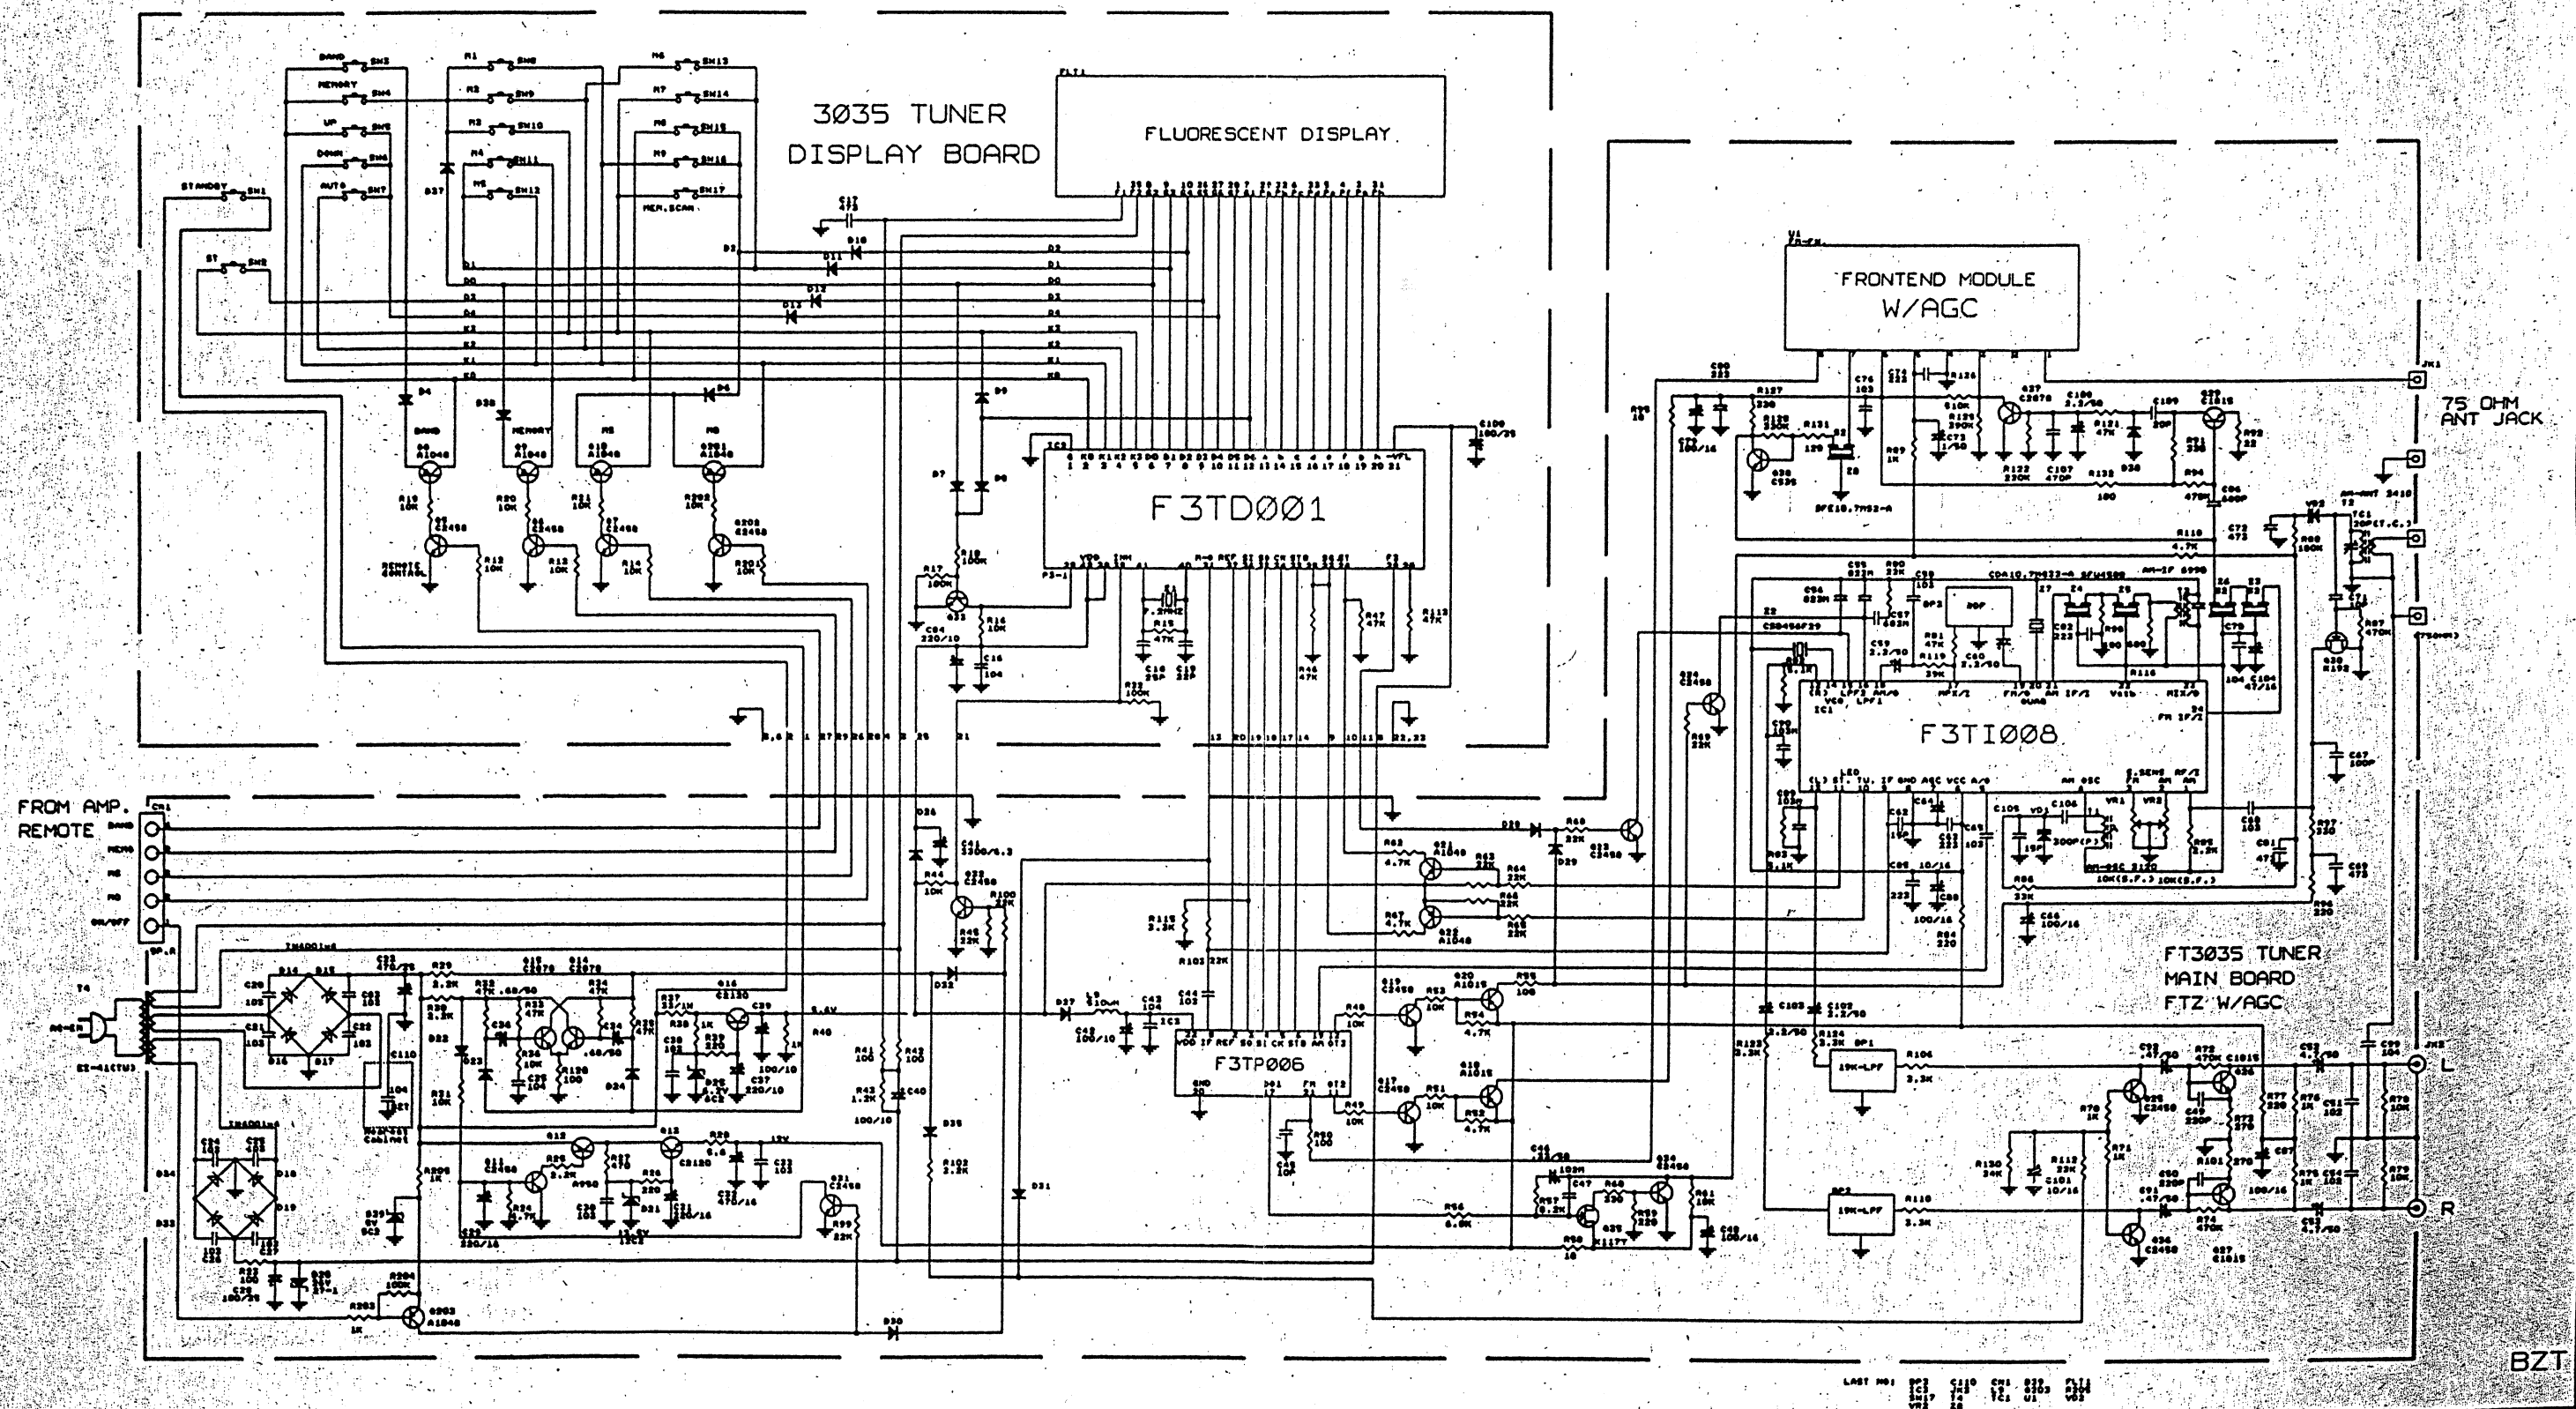


BZT

WIRING DIAGRAM

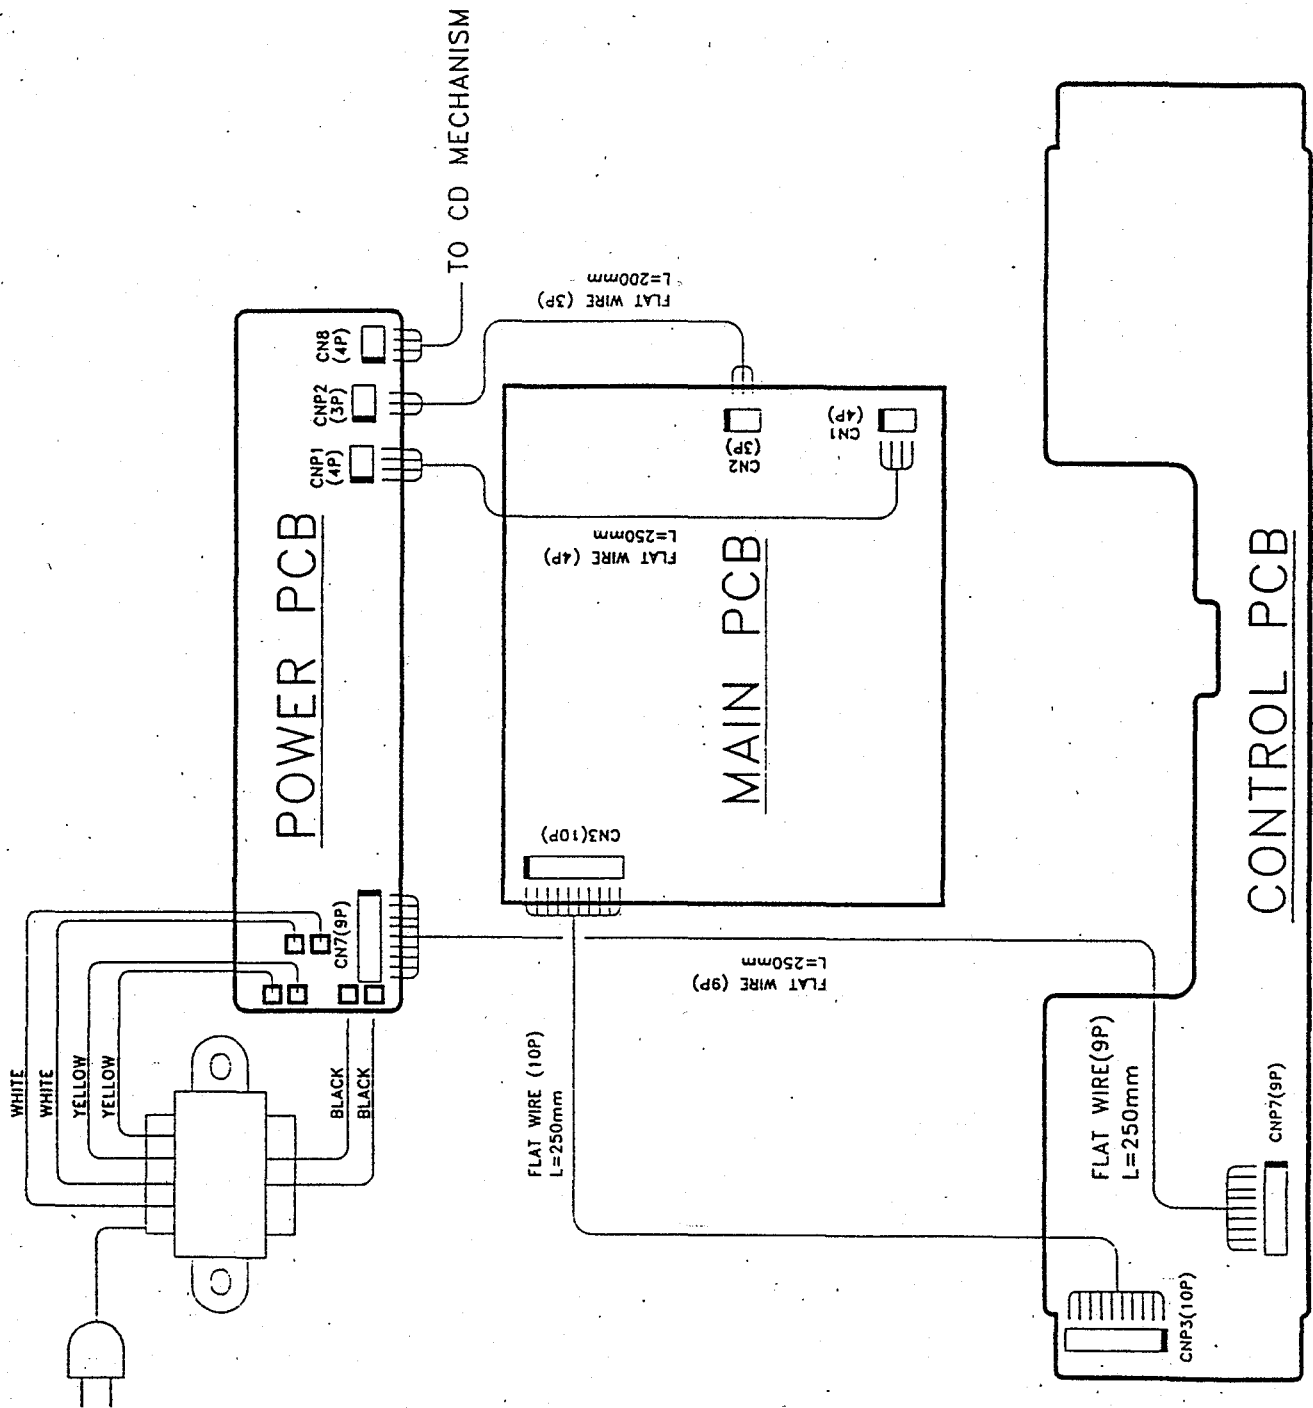


EXPLODED VIEW

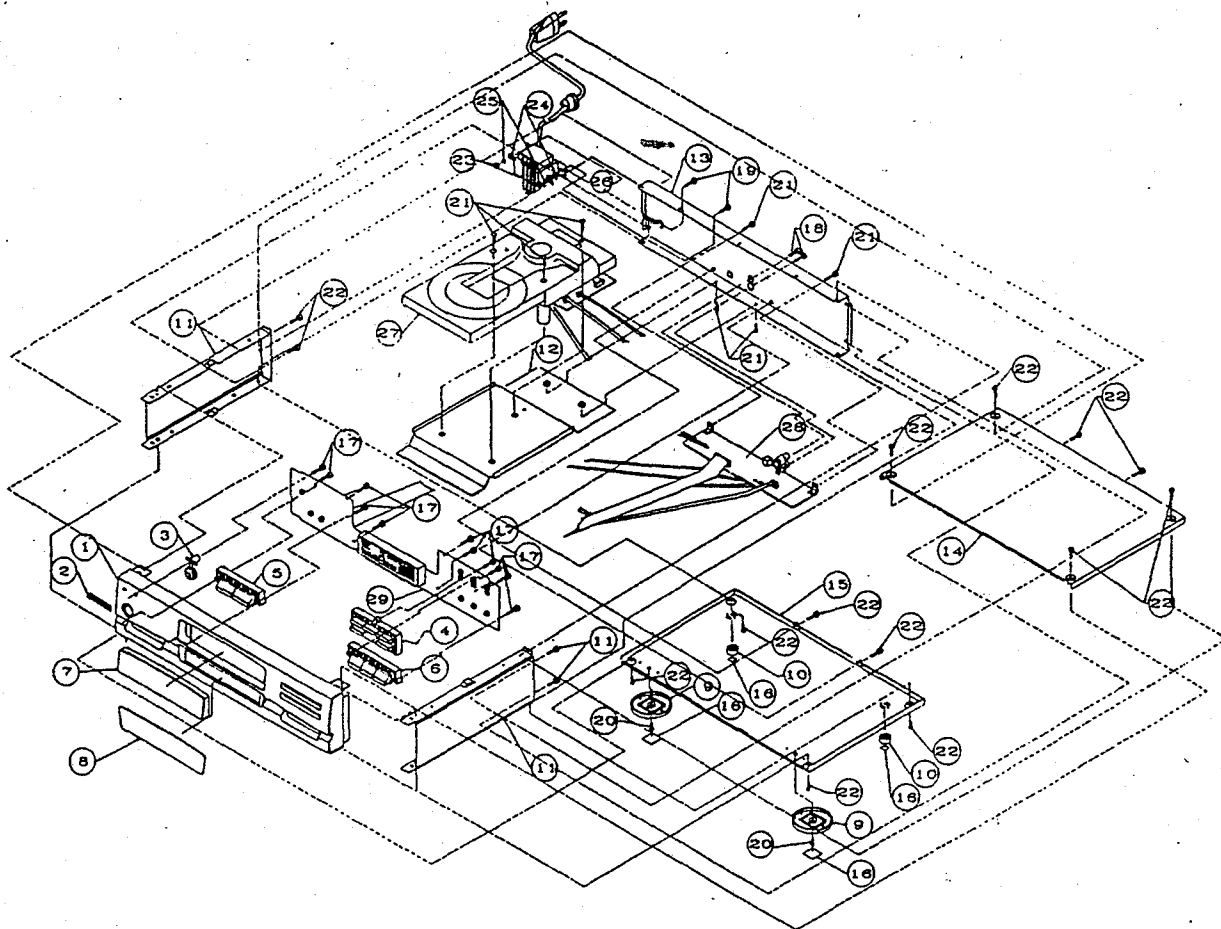


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	7035501103	CD PANEL (CD-155)	1	16		RUBBER FOOT 12 X 12 X 2.0MM	4
2		BRANDNAME	1			SCREW	
3	7335501000	CD POWER KNOB	1	17		PA 2.6 X 8 (M3) (2683A)	11
4	7335502000	CD FUNCTION KNOB	1	18		PA 3 X 8	2
5	7335503102	CD KNOB (FF/REW)	1	19	5601300801	BM 3 X 8 (FOR TRANSFORMER)	2
6	7335504102	CD PLAY KNOB	1	20		BTB 3 X 4.5	2
7	7235501201	CD DOOR COVER	1	21	5602300602	BTB 3 X 6 BC	9
8	7435501401	CD LENS (PURPLE)	1	22		BTB 3 X 6 (BLACK) (FOR CHASSIS)	16
9	7935102201	FRONT FOOT (GOLDEN)	2	23	5701300253	NUT : M3 (FOR TRANSFORMER)	2
10	7935105000	REAR FOOT	2	24	5432101000	METAL WASHER D3 X 8 X 1MM (FOR TRANSFORMER)	2
11	6432310000	SIDE COVER (CD,EQ & TUNER)	2	25	5432105000	SPRING WASHER O 3 (FOR TRANSFORMER)	2
12	6535510000	CD SUPPORT BRACKET	1	26		TRANSFORMER	1
13	6325510106	BACK COVER (CD)	1	27		CD MECHANISM	1
14	6132210000	TOP COVER (CASS,TUNER,EQ & CD)	1	28		POWER PCB	1
15	6235210000	BOTTOM COVER (CASS,TUNER,CD)	1	29		CONTROL PCB	1

SEMICONDUCTOR INSTRUCTION

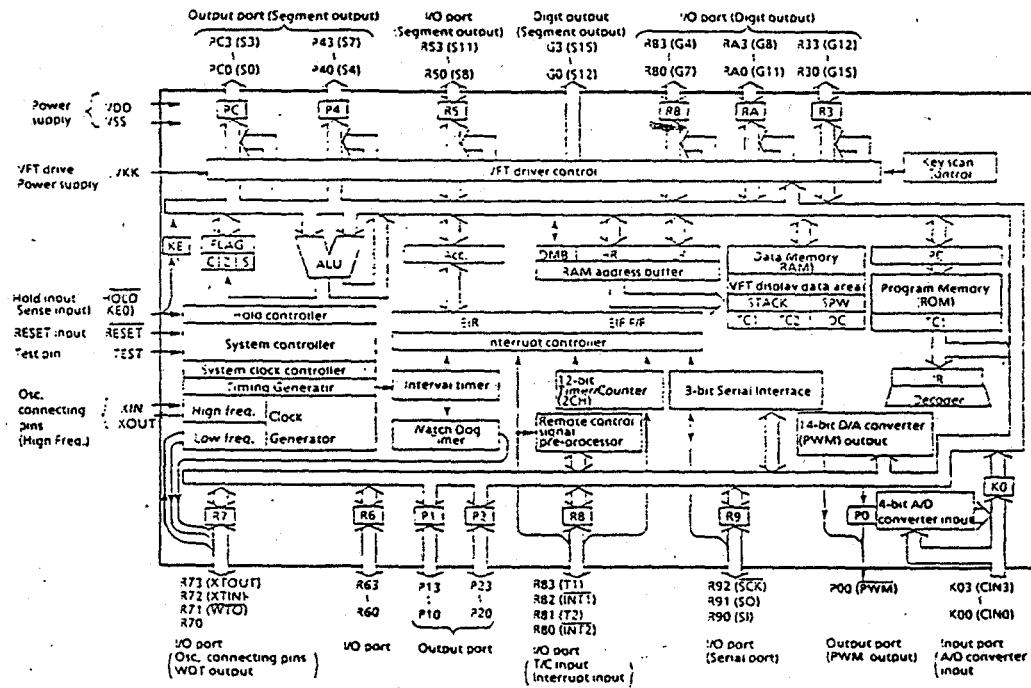


TMP 47C870

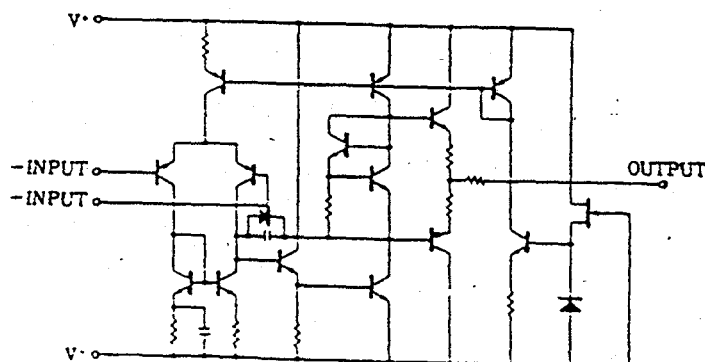

4558


SERVICE MANUAL

DIGITAL PLL QUARTZ TUNER

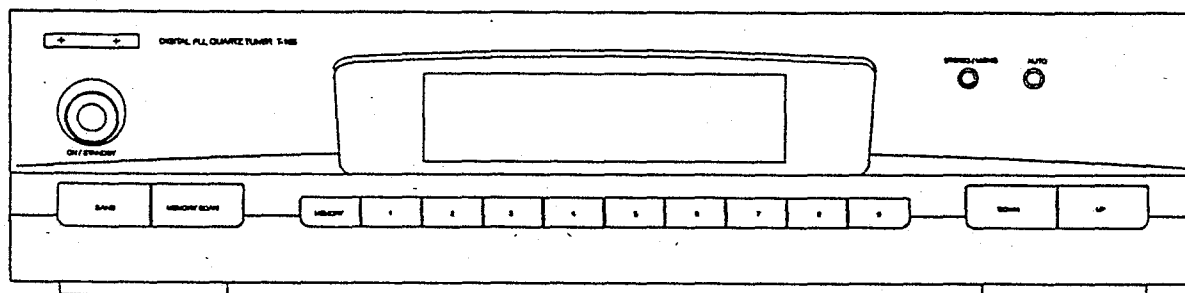


T - 155

CONTROL FUNCTIONS

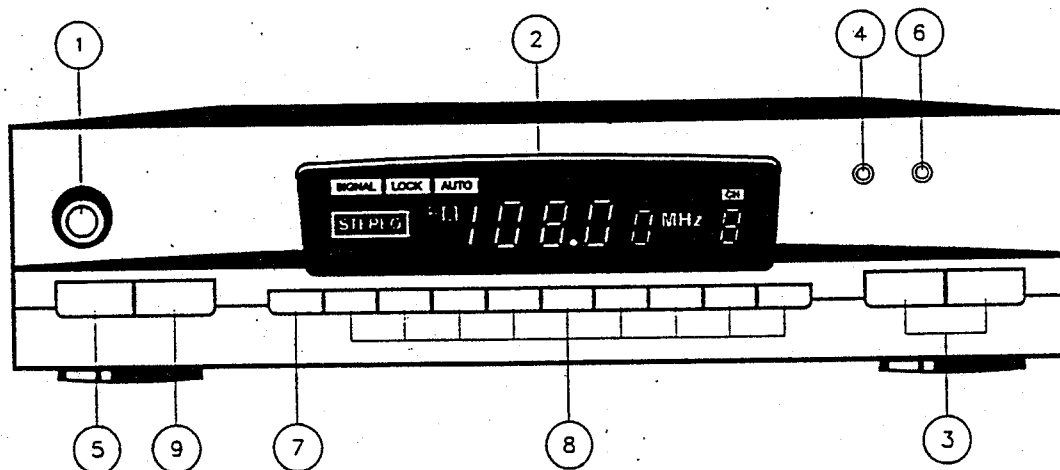

- | | |
|-------------------------------------|----------------------------|
| 1. ON / STANDBY SWITCH | 6. AUTO SEARCH SWITCH |
| 2. COLOR DIGIAL FLUORESCENT DISPLAY | 7. MEMORY SWITCH |
| 3. TUNING SWITCH (UP OR DOWN) | 8. PRESET STATION SWITCHES |
| 4. FM STEREO / MONO SWITCH | 9. MEMORY SCAN SWITCH |
| 5. BAND SWITCH | |

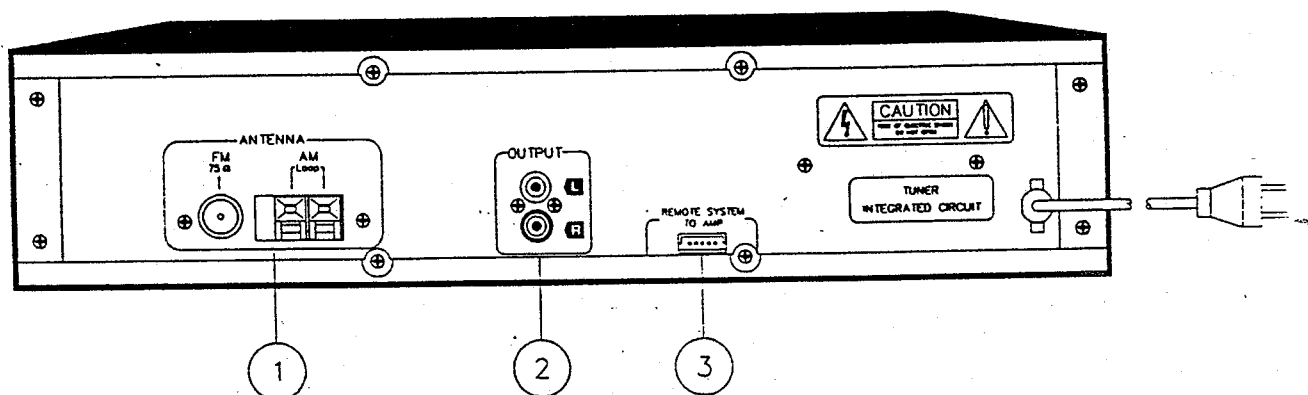

- | | |
|---|---|
| 1. FM 75 Ω ANTENNA AMPLIFIER
AM LOOP ANTENNA AMPLIFIER | 3. TUNER TO AMP REMOTE SYSTEM CONNECTOR |
| 2. OUTPUT L / R TERMINAL | |

SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields etc..

MEASUREMENTS AND ADJUSTMENTS


MW / FM

Control positions and equipment used

- MW and FM signal generator (MW and FM-SG).
- Stereo modulator.
- Distortion analyser.
- Oscilloscope.
- AF Oscillator.
- AC and DC electronic voltmeter (EVM)
- Frequency counter.

TUNING FREQUENCY RANGE ADJUSTMENT

1. Test equipment connection is shown in figure 1.
2. Set the unit to the desired band (FM, MW)
3. Place the radio frequency to 108MHz for FM, 522KHz for MW.
4. Adjust L7 for FM, T1 for MW so that the DC voltage is 8.0V for FM, 1.2V for MW.

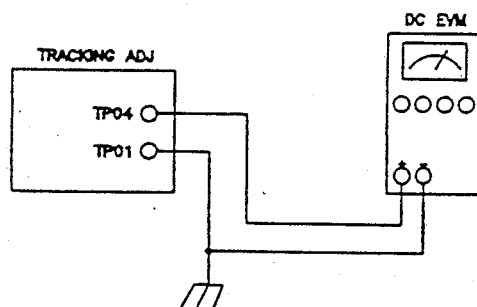

(FIG.1)


MW RF ADJUSTMENT

1. Test equipment connection is shown in figure 2.
2. Set the unit to "MW" position.
3. Place the radio frequency display and signal generator setting to 612 KHz.
4. Adjust T2 for MW for maximum output.
5. Place the radio frequency display and signal generator setting to 1503KHz.
6. Adjust TC1 for maximum output.
7. Repeat steps 3-6.
8. Adjust T3 for MW for maximum out put.

Note: Antenna input level must be as low as possible being free from AGC.

MW SIGNAL GENERATOR CONDITION

Modulation 30%
Modulation frequency 1KHz

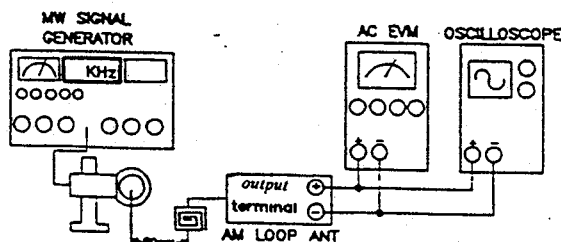

(FIG.2)


FM RF ADJUSTMENT

1. Test equipment connection is shown in figure 3.
2. Place unit into "FM" position.
3. Place the radio frequency display and signal generator setting to 100.1MHz, add weak input so that noise is included in the output waveform.
4. Adjust L2, L4, L5, L6 for maximum output.

Note: As three output reading will be present, adjustments must be made at center frequency.


FM SIGNAL GENERATOR CONDITION

Modulation 100%
 Modulation frequency 1KHz
 Output level 66dB

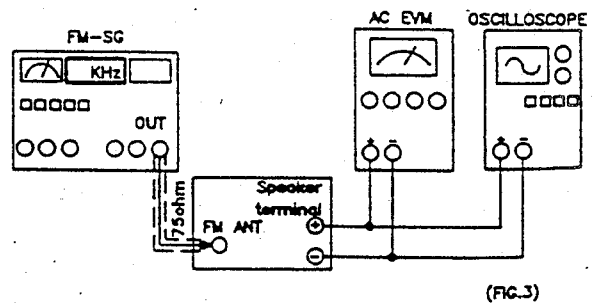


(FIG.3)

PRINTED CIRCUIT BOARDS DIAGRAM

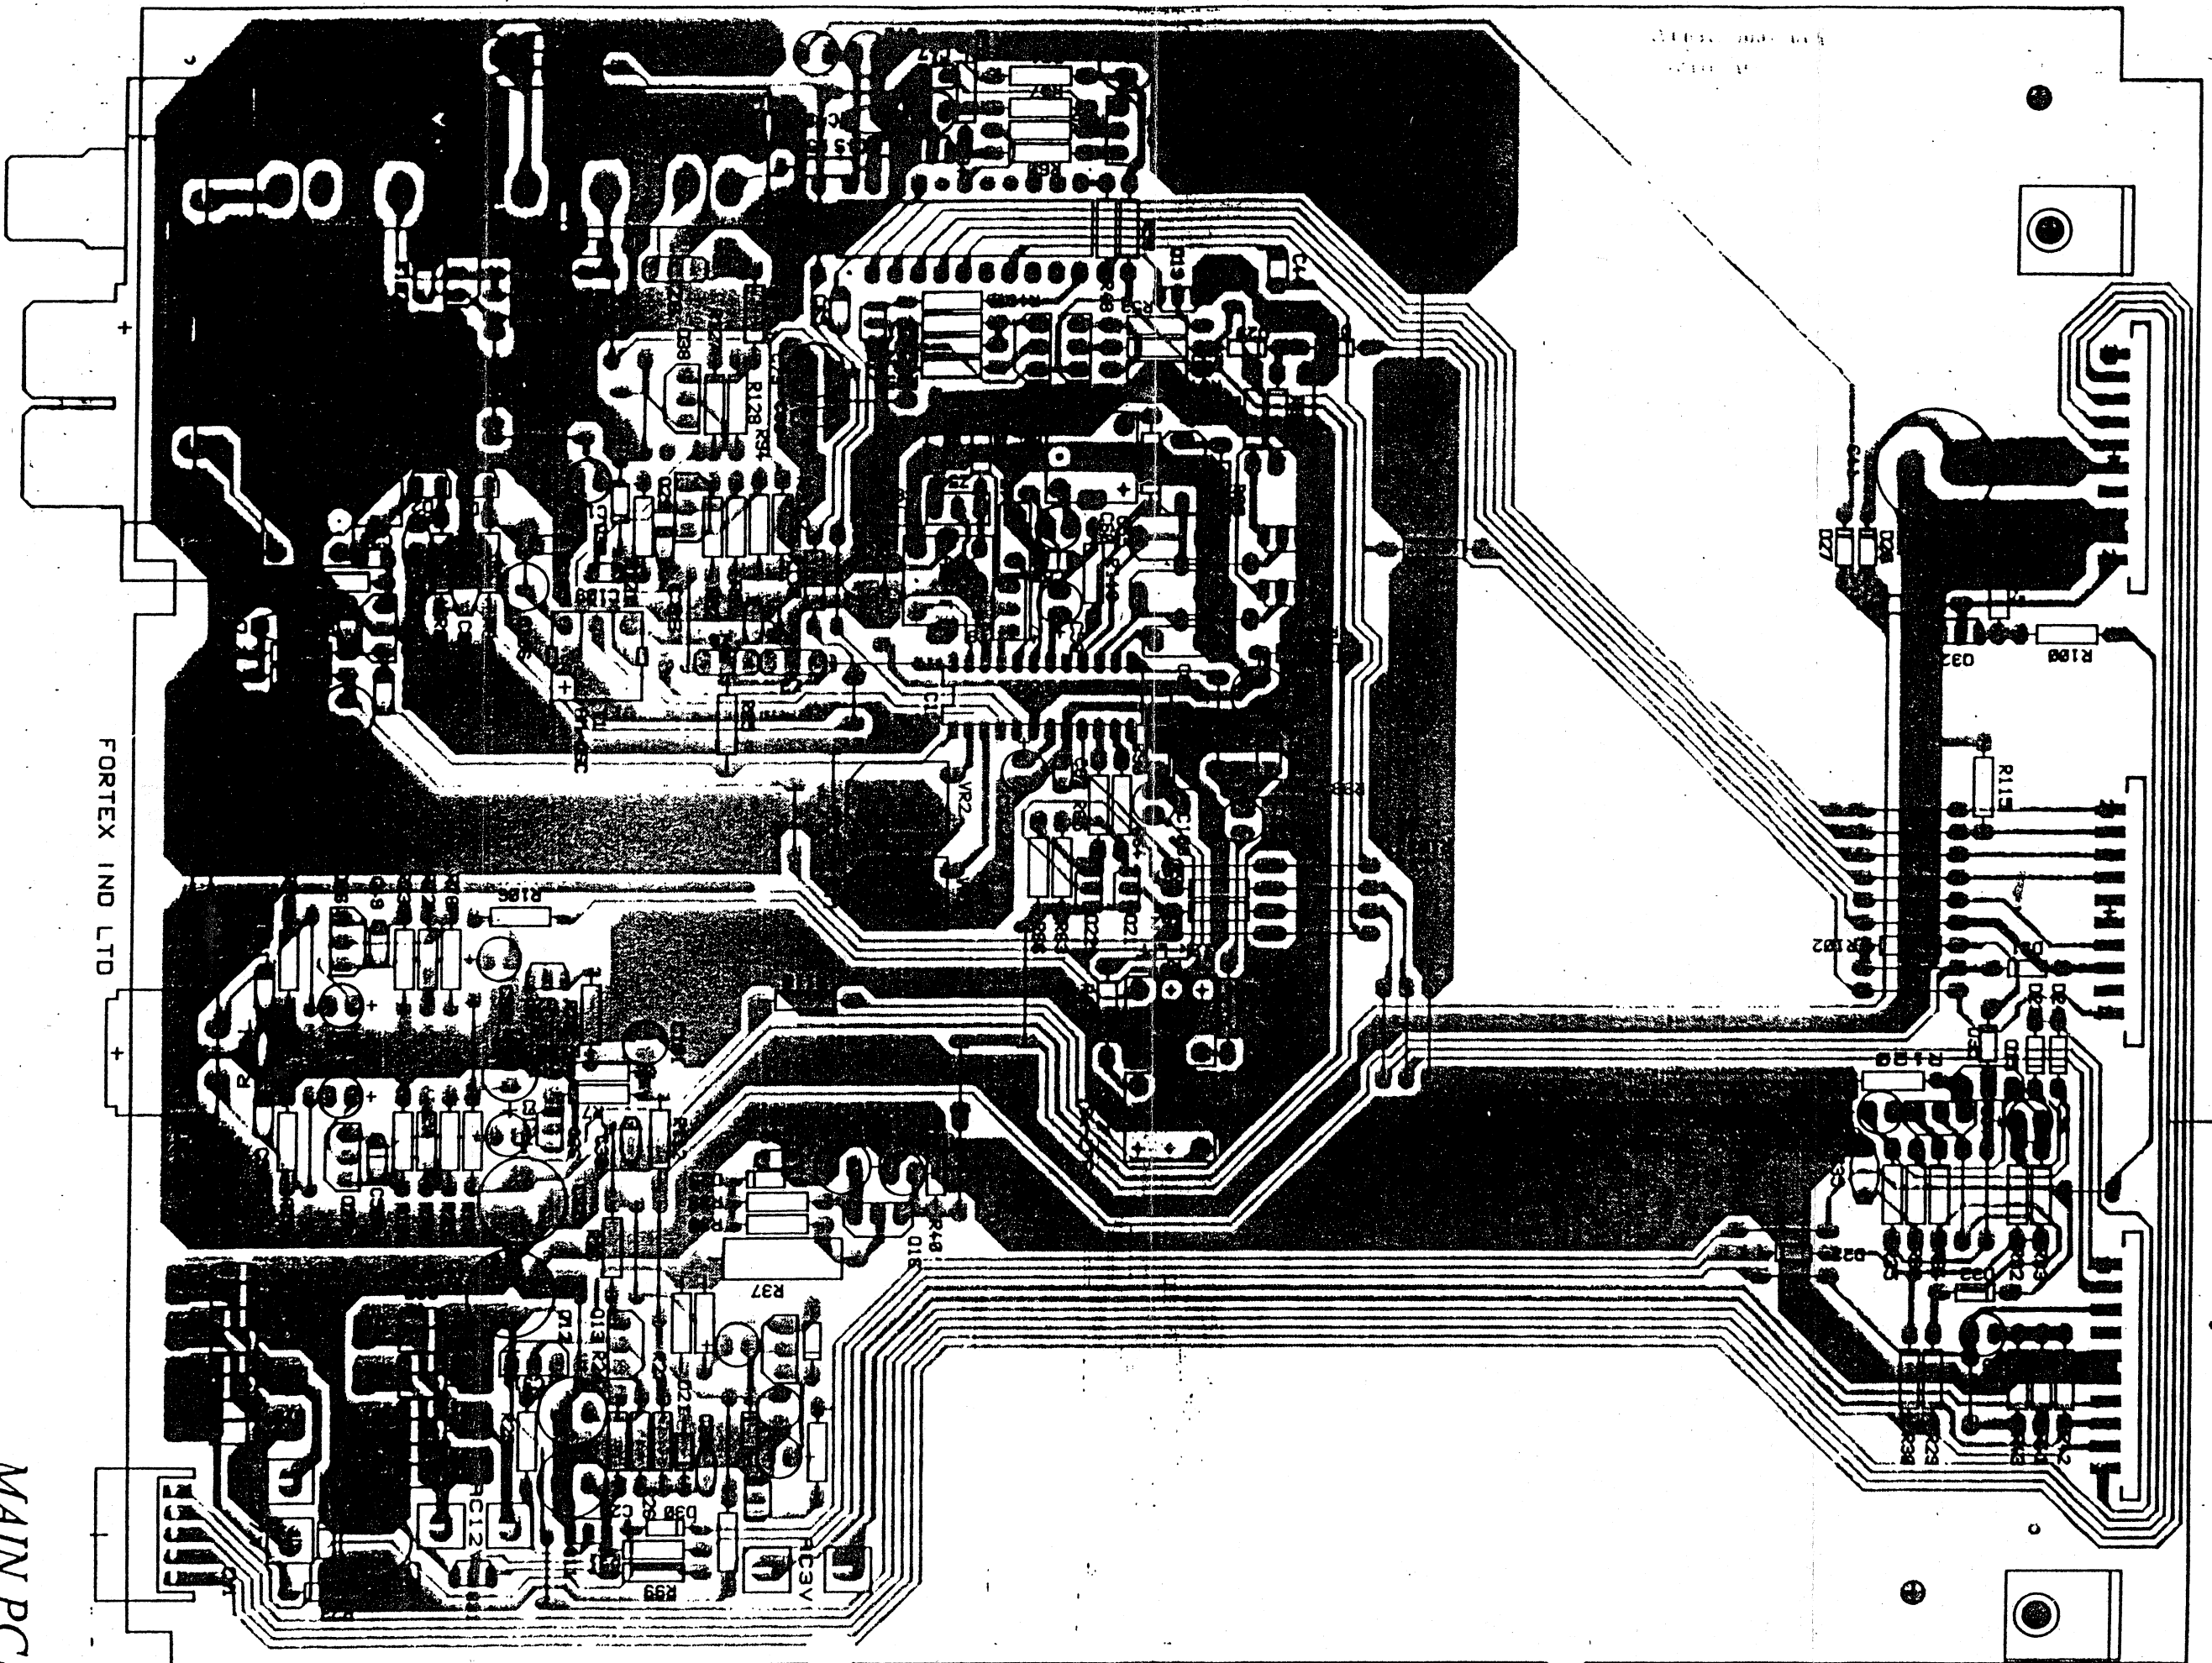


SCHEMATIC DIAGRAM

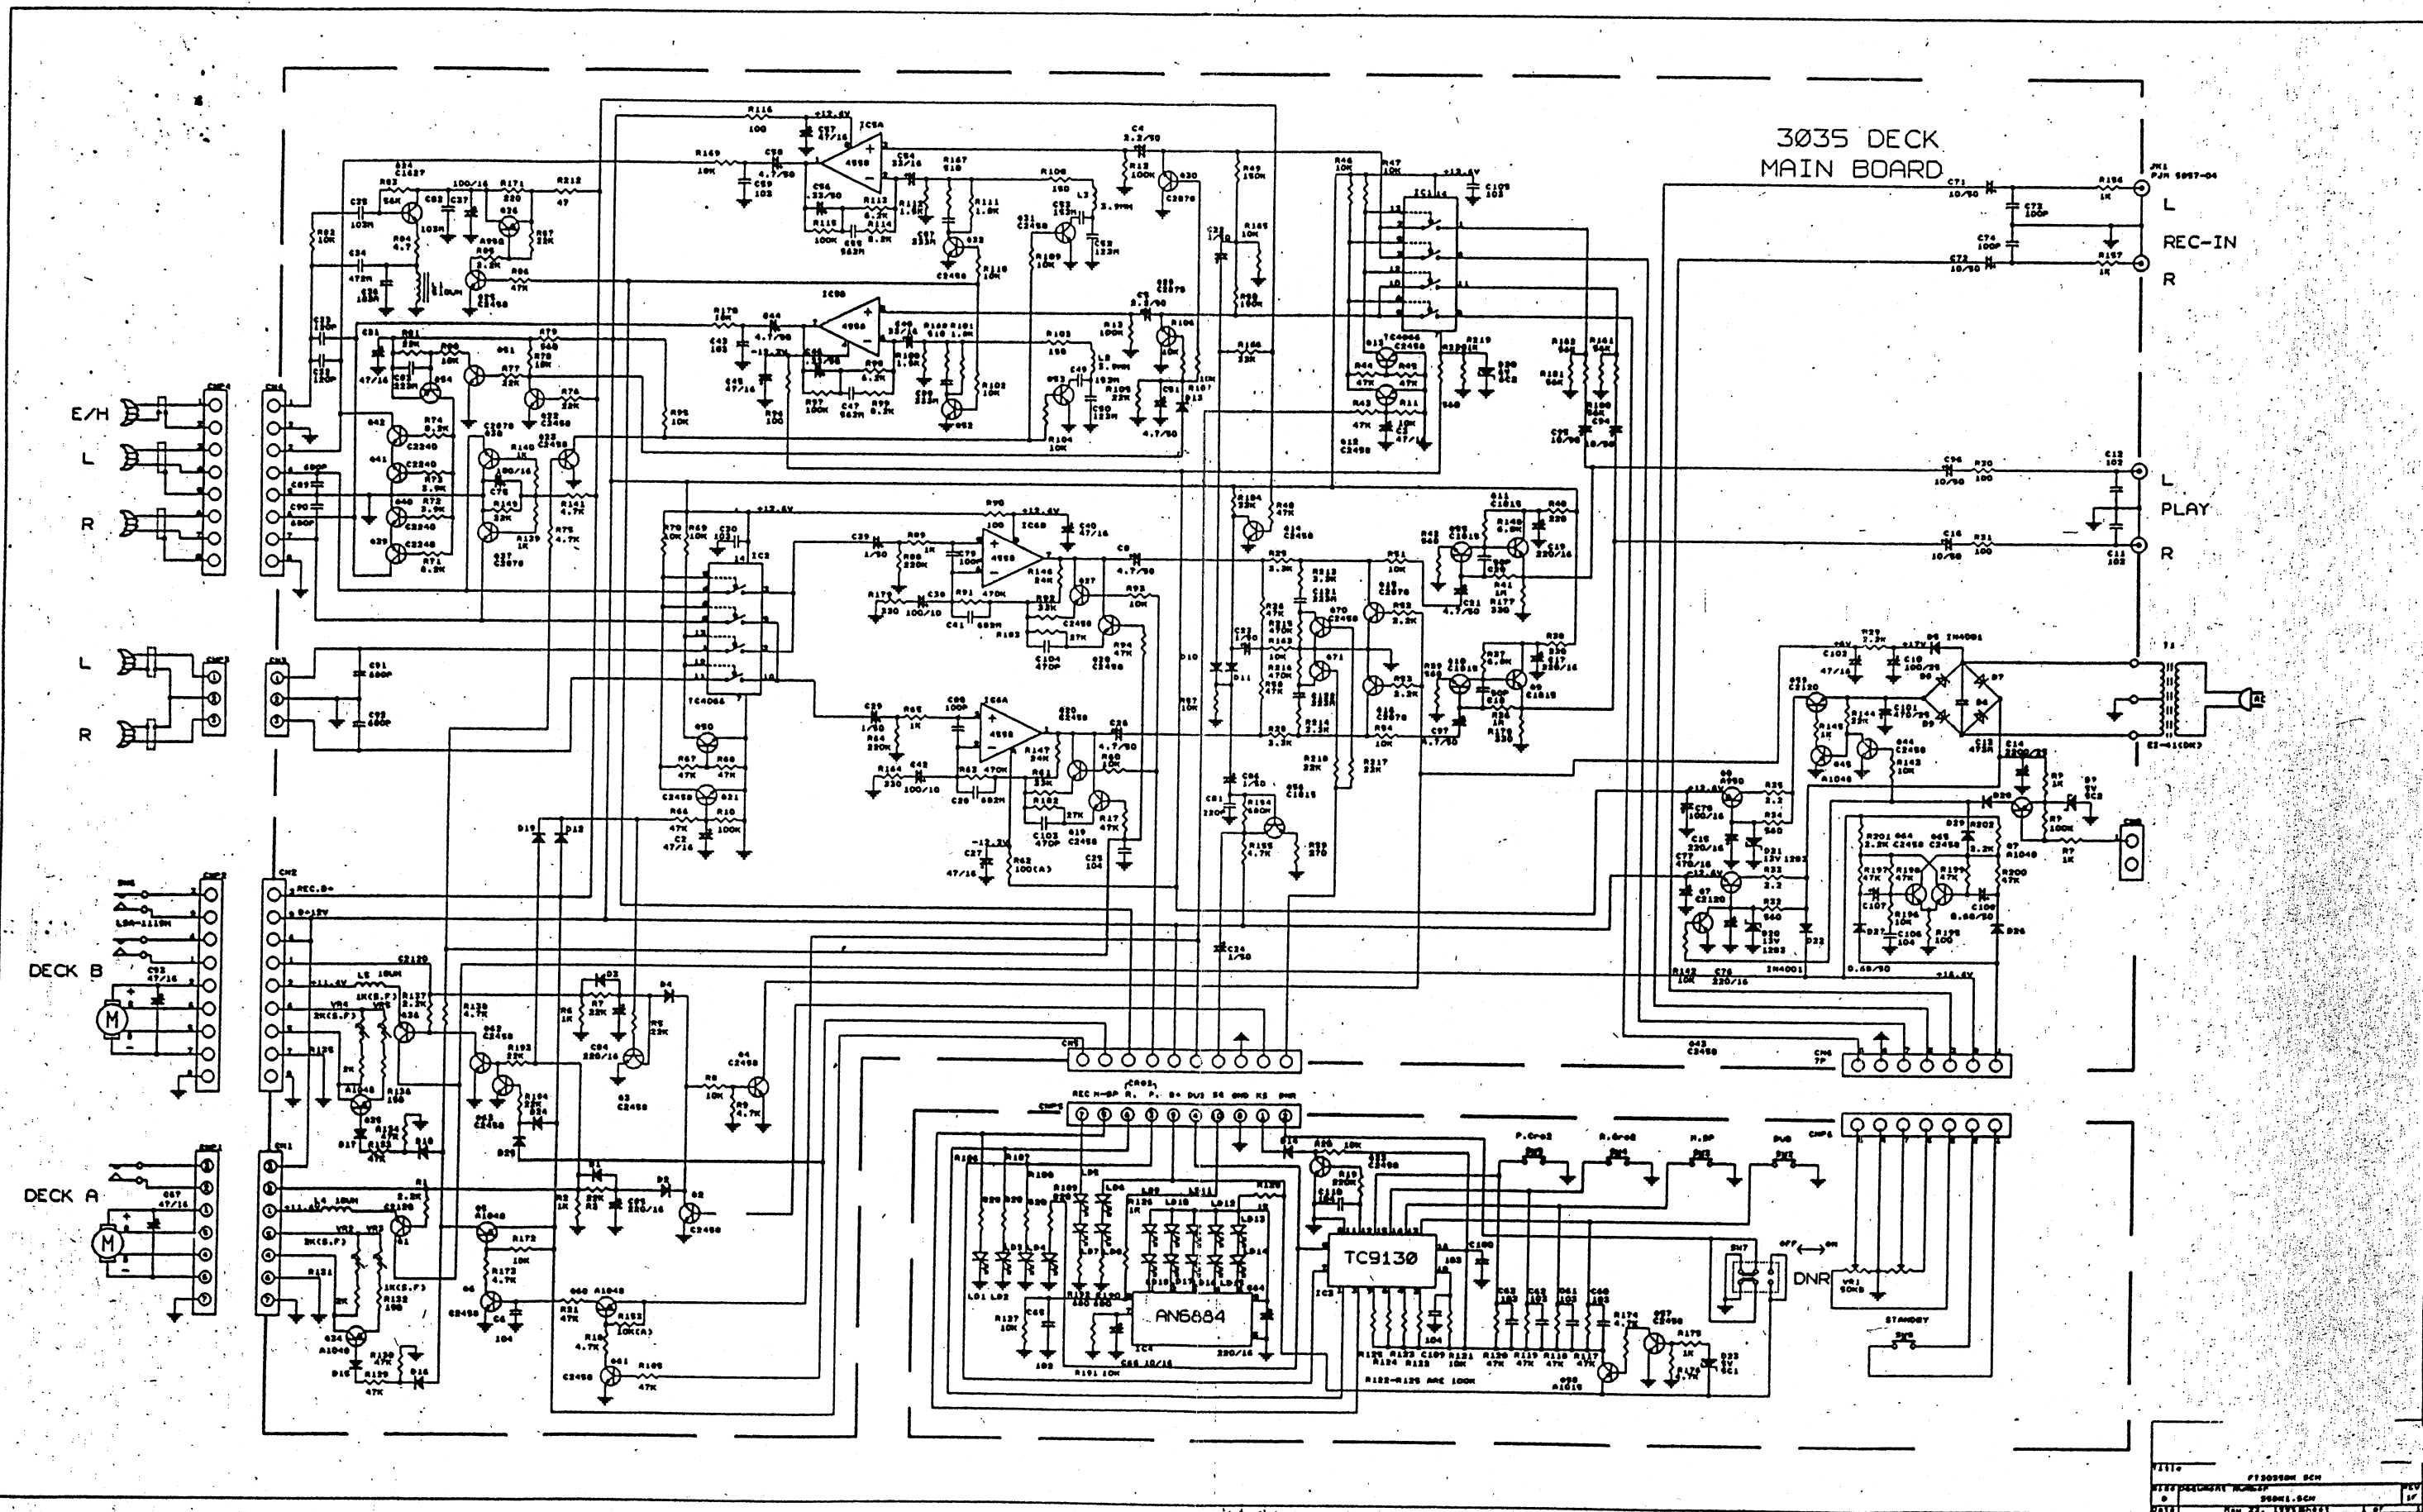


1110
 1111
 1112
 1113
 1114
 1115
 1116
 1117
 1118
 1119
 1120
 1121
 1122
 1123
 1124
 1125
 1126
 1127
 1128
 1129
 1130
 1131
 1132
 1133
 1134
 1135
 1136
 1137
 1138
 1139
 1140
 1141
 1142
 1143
 1144
 1145
 1146
 1147
 1148
 1149
 1150
 1151
 1152
 1153
 1154
 1155
 1156
 1157
 1158
 1159
 1160
 1161
 1162
 1163
 1164
 1165
 1166
 1167
 1168
 1169
 1170
 1171
 1172
 1173
 1174
 1175
 1176
 1177
 1178
 1179
 1180
 1181
 1182
 1183
 1184
 1185
 1186
 1187
 1188
 1189
 1190
 1191
 1192
 1193
 1194
 1195
 1196
 1197
 1198
 1199
 1200
 1201
 1202
 1203
 1204
 1205
 1206
 1207
 1208
 1209
 1210
 1211
 1212
 1213
 1214
 1215
 1216
 1217
 1218
 1219
 1220
 1221
 1222
 1223
 1224
 1225
 1226
 1227
 1228
 1229
 1230
 1231
 1232
 1233
 1234
 1235
 1236
 1237
 1238
 1239
 1240
 1241
 1242
 1243
 1244
 1245
 1246
 1247
 1248
 1249
 1250
 1251
 1252
 1253
 1254
 1255
 1256
 1257
 1258
 1259
 1260
 1261
 1262
 1263
 1264
 1265
 1266
 1267
 1268
 1269
 1270
 1271
 1272
 1273
 1274
 1275
 1276
 1277
 1278
 1279
 1280
 1281
 1282
 1283
 1284
 1285
 1286
 1287
 1288
 1289
 1290
 1291
 1292
 1293
 1294
 1295
 1296
 1297
 1298
 1299
 1300
 1301
 1302
 1303
 1304
 1305
 1306
 1307
 1308
 1309
 1310
 1311
 1312
 1313
 1314
 1315
 1316
 1317
 1318
 1319
 1320
 1321
 1322
 1323
 1324
 1325
 1326
 1327
 1328
 1329
 1330
 1331
 1332
 1333
 1334
 1335
 1336
 1337
 1338
 1339
 1340
 1341
 1342
 1343
 1344
 1345
 1346
 1347
 1348
 1349
 1350
 1351
 1352
 1353
 1354
 1355
 1356
 1357
 1358
 1359
 1360
 1361
 1362
 1363
 1364
 1365
 1366
 1367
 1368
 1369
 1370
 1371
 1372
 1373
 1374
 1375
 1376
 1377
 1378
 1379
 1380
 1381
 1382
 1383
 1384
 1385
 1386
 1387
 1388
 1389
 1390
 1391
 1392
 1393
 1394
 1395
 1396
 1397
 1398
 1399
 1400
 1401
 1402
 1403
 1404
 1405
 1406
 1407
 1408
 1409
 1410
 1411
 1412
 1413
 1414
 1415
 1416
 1417
 1418
 1419
 1420
 1421
 1422
 1423
 1424
 1425
 1426
 1427
 1428
 1429
 1430
 1431
 1432
 1433
 1434
 1435
 1436
 1437
 1438
 1439
 1440
 1441
 1442
 1443
 1444
 1445
 1446
 1447
 1448
 1449
 1450
 1451
 1452
 1453
 1454
 1455
 1456
 1457
 1458
 1459
 1460
 1461
 1462
 1463
 1464
 1465
 1466
 1467
 1468
 1469
 1470
 1471
 1472
 1473
 1474
 1475
 1476
 1477
 1478
 1479
 1480
 1481
 1482
 1483
 1484
 1485
 1486
 1487
 1488
 1489
 1490
 1491
 1492
 1493
 1494
 1495
 1496
 1497
 1498
 1499
 1500
 1501
 1502
 1503
 1504
 1505
 1506
 1507
 1508
 1509
 1510
 1511
 1512
 1513
 1514
 1515
 1516
 1517
 1518
 1519
 1520
 1521
 1522
 1523
 1524
 1525
 1526
 1527
 1528
 1529
 1530
 1531
 1532
 1533
 1534
 1535
 1536
 1537
 1538
 1539
 1540
 1541
 1542
 1543
 1544
 1545
 1546
 1547
 1548
 1549
 1550
 1551
 1552
 1553
 1554
 1555
 1556
 1557
 1558
 1559
 1560
 1561
 1562
 1563
 1564
 1565
 1566
 1567
 1568
 1569
 1570
 1571
 1572
 1573
 1574
 1575
 1576
 1577
 1578
 1579
 1580
 1581
 1582
 1583
 1584
 1585
 1586
 1587
 1588
 1589
 1590
 1591
 1592
 1593
 1594
 1595
 1596
 1597
 1598
 1599
 1600
 1601
 1602
 1603
 1604
 1605
 1606
 1607
 1608
 1609
 1610
 1611
 1612
 1613
 1614
 1615
 1616
 1617
 1618
 1619
 1620
 1621
 1622
 1623
 1624
 1625
 1626
 1627
 1628
 1629
 1630
 1631
 1632
 1633
 1634
 1635
 1636
 1637
 1638
 1639
 1640
 1641
 1642
 1643
 1644
 1645
 1646
 1647
 1648
 1649
 1650
 1651
 1652
 1653
 1654
 1655
 1656
 1657
 1658
 1659
 1660
 1661
 1662
 1663
 1664
 1665
 1666
 1667
 1668
 1669
 1670
 1671
 1672
 1673
 1674
 1675
 1676
 1677
 1678
 1679
 1680
 1681
 1682
 1683
 1684
 1685
 1686
 1687
 1688
 1689
 1690
 1691
 1692
 1693
 1694
 1695
 1696
 1697
 1698
 1699
 1700
 1701
 1702
 1703
 1704
 1705
 1706
 1707
 1708
 1709
 1710
 1711
 1712
 1713
 1714
 1715
 1716
 1717
 1718
 1719
 1720
 1721
 1722
 1723
 1724
 1725
 1726
 1727
 1728
 1729
 1730
 1731
 1732
 1733
 1734
 1735
 1736
 1737
 1738
 1739
 1740
 1741
 1742
 1743
 1744
 1745
 1746
 1747
 1748
 1749
 1750
 1751
 1752
 1753
 1754
 1755
 1756
 1757
 1758
 1759
 1760
 1761
 1762
 1763
 1764
 1765
 1766
 1767
 1768
 1769
 1770
 1771
 1772
 1773
 1774
 1775
 1776
 1777
 1778
 1779
 1780
 1781
 1782
 1783
 1784
 1785
 1786
 1787
 1788
 1789
 1790
 1791
 1792
 1793
 1794
 1795
 1796
 1797
 1798
 1799
 1800
 1801
 1802
 1803
 1804
 1805
 1806
 1807
 1808
 1809
 1810
 1811
 1812
 1813
 1814
 1815
 1816
 1817
 1818
 1819
 1820
 1821
 1822
 1823
 1824
 1825
 1826
 1827
 1828
 1829
 1830
 1831
 1832
 1833
 1834
 1835
 1836
 1837
 1838
 1839
 1840
 1841
 1842
 1843
 1844
 1845
 1846
 1847
 1848
 1849
 1850
 1851
 1852
 1853
 1854
 1855
 1856
 1857
 1858
 1859
 1860
 1861
 1862
 1863
 1864
 1865
 1866
 1867
 1868
 1869
 1870
 1871
 1872
 1873
 1874
 1875
 1876
 1877
 1878
 1879
 1880
 1881
 1882
 1883
 1884
 1885
 1886
 1887
 1888
 1889
 1890
 1891
 1892
 1893
 1894
 1895
 1896
 1897
 1898
 1899
 1900
 1901
 1902
 1903
 1904
 1905
 1906
 1907
 1908
 1909
 1910
 1911
 1912
 1913
 1914
 1915
 1916
 1917
 1918
 1919
 1920
 1921
 1922
 1923
 1924
 1925
 1926
 1927
 1928
 1929
 1930
 1931
 1932
 1933
 1934
 1935
 1936
 1937
 1938
 1939
 1940
 1941
 1942
 1943
 1944
 1945
 1946
 1947
 1948
 1949
 1950
 1951
 1952
 1953
 1954
 1955
 1956
 1957
 1958
 1959
 1960
 1961
 1962
 1963
 1964
 1965
 1966
 1967
 1968
 1969
 1970
 1971
 1972
 1973
 1974
 1975
 1976
 1977
 1978
 1979
 1980
 1981
 1982
 1983
 1984
 1985
 1986
 1987
 1988
 1989
 1990
 1991
 1992
 1993
 1994
 1995
 1996
 1997
 1998
 1999
 2000
 2001
 2002
 2003
 2004
 2005
 2006
 2007
 2008
 2009
 2010
 2011
 2012
 2013
 2014
 2015
 2016
 2017
 2018
 2019
 2020
 2021
 2022
 2023
 2024
 2025
 2026
 2027
 2028
 2029
 2030
 2031
 2032
 2033
 2034
 2035
 2036
 2037
 2038
 2039
 2040
 2041
 2042
 2043
 2044
 2045
 2046
 2047
 2048
 2049
 2050
 2051
 2052
 2053
 2054
 2055
 2056
 2057
 2058
 2059
 2060
 2061
 2062
 2063
 2064
 2065
 2066
 2067
 2068
 2069
 2070
 2071
 2072
 2073
 2074
 2075
 2076
 2077
 2078
 2079
 2080
 2081
 2082
 2083
 2084
 2085
 2086
 2087
 2088
 2089
 2090
 2091
 2092
 2093
 2094
 2095
 2096
 2097
 2098
 2099
 2100
 2101
 2102
 2103
 2104
 2105
 2106
 2107
 2108
 2109
 2110
 2111
 2112
 2113
 2114
 2115
 2116
 2117
 2118
 2119
 2120
 2121
 2122
 2123
 2124
 2125
 2126
 2127
 2128
 2129
 2130
 2131
 2132
 2133
 2134
 2135
 2136
 2137
 2138
 2139
 2140
 2141
 2142
 2143
 2144
 2145
 2146
 2147
 2148
 2149
 2150
 2151
 2152
 2153
 2154
 2155
 2156
 2157
 2158
 2159
 2160
 2161
 2162
 2163
 2164
 2165
 2166
 2167
 2168
 2169
 2170
 2171
 2172
 2173
 2174
 2175
 2176
 2177
 2178
 2179
 2180
 2181
 2182
 2183
 2184
 2185
 2186
 2187
 2188
 2189
 2190
 2191
 2192
 2193
 2194
 2195
 2196
 2197
 2198
 2199
 2200
 2201
 2202
 2203
 2204
 2205
 2206
 2207
 2208
 2209
 2210
 2211
 2212
 2213
 2214
 2215
 2216
 2217
 2218
 2219
 2220
 2221
 2222
 2223
 2224
 2225
 2226
 2227
 2228
 2229
 2230
 2231
 2232
 2233
 2234
 2235
 2236
 2237
 2238
 2239
 2240
 2241
 2242
 2243
 2244
 2245
 2246
 2247
 2248
 2249
 2250
 2251
 2252
 2253
 2254
 2255
 2256
 2257
 2258
 2259
 2260
 2261
 2262
 2263
 2264
 2265
 2266
 2267
 2268
 2269
 2270
 2271
 2272
 2273
 2274
 2275
 2276
 2277
 2278
 2279
 2280
 2281
 2282
 2283
 2284
 2285
 2286
 2287
 2288
 2289
 2290
 2291
 2292
 2293
 2294
 2295
 2296
 2297
 2298
 2299
 2300
 2301
 2302
 2303
 2304
 2305
 2306
 2307
 2308
 2309
 2310
 2311
 2312
 2313
 2314
 2315
 2316
 2317
 2318
 2319
 2320
 2321
 2322
 2323
 2324
 2325
 2326
 2327
 2328
 2329
 2330
 2331
 2332
 2333
 2334
 2335
 2336
 2337
 2338
 2339
 2340
 2341
 2342
 2343
 2344
 2345
 2346
 2347
 2348
 2349
 2350
 2351
 2352
 2353
 2354
 2355
 2356
 2357
 2358
 2359
 2360
 2361
 2362
 2363
 2364
 2365
 2366
 2367
 2368
 2369
 2370
 2371
 2372
 2373
 2374
 2375
 2376
 2377
 2378
 2379
 2380
 2381
 2382
 2383
 2384
 2385
 2386
 2387
 2388
 2389
 2390
 2391
 2392
 2393
 2394
 2395
 2396
 2397
 2398
 2399
 2400
 2401
 2402
 2403
 2404
 2405
 2406
 2407
 2408
 2409
 2410
 2411
 2412
 2413
 2414
 2415
 2416
 2417
 2418
 2419
 2420
 2421
 2422
 2423
 2424
 2425
 2426
 2427
 2428
 2429
 2430
 2431
 2432
 2433
 2434
 2435
 2436
 2437
 2438
 2439
 2440
 2441
 2442
 2443

EXPLODED VIEW

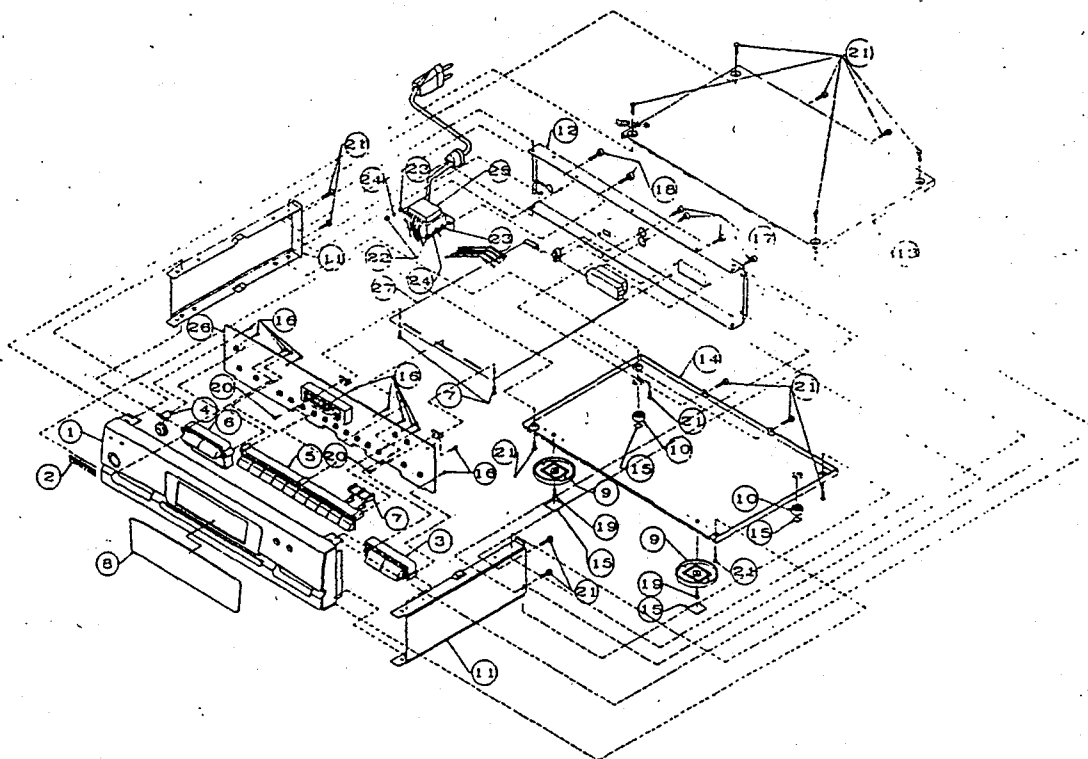


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	7035301103	TU PANEL (T-155)	1	15		RUBBER FOOT 12 X 12 X 2.0MM	4
2		BRANDNAME	1	16		PA 2.6 X 8 (M3) (2683A)	12
3	7335105107	COMMON KNOB (TU-UP/DOWN)	1	17		PA 3 X 8	4
4	7335301000	POWER KNOB (TU, EQ)	1	18	5601300801	BM 3 X 8 (FOR TRANSFORMER)	2
5	7335302102	TU PRESET KNOB	1	19		BTB 3 X 4.5	2
6	7335303102	TU MEMORY KNOB	1	20	5602300802	BTB 3 X 6 BC	4
7	7335304000	TU AUTO KNOB	1	21		BTB 3 X 6 (BLACK) (FOR CHASSIS)	16
8	7435301401	TU LENS (PURPLE)	1	22	5701300253	NUT : M3 (FOR TRANSFORMER)	2
9	7935102201	FRONT FOOT (GOLDEN)	2	23	5432101000	METAL WASHER D3 X 8 X 1MM (FOR TRANSFORMER)	2
10	7935105000	REAR FOOT	2	24	5432105000	SPRING WASHER 0.3 (FOR TRANSFORMER)	2
11	6432310000	SIDE COVER (CD, EQ & TUNER)	2	25		TRANSFORMER	1
12	6335310106	BACK COVER (TUNER) (75 OHM)	1	26		CONTROL PCB	1
13	6132210000	TOP COVER (CASS, TUNER, EQ & CD)	1	27		MAIN PCB	1
14	6235210000	BOTTOM COVER (CASS, TUNER, CD)	1				

WIRING DIAGRAM

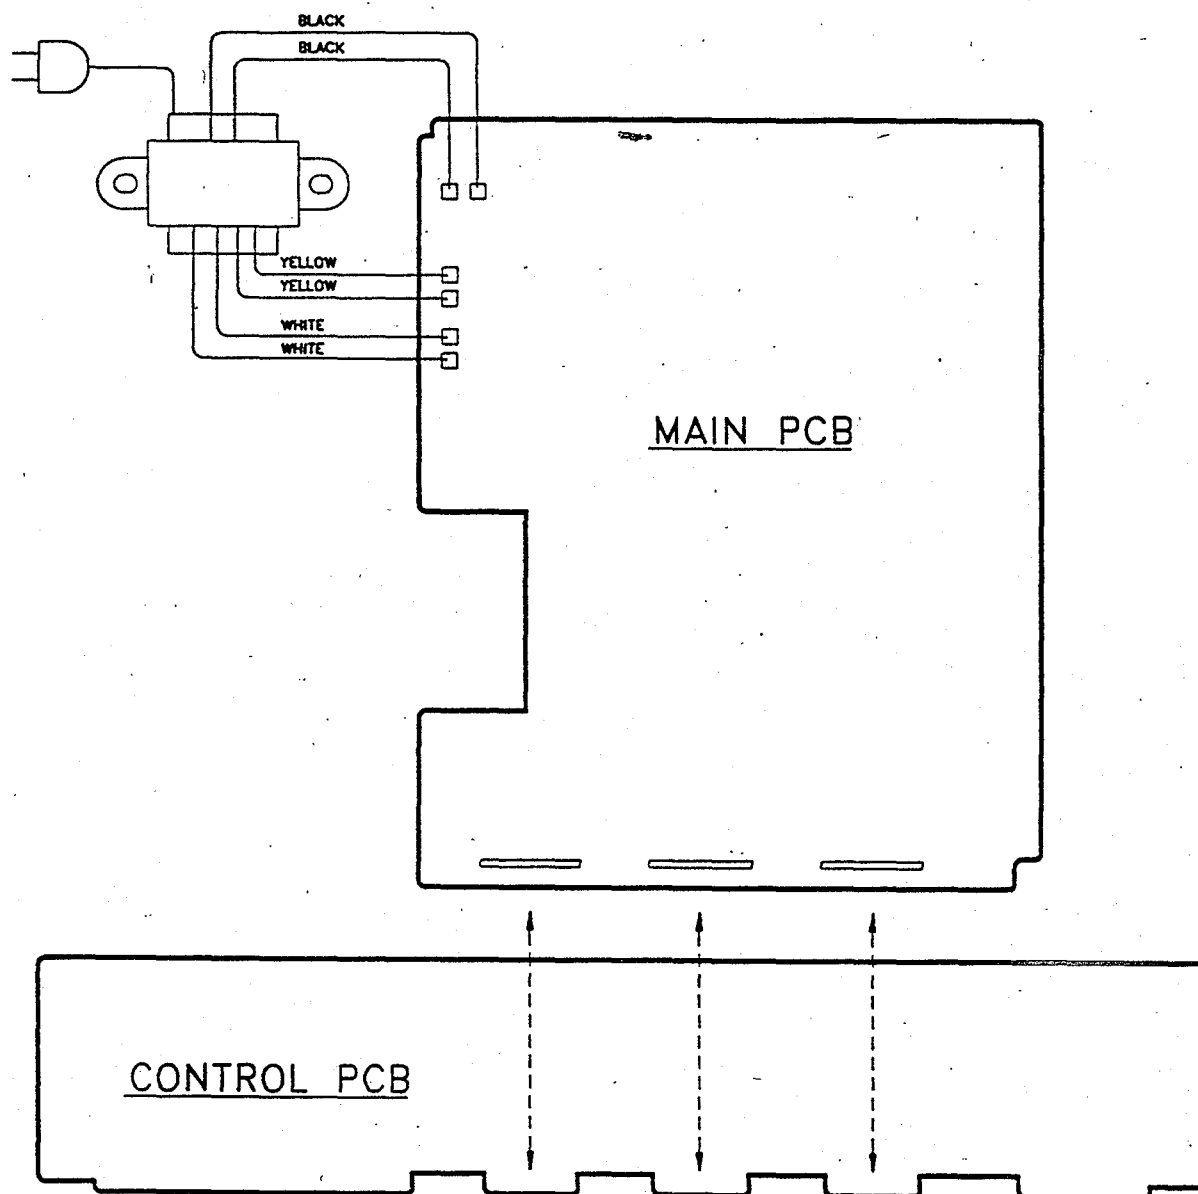


SERVICE MANUAL

STEREO DOUBLE CASSETTE DECK

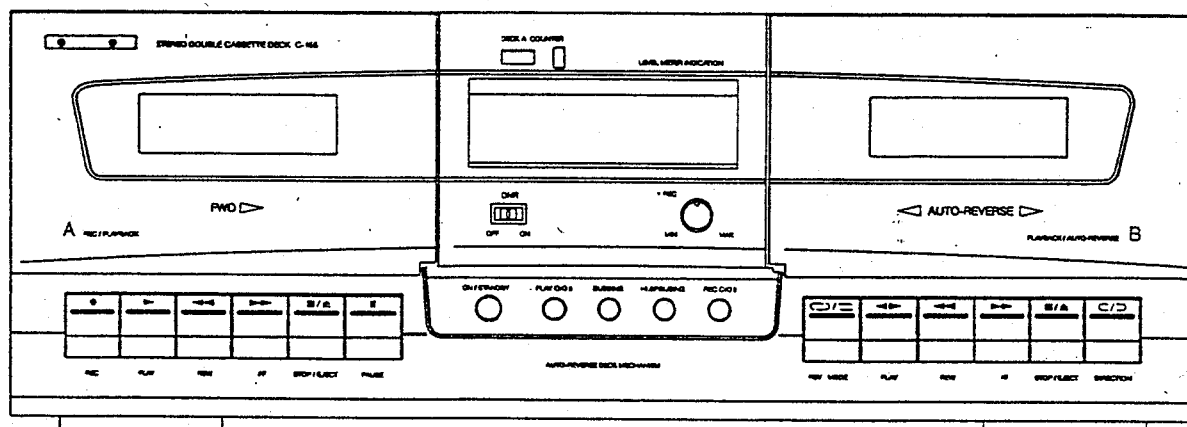


C - 155

CONTROL FUNCTIONS

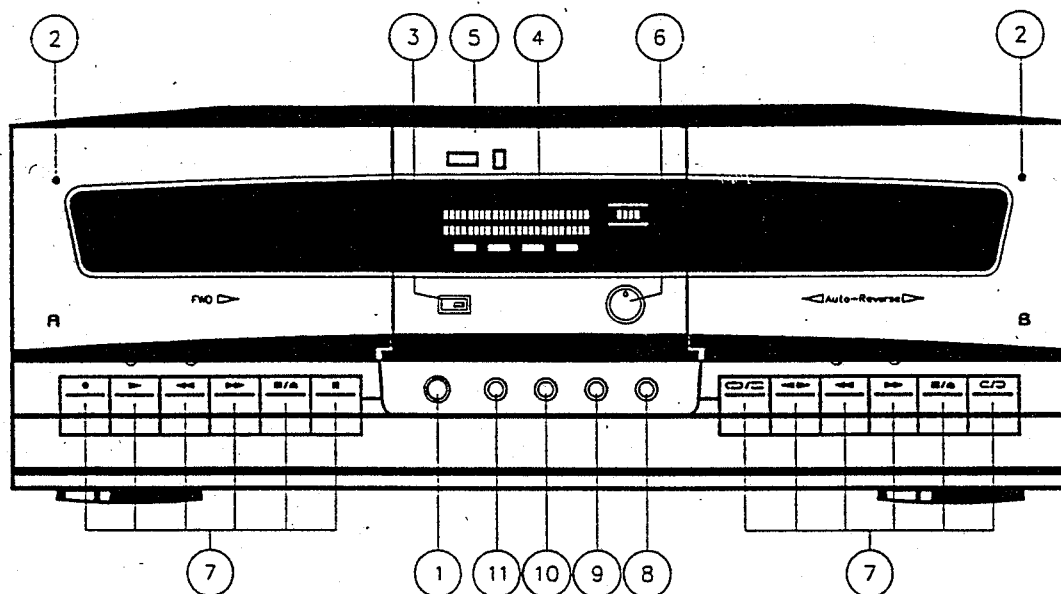

- | | |
|---|--|
| 1. ON / STANDBY SWITCH | 7. CASSETTE OPERATION BUTTON |
| 2. CASSETTE HOLDER | 8. REC CrO ₂ SWITCH |
| 3. DYNAMIC NOISE REDUCTION | 9. HIGH SPEED DUBBING SWITCH |
| 4. PEAK LEVEL INDICATOR | 10. DUBBING SWITCH |
| 5. TAPE COUNTER AND RESET BUTTON (DECK B) | 11. PLAY CrO ₂ / METAL SWITCH |
| 6. REC LEVEL SWITCH | |

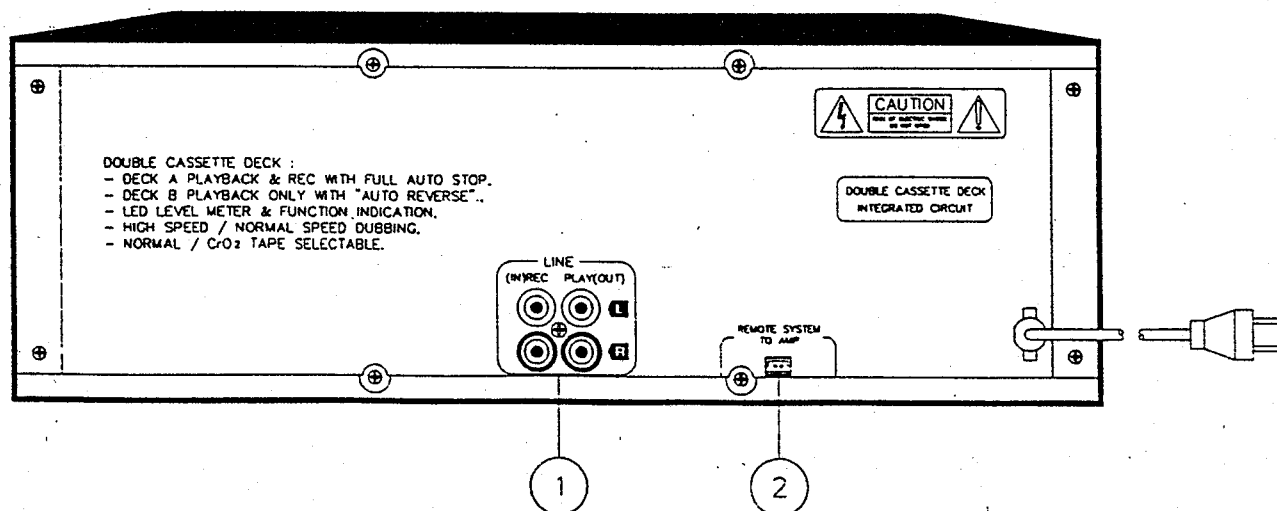

- | | |
|--|--|
| 1. REC (IN) / PLAY (OUT) LINE TERMINAL | 2. TAPE TO AMP REMOTE SYSTEM CONNECTOR |
|--|--|

SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields etc.,

MEASUREMENTS AND ADJUSTMENTS

*CASSETTE

MEASUREMENT CONDITION:


- Make sure heads are clean.
- Make sure capstan and pressure roller are clean.

*TEST TAPE :

- Head azimuth adjustment (10KHz, -10dB)
: MTT-114N.
- Tape speed adjustment (3KHz, -10dB)
: MTT-111N.
- Normal reference blank : MTT-5511


HEAD AZIMUTH ADJUSTMENT (DECK A, B)

1. Test equipment connection is shown in figure 1.
2. Playback the azimuth adjusted part (10KHz, -10dB) of the test tape (MTT-114N) and regulate the angle adjusting screw so that the outputs of L-ch and R-ch are maximized.
(When the adjusting positions are different with L-ch and r-ch, find an position where are the outputs of L-ch and R-ch are balanced, and the mark the adjustment.)
3. At the same time, draw a lissajous waveform and eliminate phase deflection.
4. After the adjustment, apply screw-lock to the angle adjusting value.

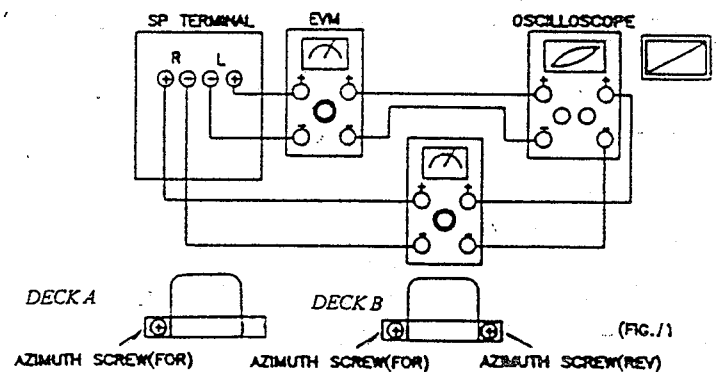


TEST SPEED ADJUSTMENT (DECK A, B)


1. Test equipment connection is shown in figure 2.
2. Playback the test tape MTT-111N.
3. Adjust first VR4 (DECK A) and VR2 (DECK B) for high speed ($6000 \pm 60\text{Hz}$).
4. Adjust VR5 (DECK A) and VR3 (DECK B) for normal speed ($3000 \pm 30\text{Hz}$)

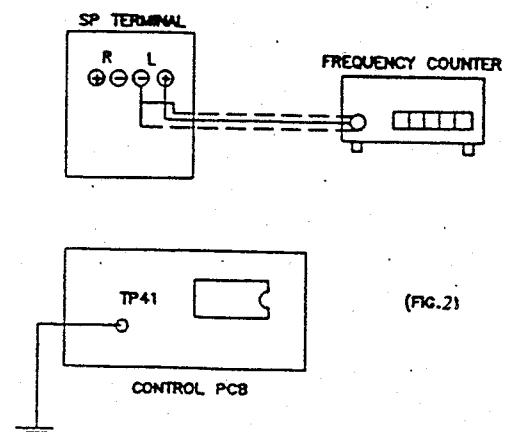

WIRING DIAGRAM

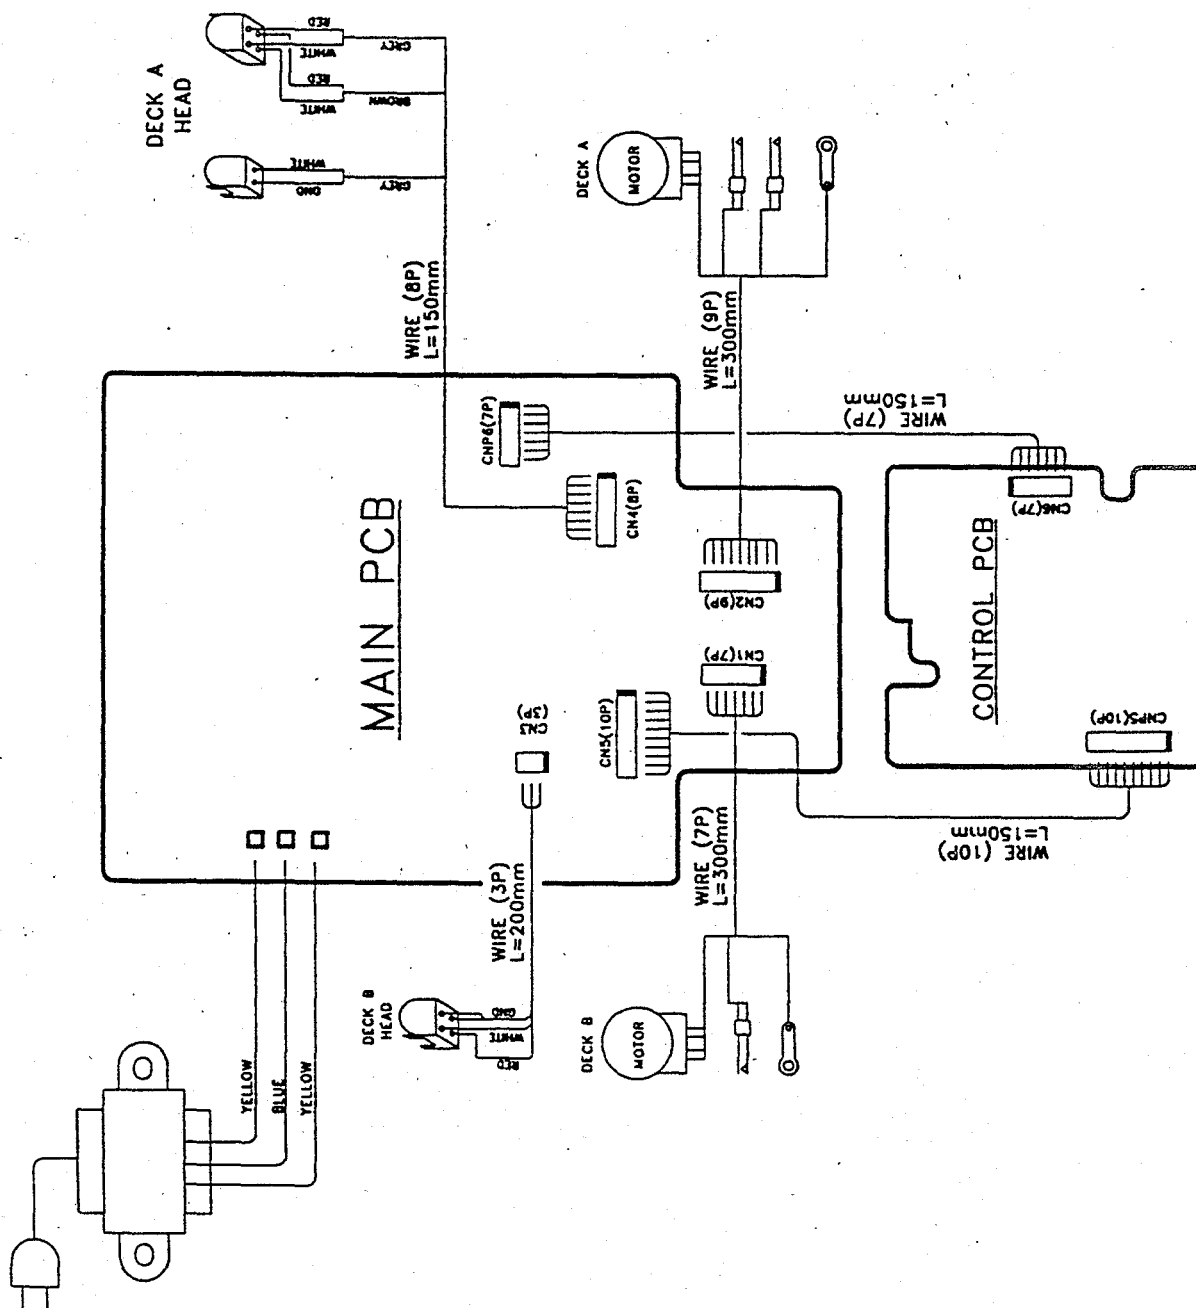


EXPLODED VIEW

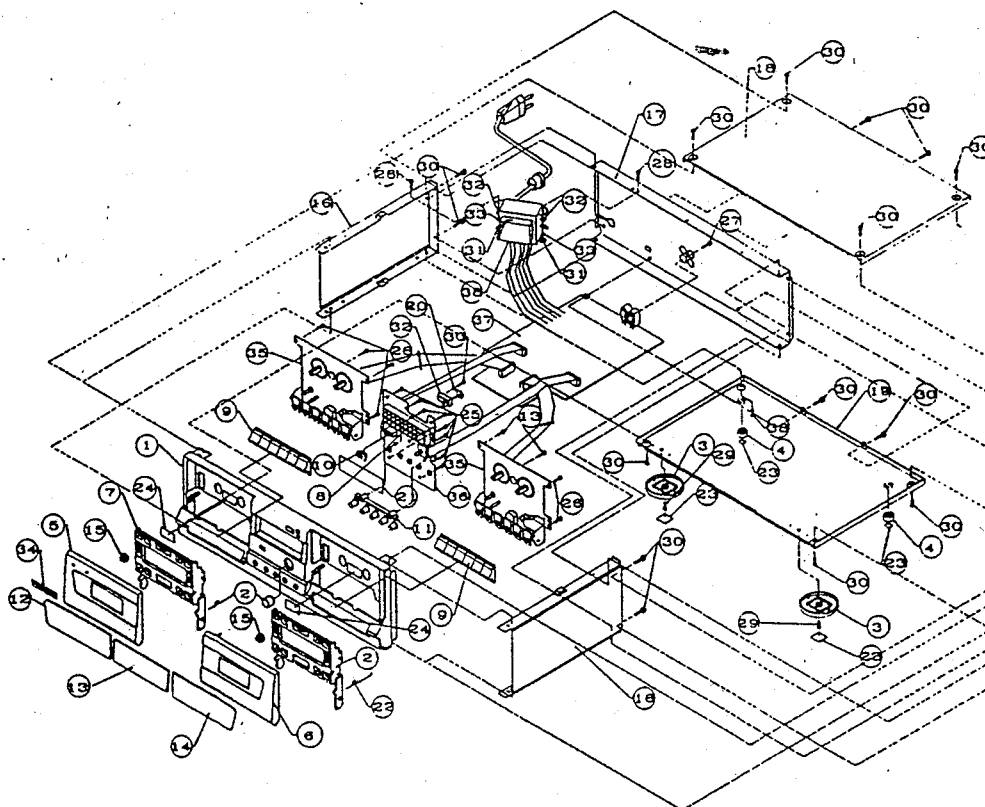


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	7035202103	CASS PANEL (C-155)	1	16	6435110000	SIDE COVER(DECK & AMP)	2
2	7335108000	AMP BAL & CASS REC KNOB	1	17	6335210206	BACK COVER (CASS)	1
3	7935102201	FRONT FOOT (GOLDEN)	2	18	6132210000	TOP COVER (CASS,TUNER,EQ & CD)	1
4	7935105000	REAR FOOT	2	19	6235210000	BOTTOM COVER (CASS,TUNER,CD)	1
5	7235201102	CASS DOOR COVER (A) (C-155)	1	20	5438101000	PCB WASHER NO.1 (FOR COUNTER)	1
6	7235202102	CASS DOOR COVER (B)	1	21	7632201201	CASS LEVEL METER CUTSHEET	1
7	7535202000	CASS BRACKET	2	22	5235201000	CASSETTE DOOR SPRING	2
8	7532201000	CASS LED BRACKET	1	23		RUBBER FOOT 12 X 12 X 2.0MM	4
9	7335204201	CASS KNOB: PAUSE	1	24	8402040000	CASS. DOOR LABEL (9.8 x 19.8mm)	2
	7335204202	CASS KNOB: EJECT	2	25		PA 2.6 X 8 (M3) (2683A)	6
	7335204203	CASS KNOB: FF	2	26		PA 2.6 X 10 (M3) (2610A)	9
	7335204204	CASS KNOB: REW	2	27		PA 3 X 8	1
	7335204205	CASS KNOB: PLAY	1	28	5601300801	BM 3 X 8 (FOR TRANSFORMER)	2
	7335204209	CASS KNOB: PLAY (AUTO REVI	1	29		BTB 3 X 4.5	2
	7335204206	CASS KNOB: AUTO REVERSE	1	30		BTB 3 X 6 (BLACK) (FOR CHASSIS)	16
	7335204207	CASS KNOB: DIRECTION	1	31	5701300253	NUT : M3 (FOR TRANSFORMER)	2
	7335204308	CASS KNOB: REC (RED COLOR)	1	32	5432101000	METAL WASHER D3 X 8 X 1MM	2
10	7335202000	CASS DOLBY KNOB	1	33	5432105000	SPRING WASHER 0.3 (FOR TRANSFORMER)	2
11	7335203000	CASS FUNCTION KNOB	1	34		BRAND NAME	1
12	7435201401	CASS LENS (A) (LIGHT BROWN COLOR)	1	35		CASS MECHANISM	2
13	7435202401	CASS LENS (MIDDLE) (LIGHT BROWN COLOR)	1	36		CASS CONTROL PCB	1
14	7435203401	CASS LENS (B) (LIGHT BROWN COLOR)	1	37		CASS MAIN PCB	1
15	7935201000	CASS GEAR WHEEL	2	38		TRANSFORMER	1

DECK MECHANISM EXPLODED VIEW

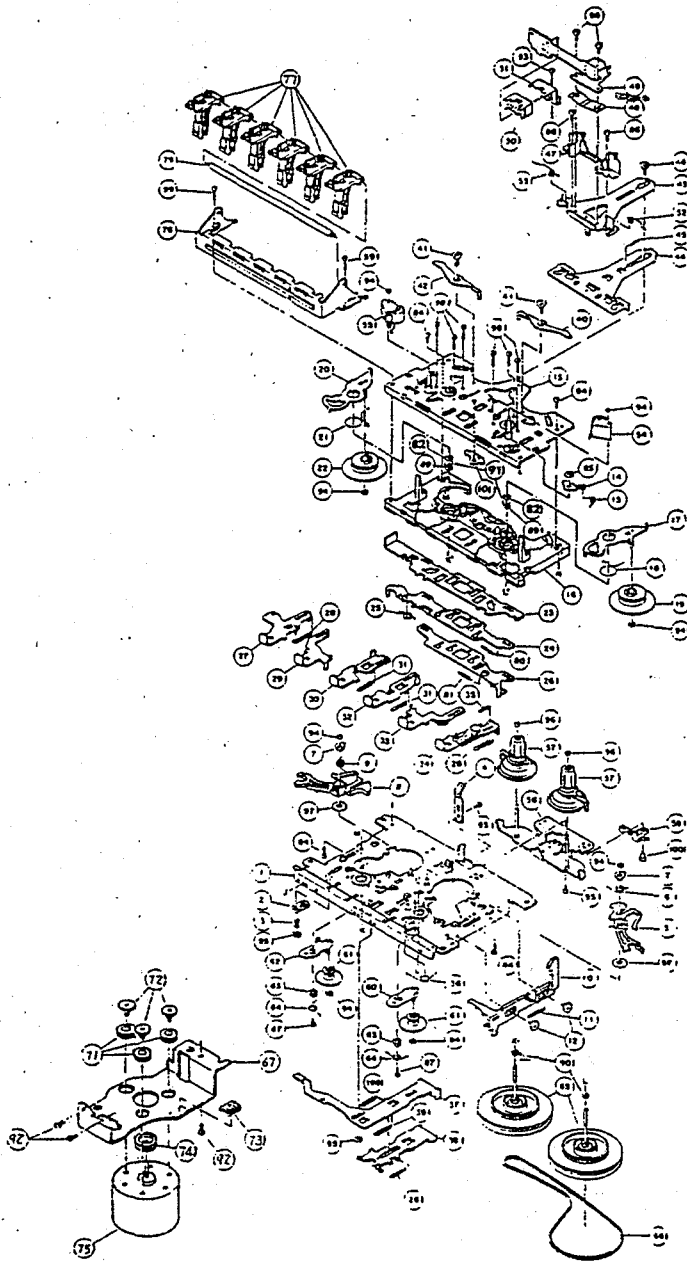

No.	PARTS No.	PARTS NAME	QTY
1	1851 01 301	CHASSIS ASSY	1
2	1821 01 15	PAUSE LEVER	1
3	1821 01 16	PAUSE LEVER SPRING	1
4	1829 10 06	PACK SPRING PLATE	1
5	1851 20 01	AUTO LEVER (R)	1
6	1851 20 03	AUTO LEVER (L) SPRING	1
7	1851 20 05	SPRING STOPPER	2
8	1851 20 02	AUTO LEVER (R)	1
9	1851 20 04	AUTO LEVER SPRING (L)	1
10	1851 17 03	EJECT SLIDE LEVER	1
11	1851 17 02	EJECT SLIDE LEVER SPRING	1
12	1821 12 23	P K COLLAR SCREW (A)	3
13	1851 18 303	SUB CHASSIS ASSY	1
14	1851 03 01	TURN OVER ARM	1
15	1851 03 02	TURN OVER SPRING	1
16	1851 02 501	BUTTON BASE ASSY	1
17	1851 05 301	T.GEAR ARM (R) ASSY	1
18	1851 05 04	T.GEAR ARM (R) SPRING	1
19	1851 05 03	T.CAM GEAR (R)	1
20	1851 06 301	T.GEAR ARM (L) ASSY	1
21	1851 06 03	T.GEAR ARM (L) SPRING	1
22	1851 06 02	T.CAM GEAR (L)	1
23	1851 02 17	SLIDE PLATE	1
24	1851 02 301	LOCK ACTUATOR ASSY	1
25	1851 02 20	LOCK RELEASE SPRING	1
26	1851 02 302	SW ACTUATOR ASSY	1
27	1851 02 304	MODE BUTTON ASSY (S)	1
28	1851 02 22	BUTTON LEVER SPRING	3
29	1851 02 32	PLAY BUTTON LEVER (S)	1
30	1851 02 35	FF BUTTON LEVER (S)	1
31	1851 02 34	FF BUTTON LEVER SPRING	2
32	1851 02 34	FF BUTTON LEVER (S)	1
33	1851 02 31	STOP BUTTON LEVER (S)	1
34	1851 02 304	PROGRAM BUTTON LEVER (S)	1
35	1851 02 27	PULL ARM SPRING	1
36	1851 02 21	STOP BUTTON LEVER SPRING	1
37	1851 04 08	RELAY PLATE	1
38	1851 16 02	FF SW PLATE	1
39	1851 04 10	R C SPRING	1
40	1851 18 05	AUTO CONTROL ARM (R)	1
41	1851 18 06	CAM COLLAR SCREW	2
42	1851 18 06	AUTO CONTROL ARM (R)	1
43	1851 04 01	HEAD PANEL	1
44	1851 04 02	R C PLATE	1
45	1851 04 09	R C PLATE SPRING	1
46	1851 04 07	HP COLLAR SCREW	1
47	1851 04 03	TAPE GUIDE	1
48	1851 04 05	HEAD SPRING PLATE	1
49	1821 12 33	P HEAD M2.5P-KF2.4	1
50	6403 02 04	SLIDE SWITCH R86 31 67	1
51	1851 16 01	SWITCH BRACKET	1
52	1851 04 06	PINCH ROLLER SPRING (R)	1
53	1851 04 07	PINCH ROLLER SPRING (L)	1
54	1851 09 501	PINCH ROLLER (R) ASSY	1
55	1851 10 501	PINCH ROLLER (L) ASSY	1
56	1851 11 301	REEL PLATE ASSY	1
57	1851 11 501	REEL ASSY	2
58	6401 01 151	LEAF SWITCH MSW-12902V	1
59			
60	1851 07 301	FF GEAR ARM (R) ASSY	1
61	1851 07 03	FF GEAR	2
62	1851 08 301	FF GEAR ARM (L) ASSY	1
63	1851 07 05	FF GEAR ARM COLLAR	2
64	1851 07 04	FF GEAR ARM SPRING (L)	2
65	1851 12 501	GLYWEEL ASSY	2
66	1821 12 142	MAIN BELT	1
67	1851 14 04	MOTOR BRACKET	1
68	1851 14 06	P KICK LEVER	1
69	1821 12 15	P KICK LEVER B	1
70			
71	1821 12 36	MOTOR RUBBER	3
72	1821 12 02	M COLLAR SCREW	3
73	1821 12 09	ANTI-VIBRATION FELT	1
74	1851 14 03	MOTOR PULLEY	1
75	1821 12 14	MOTOR 1/2HP-30KVD-2P	1
76	1851 14 04	P KICK LEVER SPRING	1
77	1821 12 17	3200 RPM LEVER	1
78	1851 31 01	BUTTON FRAME (S)	1
79	1821 31 03	BUTTON LEVER SHAFT	1
80	1851 02 25	LOCK ACTUATOR SPRING	1
81	1851 02 26	SW ACTUATOR SPRING	1
82	1851 16 14	2 WASHER 1704.2.2.4	1
83	4P53 20 02.1	2EL 1704.2.2.4 (SPECIAL)	1
84	1874 00 00	P TAPPING SCREW M2.5	1
85	1876 00 00	P WASHER CUT 2 1.2x0.5	3
86	1878 00 00	P TAMS SCREW M2.5	2
87	1879 00 00	TSS 1.7x4	2
88	1899 20 07	SCREW M2.5	1
89	1886 00 00	P WASHER 2x3 SWJ	1
90	1889 00 00	P WASHER 2x3 SWJ	1
91	1899 03 09	P WASHER 1.25x0.5	1
92	1820 00 00	P TAPPING SCREW M2.5	1
93	1821 12 17	3200 RPM LEVER	1
94	1821 00 00	P WASHER CUT 1 2.2x0.25	1
95	1871 01 01	TSS 1.7x4	1
96	1888 00 00	P WASHER CUT 1 2.2x0.4	1
97	1899 00 09	P WASHER 3x8 SWJ.13	1
98	1820 00 00	TAPPING SCREW M2.5	1
99	1899 13 02	CAMERA TAPPING SCREW M2.5	1
100	1821 12 17	TAPPING SCREW M2.5	1
101	1821 12 17	TAPPING SCREW M2.5	1

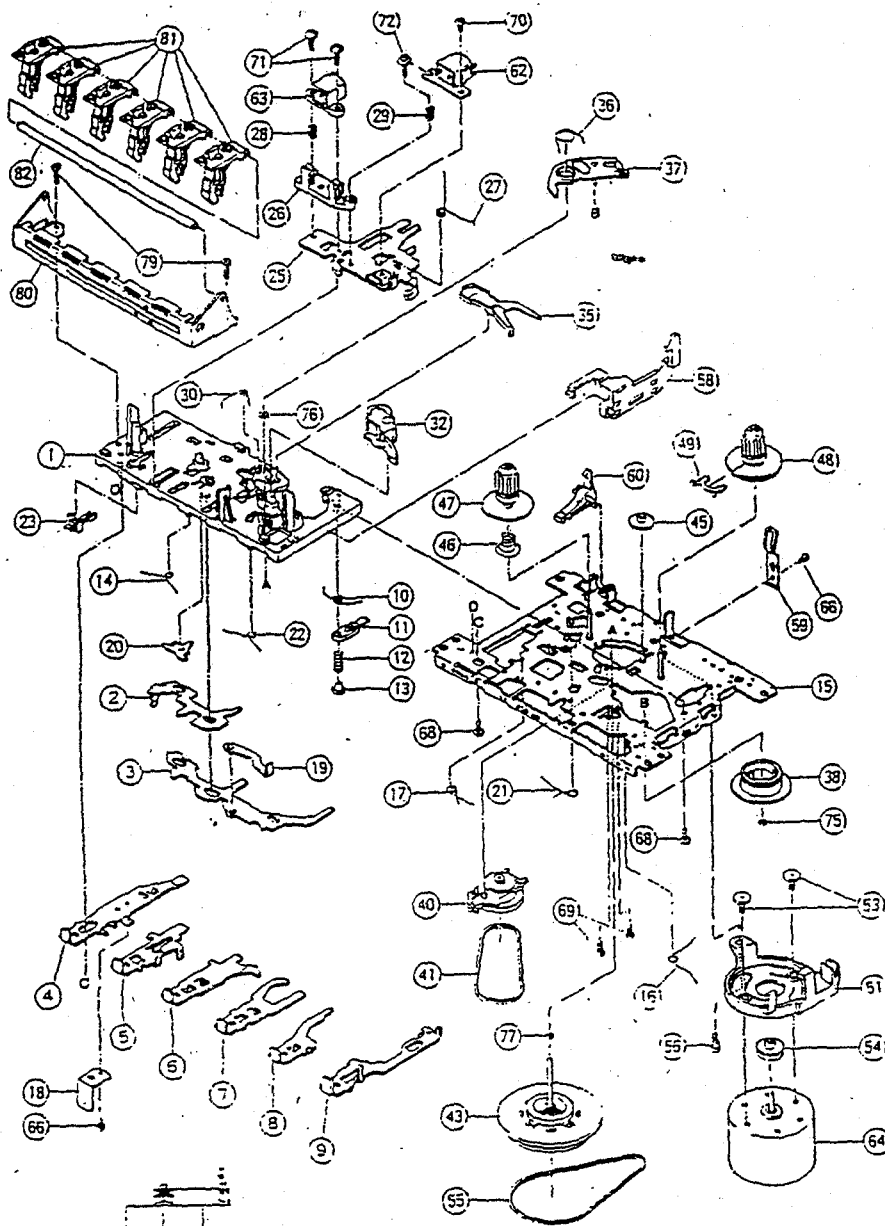


4 PULLEY 压入寸法

NO.	NAME	DESCRIPTION	QTY.
1	BASE ASSY	1021 14 301	1
2	SWITCH ACTUATOR	1021 14 06	1
3	PUSH BUTTON ACTUATOR	1021 14 06	1
4	REC BUTTON LEVER	1021 14 22	1
5	PLAY BUTTON LEVER	1021 14 23	1
6	REW BUTTON LEVER	1021 14 24	1
7	FF BUTTON LEVER	1021 14 25	1
8	STOP BUTTON LEVER	1021 14 26	1
9	PAUSE BUTTON LEVER	1021 14 41	1
10	P CONTROL SPRING	1021 14 13A	1
11	PAUSE LEVER (S)	1021 14 16	1
12	PAUSE LEVER SPRING	1021 14 12	1
13	PAUSE STOPPER	1021 14 11	1
14	BUTTON LEVER SPRING (M)	1021 14 14	1
15	CHASSIS ASSY	1021 01 501	1
16	E ACTUATOR SPRING	1021 14 15	1
17	P.S. LEVER SPRING	1021 14 17	1
18	REC SPRING PLATE	1510 02 02	1
19	E KICK LEVER	1021 01 150	1
20	PR STOPPER	1021 14 20	1
21	REC BUTTON LEVER SPRING	1021 14 21	1
22	BUTTON LEVER SPRING (M)	1021 14 15	1
23	LEAF SWITCH MSW-1541T	6401 01 149	1
24			
25	HEAD PANEL	1021 03 12	1
26	HEAD BASE	1021 03 05	1
27	PANEL P SPRING	1021 03 03	1
28	EV SPRING	1021 03 08	1
29	AZIMUTH SPRING	1021 03 07	1
30	M CONTROL SPRING	1021 14 18A	1
31			
32	PRINCH ROLLER ARM ASSY	1021 04 304	1
33			
34			
35	SENSING LEVER	1021 26 04	1
36	GEAR PLATE SPRING	1021 26 05	1
37	GEAR PLATE ASSY	1021 26 501	1
38	DAM GEAR	1021 26 02	1
39			
40	RF CLUTCH ASSY	1021 07 301	1
41	RF BELT	1021 07 03	1
42			
43	FLYWHEEL ASSY	1021 09 303	1
44			
45	FF GEAR	1021 10 70	1
46	BACK TENSION SPRING	1021 10 10	1
47	SUPPLY REEL ASSY	1021 05 304	1
48	TAKE UP REEL ASSY	1021 05 303	1
49	SENSOR	1021 09 06	1
50			
51	MOTOR BRACKET	1021 17 80A	1
52			
53	MOTOR COLLER SCREW	1021 12 02	2
54	MOTOR PULLEY	1021 12 26	1
55	MAIN BELT	1021 09 04	1
56	M.B. SCREW	1021 12 03	1
57			
58	ELECT SLIDE LEVER	1021 13 02	1
59	PACK SPRING	1021 10 01	1
60	RECORD SAFETY LEVER	1021 10 69	1
61			
62	RP HEAD ASSEMBLY	6202 01 75	1
63	E HEAD LEVER	6202 14 23	1
64	MOTOR	6002 02 24	1
65			
66	C TAPPING SCREW M2x3	9179 00 00	2
67			
68	P TAPPING BND SCREW M2x3	9079 00 00	2
69	TAPPING SCREW FOR CAMERAMOUNT	9099 18 09	2
70	ORING SCREW M2x3	9115 00 00	1
71	OSICAP SCREW M2x7.5	9223 00 00	1
72	AZIMUTH SCREW M2x1	9022 00 00	1
73			
74			
75	P WASHER CUT 12x3.8x0.3	9422 00 00	1
76	P WASHER CUT 14x3.8x0.3	9099 03 13	1
77	P WASHER 2x3.5x0.3	9786 00 00	1
78			
79	TAPPING SCREW FOR CAMERAMOUNT	9099 14 02	2
80	B FRAME (S)	1021 31 06	1
81	OPERATION LEVER	1021 31 07	5
82	BUTTON LEVER SHAFT	1021 31 03	1

SERVICE MANUAL

STEREO ELECTRONIC EQUALIZER

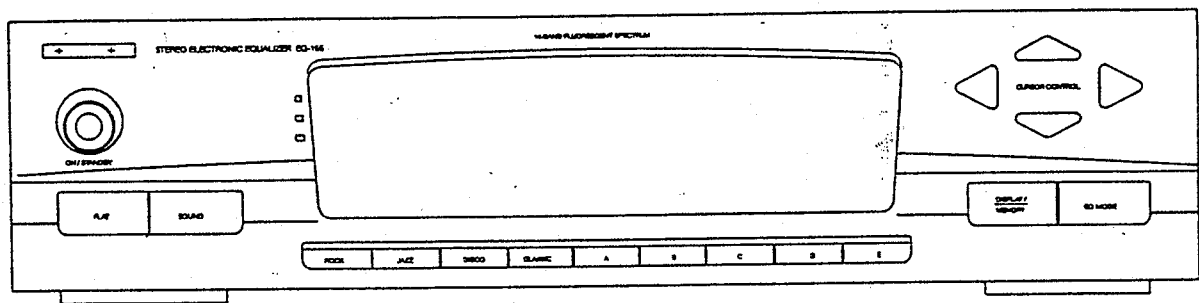


EQ - 155


SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields etc.,


SEMICONDUCTOR INSTRUCTION

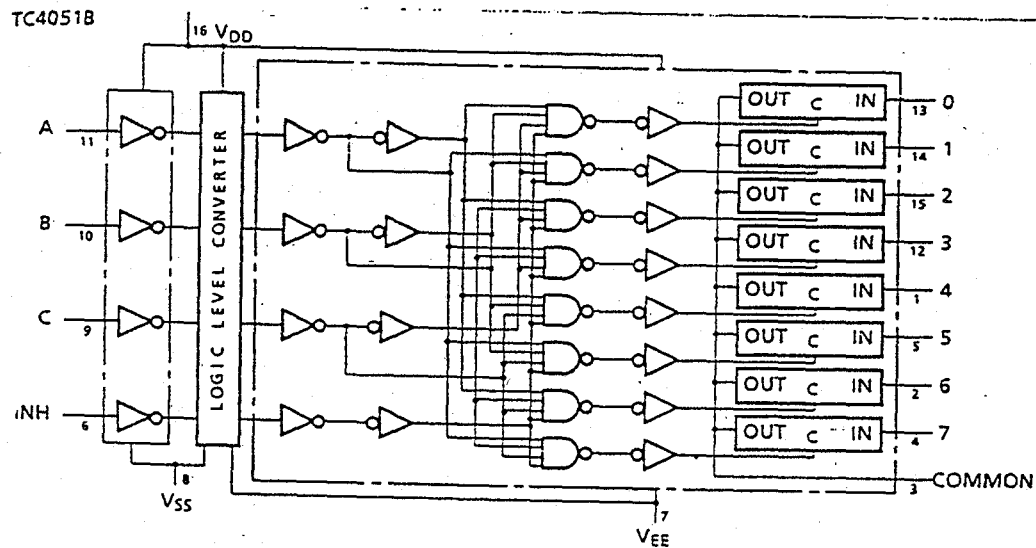

TC4051B

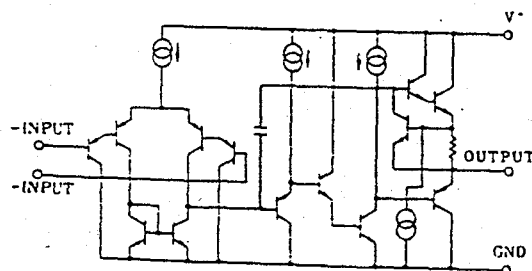


NJM324

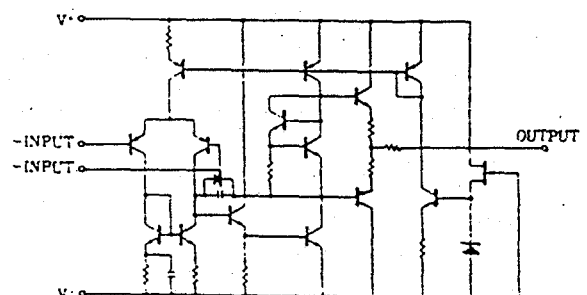


NJM4558

CONTROL FUNCTIONS

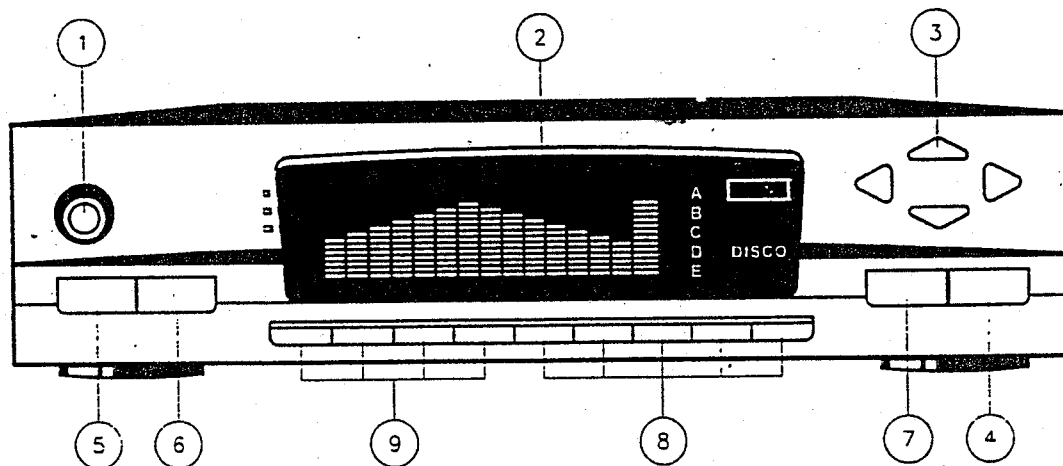


- | | |
|--------------------------------|--------------------------------|
| 1. ON / STANDBY SWITCH | 6. SURROUND SOUND ON / OFF |
| 2. SPECTRUM DISPLAY | 7. DISPLAY / MEMORY MODE SWITC |
| 3. EQUALIZER SETTING | 8. USER PRESET SWITCH (A-E) |
| 4. EQ MODE SWITCH (FINE / ALT) | 9. SURROUND SOUND MODE SWITC |
| 5. EQUALIZER FLAT BUTTON | |

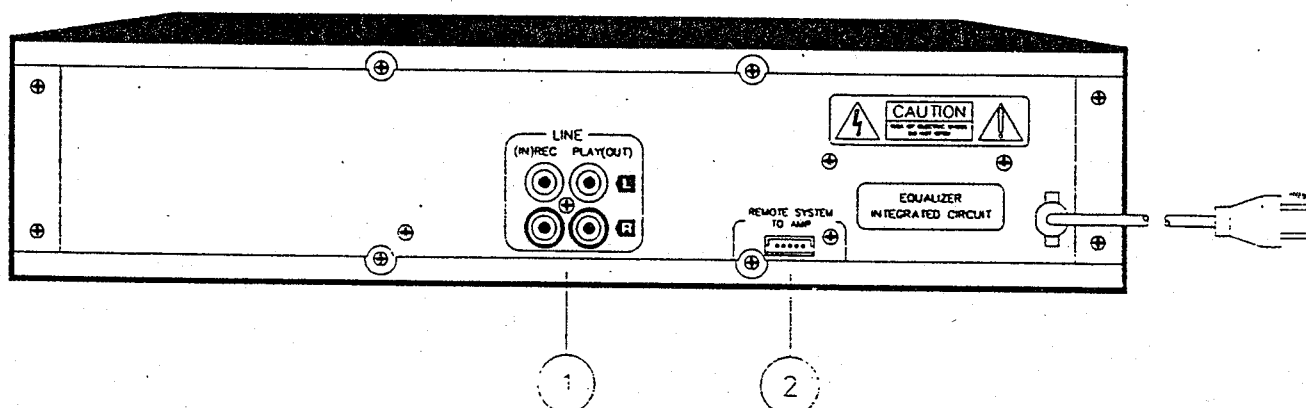


- | | |
|--|--------------------------------------|
| 1. REC (IN) / PLAY (OUT) LINE TERMINAL | 2. EQ TO AMP REMOTE SYSTEM CONNECTOR |
|--|--------------------------------------|

 38



Suppl 2

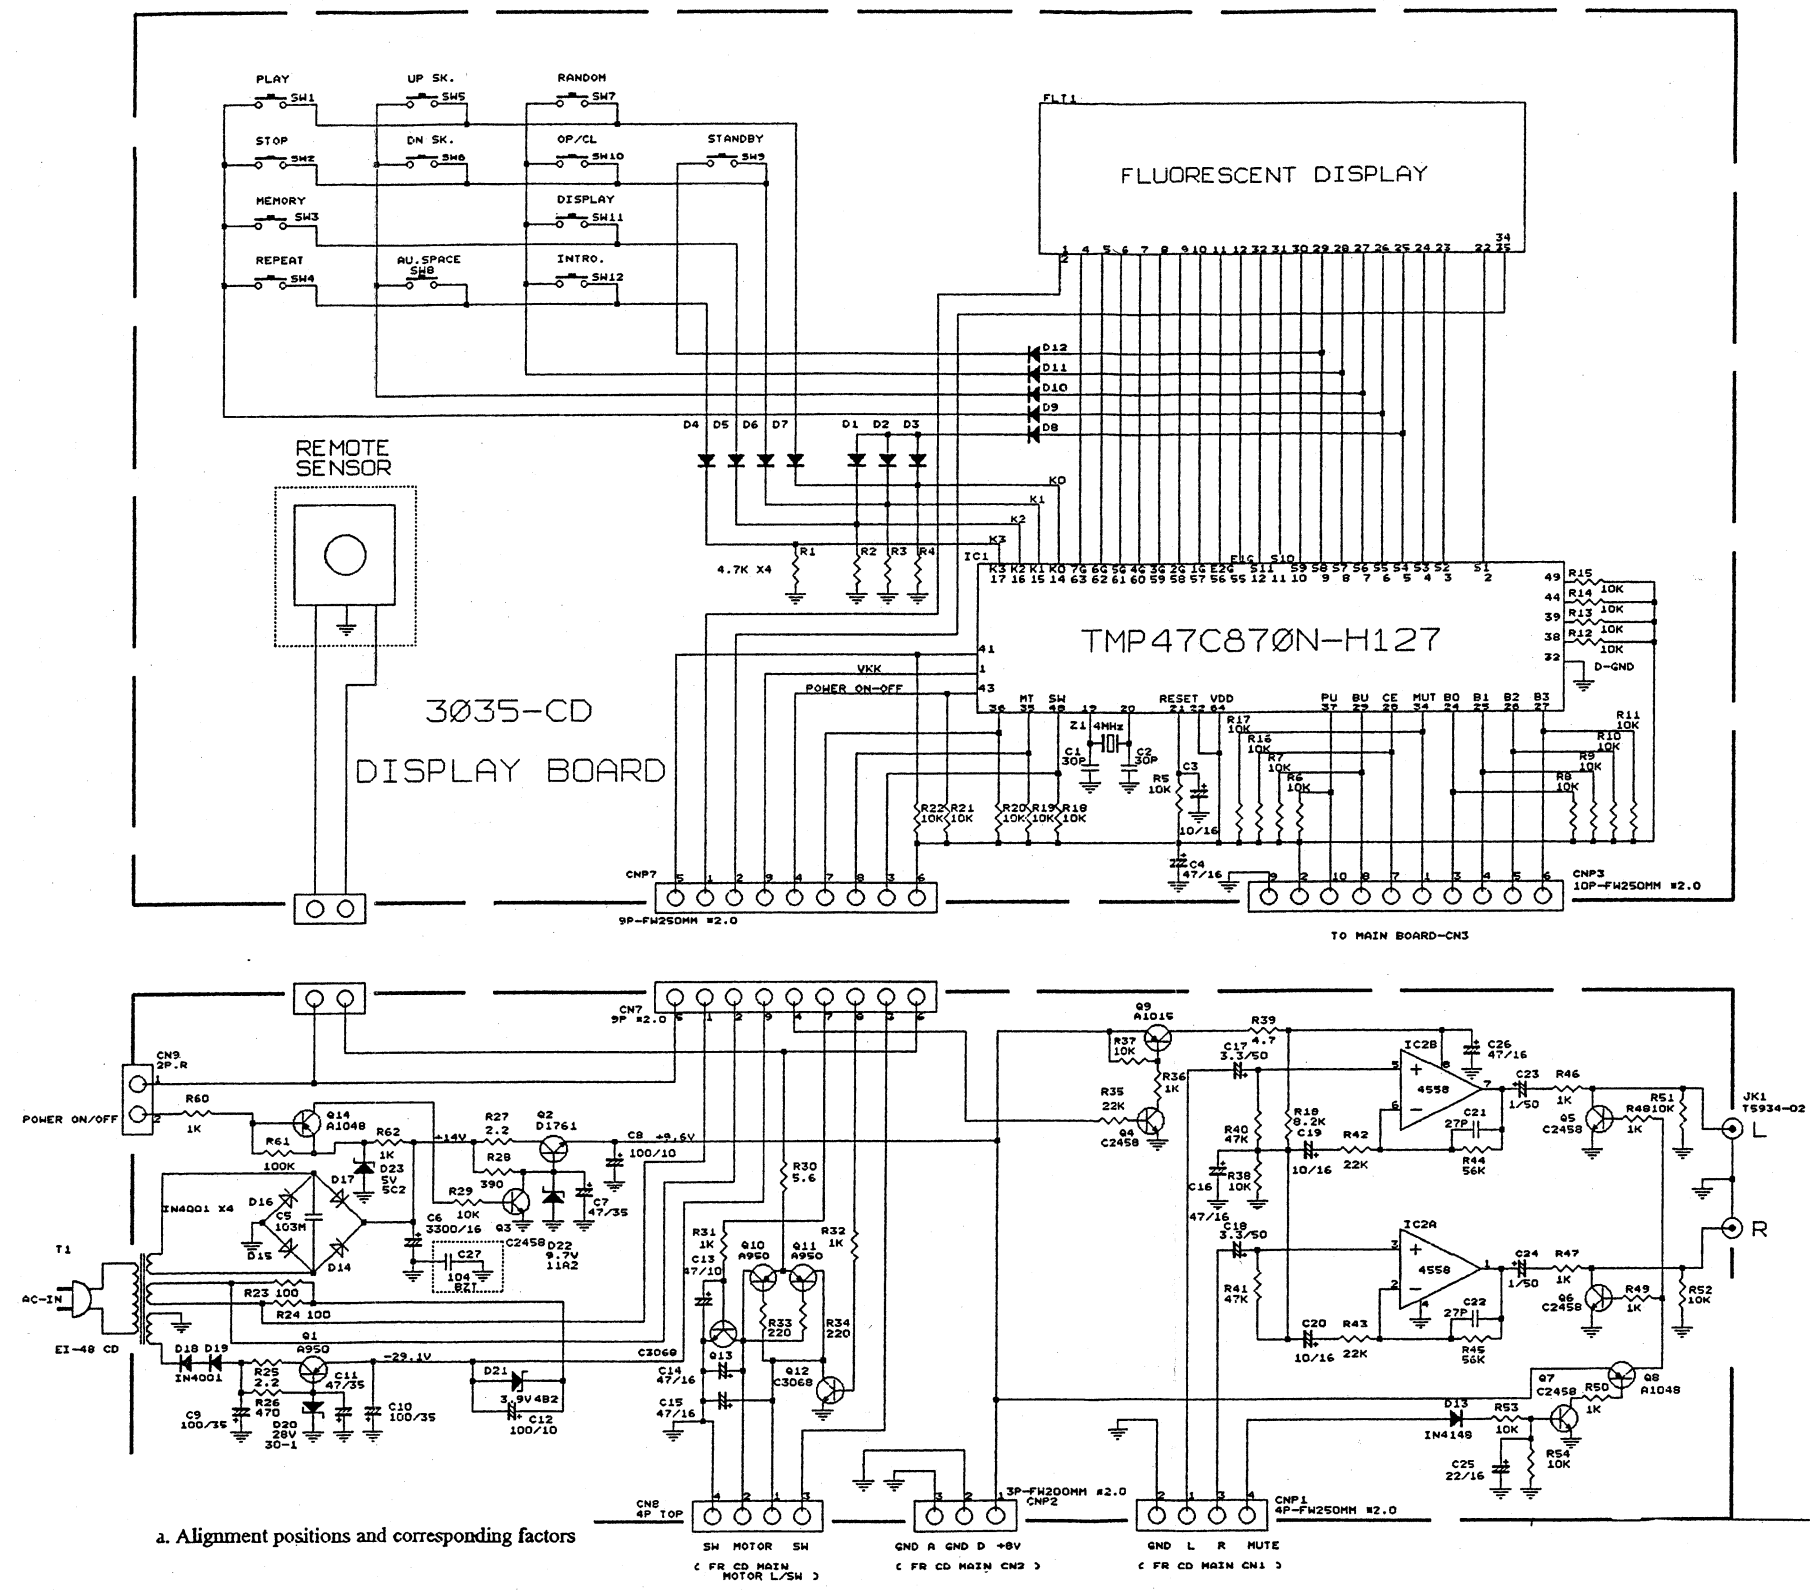

a. Alignment positions and corresponding factors

Our TCD-550/560 series need only one alignment process. This is achieved by fully utilizing the Toshiba's IC TC9236F AUTO-GAIN ADJUSTMENT feature.

The single alignment factor is TRACKING BALANCE. The PCB is provided with four test point to ease this alignment process.

Please check your PCB with following reference;
(Also refer to the attachment Diagram and Drawings.)

Factors	Symbols	Monitor Point
1. TRACKING BALANCE	TBL	VR1 (B100K)
2. RF Output/Eye-pattern	RF	Test point TP1
3. TRACKING ERROR TRIGGER	TERR	Test point TP2,T5
4. TRACKING ERROR SIGNAL	TE	Test point TP3
5. REFERENCE VOLTAGE	Vref	Test point TP4 J127,J105
6. Ground	GND	GND
7. LD switching Transistor Base	LDB	Q1 Base terminal

a-1. In stop mode, with power on and disc in,

First verify the Vref voltage by setting the probe ground to GND and Probe end to Vref/TP4 position illustrated in the attachment.

Vref shall be (in DC);

Minimum	Typical	Maximum
1.95 v	2.1 v	2.25 v

a-2. In stop mode, with power on and disc in,

Check the PCB's Laser Diode driving circuit by verifying the voltage at the point of Base terminal pin of the switching transistor Q1, to monitor either in Laser Diode Deterioration of mechanism or PCB failure.

LD CHECK point voltage shall be (in DC);

Minimum	Typical	Maximum
4.4 v	4.6 v	4.7 v

Then subsequently turn the units to PLAY mode, and observe the same LD CHECK point voltage changes to fall in the range of;

Minimum	Typical	Maximum
4.0 v	4.2 v	4.3 v

If the observation found any abnormal voltage transition on this test point, it is likely that servo-control circuit block may have faulty components or workmanship.

Or it is also likely the mechanism pickup's laser diode is damaged or deteriorated.

a-3. Change the units to PLAY mode and change probe ground to Vref/TP4 point (also at Jumper J127, J105, or J104).
(Probe ground to Vref shall be maintained for following inspection and alignment processes.)

a-4. TRACKING BALANCE

Set the scope to VOLT/DIV = 0.2v, TIME/DIV = 2msec.
Probe to the TE/TP3 point as illustrated.

Carefully adjust the scope GND to centre on GND.

Use the user-designed Function PCB with the CD Control Switches.
By tapping the SKIP(+) Key or SKIP(-) key for a short while, CD Main PCB returns the TRACKING ERROR signal which can be monitored at the designated Testpoint.

Observe the rendered TRACKING ERROR signal and verify the Positive DC Envelope level and negative DC Envelope level are equal (so called A=B alignment) and the DEVIATION shall fall in the range;

Minimum	Typical	Maximum
0 m V	+/- 5 mV	+/-10 mV

If not, adjust to maintain the range with carefully moving VR1.

NB: TRACKING ERROR TRIGGER (Testpoint TP2) is provided for another way of the same adjustment for CHECKER JIG use - optional for customers inspection and alignment station setup :

Instead of using customers' function PCB. switch for Tracking Error signal monitoring, TRACKING ERROR signal can be generated by shorting the Testpoint TP2 to the CD main PCB's Vref (Testpoint TP4) point for a short while, equivalent Error signal can be monitored. And sometime, this way of alignment may be preferred to obtain the easier and steadier reading and adjustment of Tracking balance.

4. Completion and unit restoration


After the successful completion of inspection and alignment, please restore PCB and mechanism to suitable store or transit condition with same care and provision described above for overall inspection and alignment processes.

Summary


The items herein mentioned shall be referred to other technical data and documents supplied to you separately.

And should you have any query for further details and in another specific circumstances, our sales personnel are pleased to find better suggestion with referencing the matter to our technical staffs and engineers.

WIRING DIAGRAM

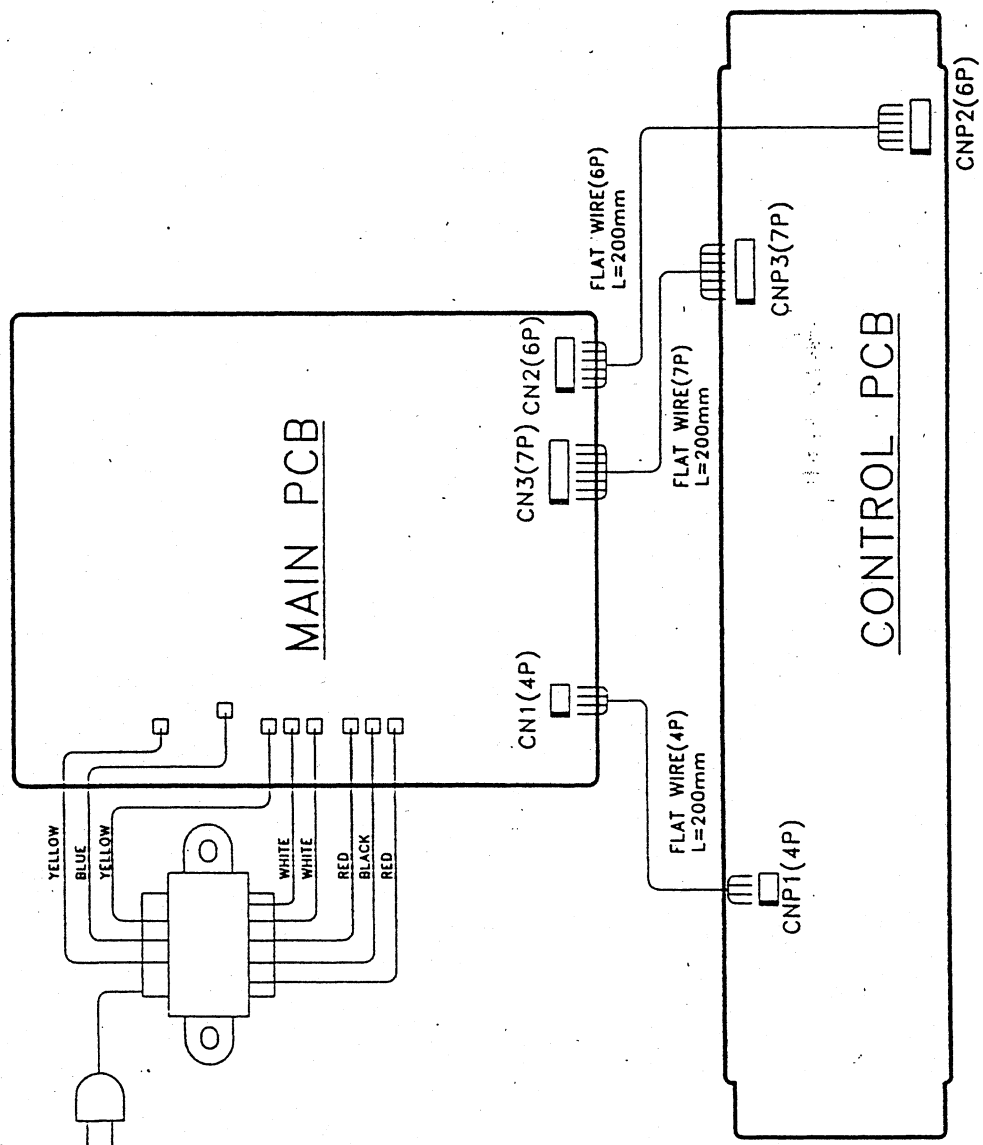

EXPLODED VIEW

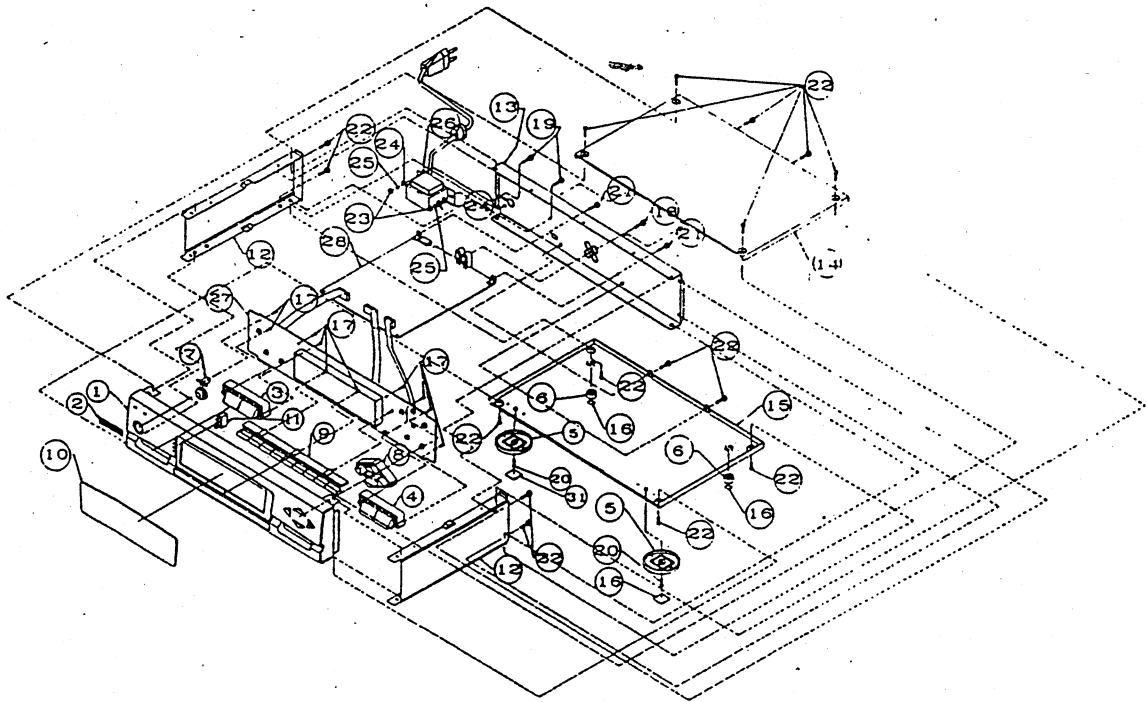


ITEM	PART NO.	DESCRIPTION
1	7035402103	EQ PANEL (EQ-155) (NO SURR)
2		BRANDNAME
3	7335105108	COMMON KNOB (SOUND)
4	7335105109	COMMON KNOB (EQ MODE)
5	7935102201	FRONT FOOT (GOLDEN)
6	7935106000	REAR FOOT
7	7335301000	POWER KNOB (TU, EQ)
8	7335401000	EQ SETTING KNOB (CURSOR)
9	7335402103	EQ USER KNOB (ROCK)
10	7435401401	EQ LENS (PURPLE)
11	7435402000	EQ INDICATED LENS (TRANSPARENT)
12	6432310000	SIDE COVER (CD, EQ & TUNER)
13	6335410106	BACK COVER (EQ)
14	6132210000	TOP COVER (CASS, TUNER, EQ & CD)
15	6235410000	BOTTOM COVER (EQ)

QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	16		RUBBER FOOT 12 X 12 X 2.0MM	4
1	17		SCREW	
1	17		PA 2.5 X 8 (M3) (2683A)	11
1	18		PA 3 X 8	1
2	19	5601300801	BM 3 X 8 (FOR TRANSFORMER)	2
2	20		BTB 3 X 4.5	2
1	21	5602300602	BTB 3 X 6 BC	4
1	22		BTB 3 X 6 (BLACK) (FOR CHASSIS)	16
1	23	5701300253	NUT : M3 (FOR TRANSFORMER)	2
1	24	5432101000	METAL WASHER 03 X 8 X 1MM (FOR TRANSFORMER)	2
1	25	5432105000	SPRING WASHER 03 (FOR TRANSFORMER)	2
2	26		TRANSFORMER	1
1	27		CONTROL PCB	1
1	28		MAIN PCB	1

ERGÄNZUNG 2

CD-SECTION

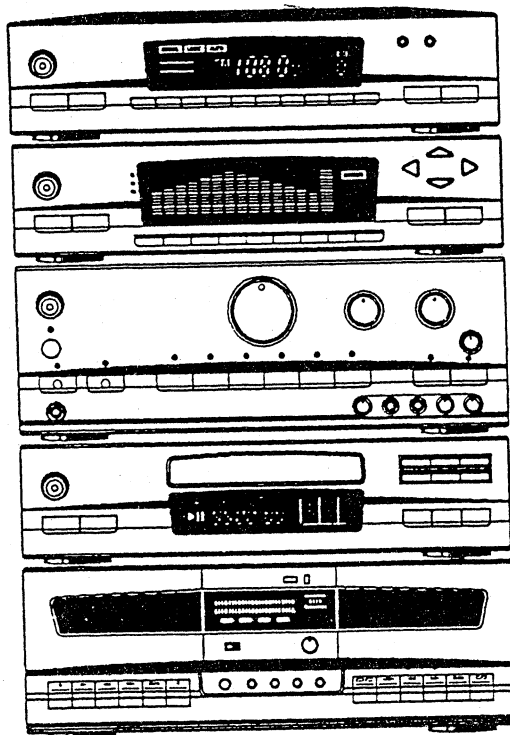

UTS-Nr.: 999 QUELLE
Best.Nr.: 0679936/01
Ger.Bez.: UNIV.STEREO-TURM


GKz: G GERAET
WGT: 659 KOMPLETTE STEREO-TUERME
KD-Sektor: R RUNDFUNK
BaumNr.: 00 KEIN DIAGNOSEBAUM VORHANDEN
Klassierung: STK STEREOKOMBINATION
IFW-FehlerGru.: 205 RDF.,VERST.,TB.,PHONO,CD,CB
Type/Privileg/Universum.Nr MODELL 3030
Beschreibung DOLBY-PROLOGIG
VK-Preis: 1498.00

Serviceart: 01 QUELLE-TKD
Garantie fuer Kunden 06 Monate
Sondervereinbarungen: 0 SIEHE SERVICEART


Garantiereparatur 9999999 QUELLE

KAT. 954 DATUM 19.12.95 SEITEN 6

**Aufstell- und Anschlußmöglichkeiten für den kompletten
Dolby Logic - HiFi Baustein Turm Best.-Nr. 067.993**

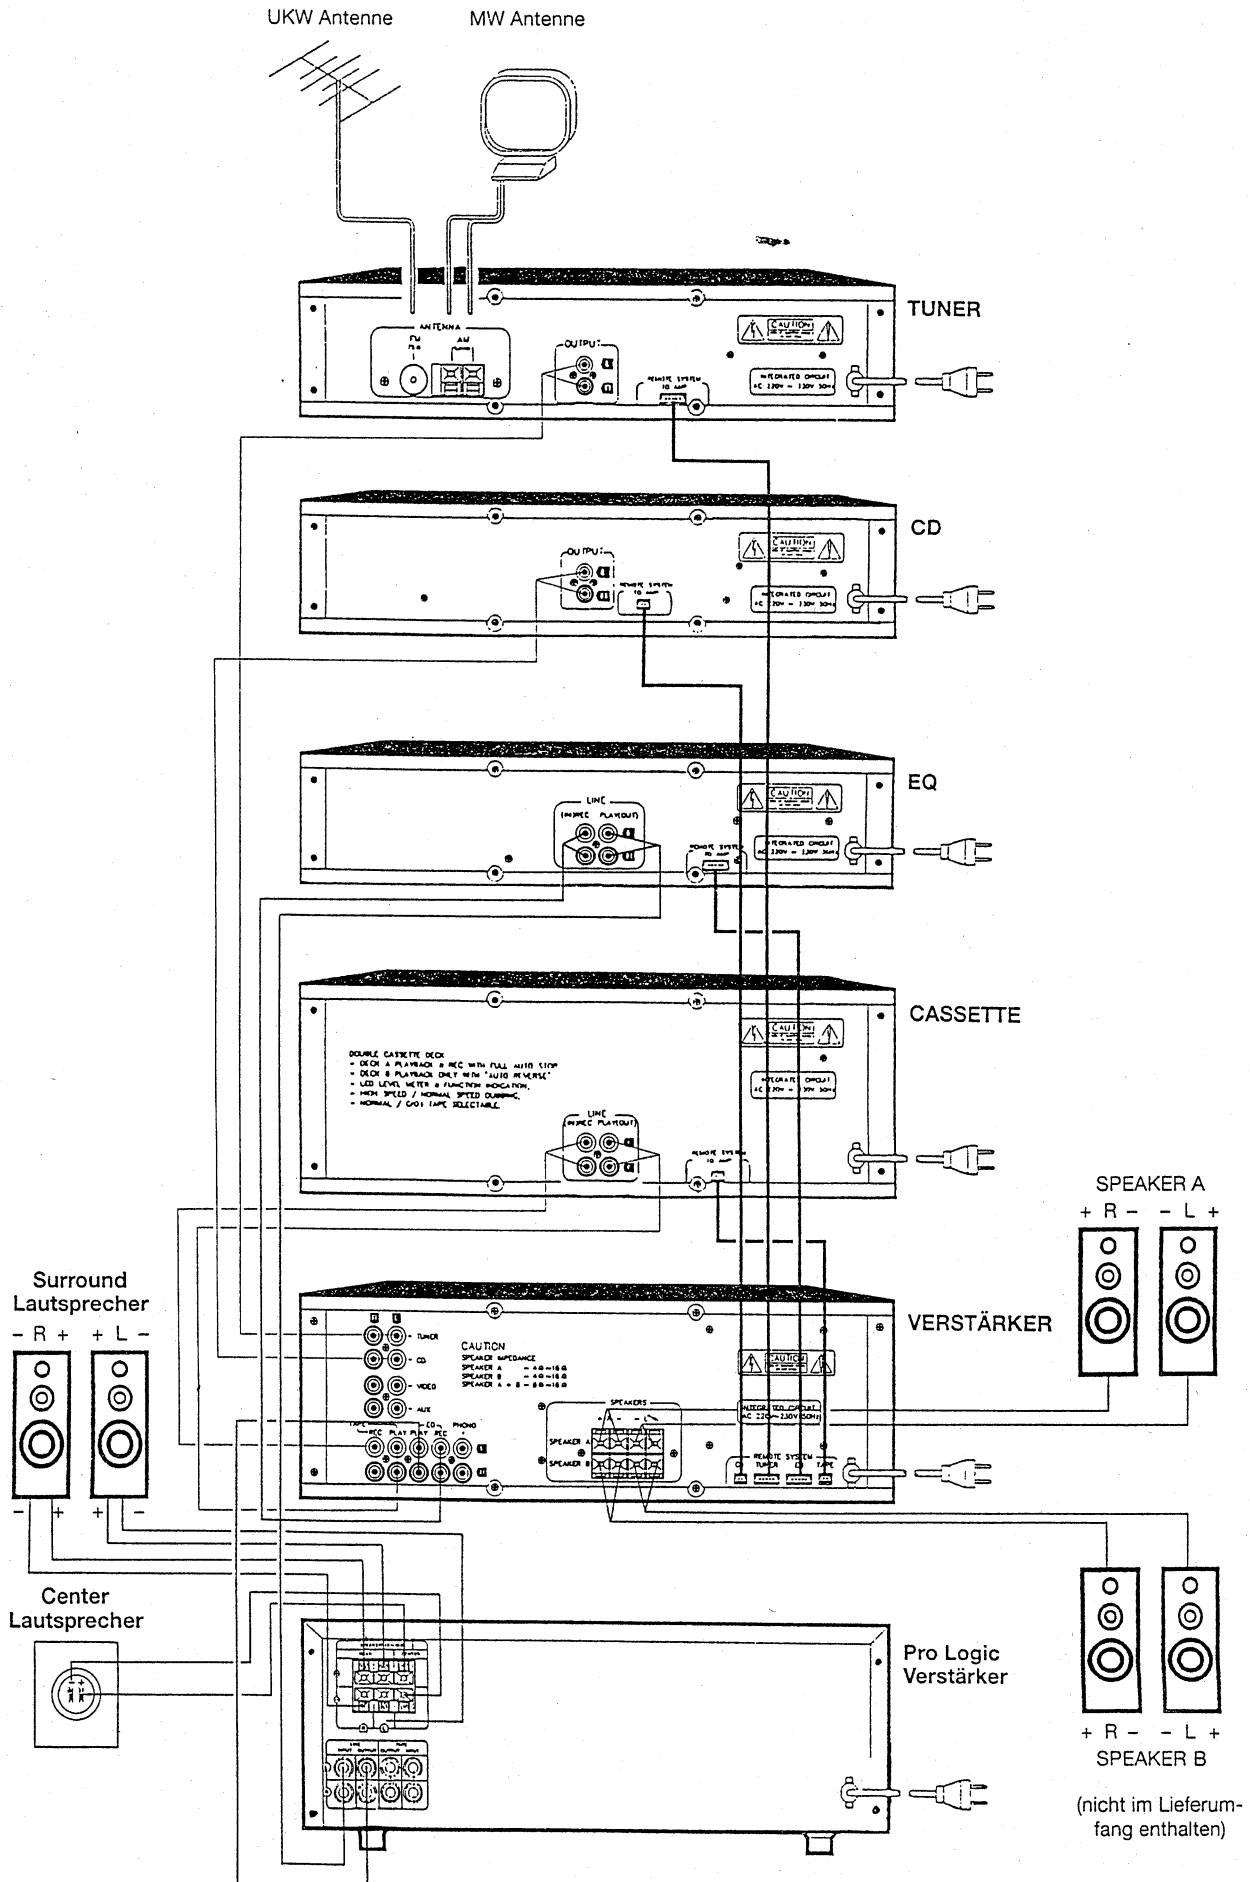

2.AUSFÜHRUNG EQUALIZER TUNER

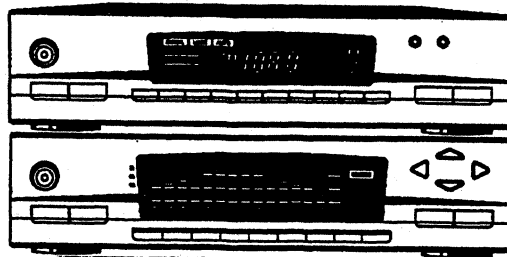

VTC-CD-155 (T/EQ/CD/C/M)

UTS-Nr.: 999 QUELLE
Best.Nr.: 0679936/01
Ger.Bez.: UNIV.STEREO-TURM

GKz: G GERAET
WGT: 659 KOMPLETTE STEREO-TUERME
KD-Sektor: R RUNDFUNK
BaumNr.: 00 KEIN DIAGNOSEBAUM VORHANDEN
Klassierung: STK STEREOKOMBINATION
IFW-FehlerGru.: 205 RDF.,VERST.,TB.,PHONO,CD,CB
Type/Privileg/Universum.Nr MODELL 3030
Beschreibung DOLBY-PROLOGIG
VK-Preis: 1498.00

Serviceart: 01 QUELLE-TKD
Garantie fuer Kunden 06 Monate
Sondervereinbarungen: 0 SIEHE SERVICEART

Garantiereparatur 9999999 QUELLE

Fehler:


- 1 EQUALIZER KEINE ANZEIGE
A: DER EQ IST IM SIGNALWEG VOR DEN DOLBY-VERST.ZU SCHALTEN
- 2 SURROUND BOXEN KEIN SIGNAL
U: DIE DOLBY-MATRIX KANN KEIN HINTERGRUNDSIGNAL AUS EINEM MONO-SIGNAL (Z.B. RDF) BILDEN.
- 3 SCHALTPLAENE UNLESERLICH
ES GIBT EINE ERGAENZUNG ZUR TU AB ENDE SEP.95
- 4 ANSCHLUSS DES SURROUNDVERSTAERKERS
SIEHE TI 27/95
- 5 HAUPTLAUTSPRECHER KEIN TON
A: MONITORTASTE AM PROLOGIC-VERSTAERKER ENTRIEGELN
- 6 FUNKTIONSSSTOERUNGEN
BEI KOMPONENTEN DER ANLAGE KOENNEN SCHLECHTE LOETSTELLEN ZU FUNKTIONSSSTOERUNGEN FUEHREN.
- 7 GERAETE BRUMMEN BZW.DEFEKT NACH VERBINDUNG SYS.FB
F: SYSTEMFERNBEDIENUNGSKABEL STECKER VERPOLT
SIEHE TI 40/95 !!!
- 8 EQ KEINE FUNKTION
F: K.F. DISPLAY ZEIGT VERSTUEMMELTE ZEICHEN
U: KONDENSATOREN C119,C120 (30PF) FEINSCHLUSS
- 9 BEI TUNERBETRIEB KEINE BEDIENUNG MOEGLICH.
U: Q8/9/10/201 AUS TOLERANZ,BLOCKIEREN PROZESSOR
A: AUSTAUSCHEN

KAT. 954 DATUM 05.03.96 SEITEN 6

universum. SERVICE
MANUAL

DPL-155

PROLOGIC AMPLIFIER

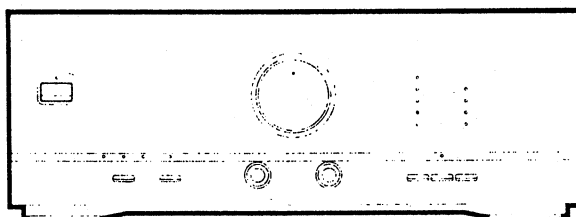

Best.Nr.: 1057926/01

Ger.Bez.: UNIV.VERSTAERKER

GKz: G GERAET
WGT: 653 STEREO-EINZELBAUST. BAUSTEINE-SET
KD-Sektor: R RUNDUNK
BaumNr.: 00 KEIN DIAGNOSEBAUM VORHANDEN
Klassierung: STG STEREOG., TUNER, VERST., STEUER
IFW-FehlerGru.: 205 RDF., VERST., TB., PHONO, CD, CB
Type/Privileg/Universum.Nr V 3030
Beschreibung DOLBY-PROLOGIC
VK-Preis: 699.00

Serviceart: 01 QUELLE-TKD
Garantie fuer Kunden 06 Monate
Sondervereinbarungen: 0 SIEHE SERVICEART
Garantiereparatur 9999999 QUELLE

TECHNICAL SPECIFICATION

PREAMPLIFIER(When surround is "OFF")

Channel separation	70dB
Frequency Response	10Hz - 60KHz(-3dB)
S/N Ratio	80dB

AMPLIFIER

1. When surround is "ON"

• 1KHz continuous output	3ch - 35W(8ohm)
• 3 channel system	0.5%
• T.H.D.(1KHz/8ohm)	


2. When Dolby Prologic is "ON"

• Frequency Response	50Hz - 60KHz(-3dB)
Left, Right, Center	100Hz - 6KHz(-3dB)
Rear	75dB
• S/N Ratio [CCIR/ARM Filter]	70dB
Left, Right, Center	
Rear	

GENERAL


Power Consumption	250W
Power Supply	AC230V, 50Hz
Dimension(W · H · D)	360 · 136 · 300mm
Weight	5.8Kg

■ BLOCK DIAGRAM

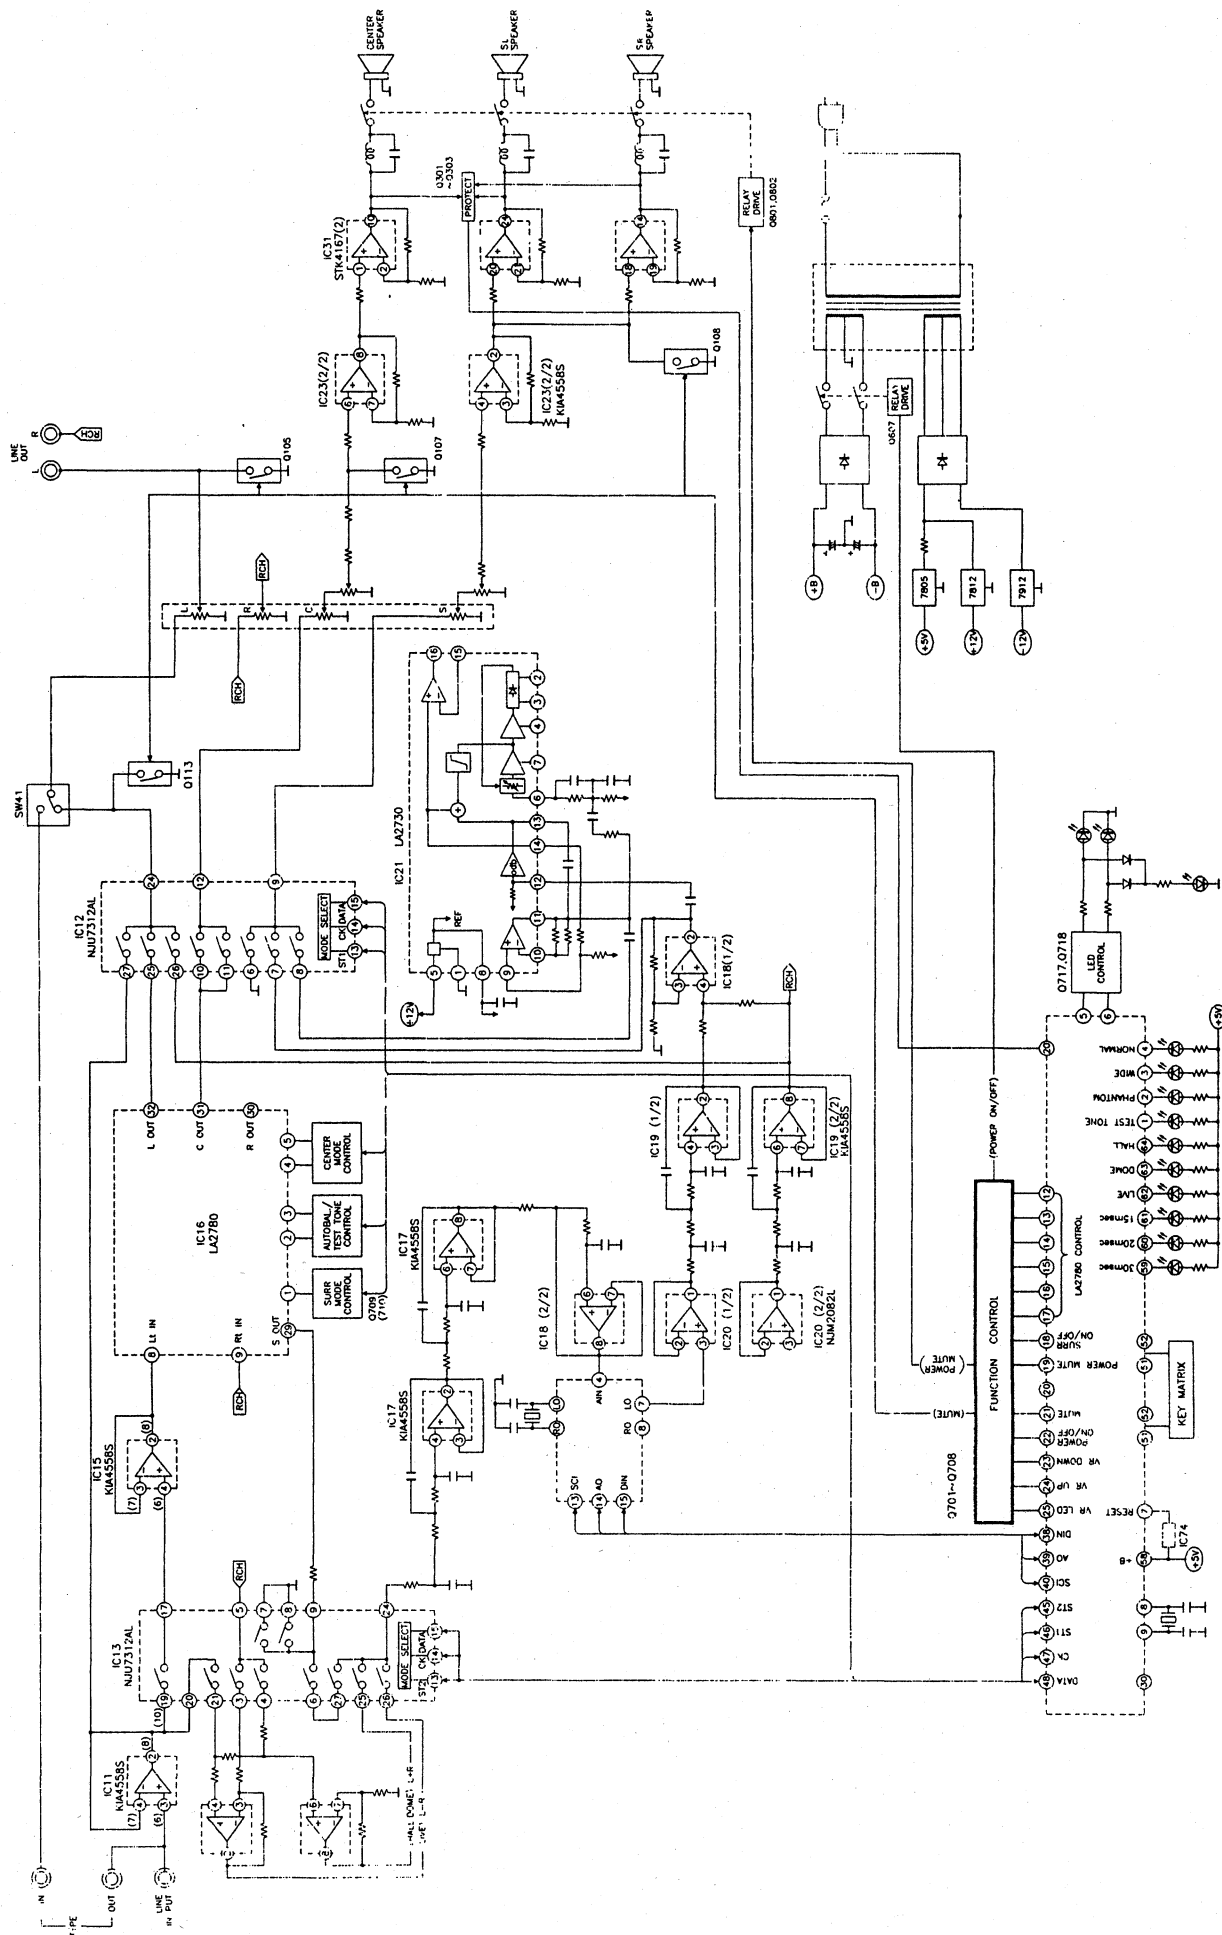


◎ SUB PCB


KUP 10837-1
▲ DMC-HB
▲ DMC

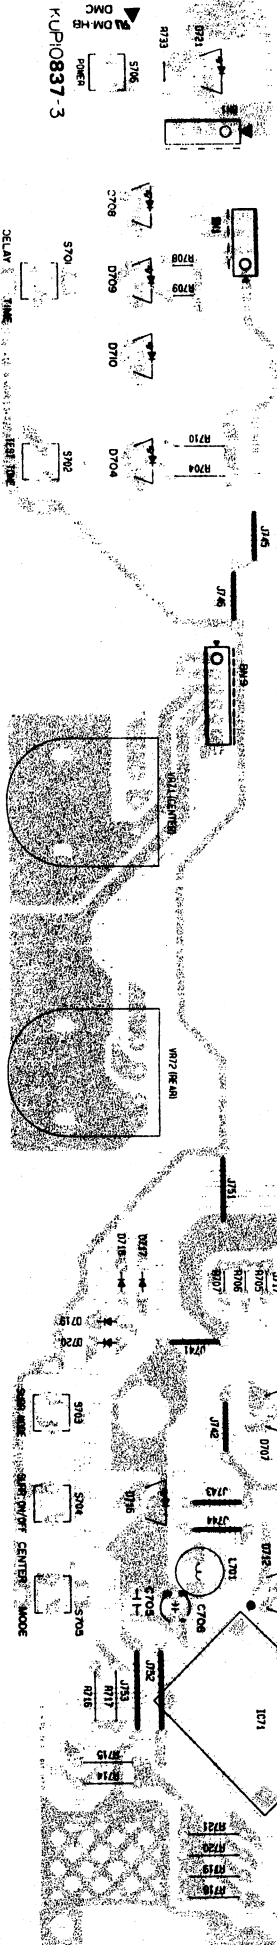


KUP 10837

 

◎ SPEAKER PCB

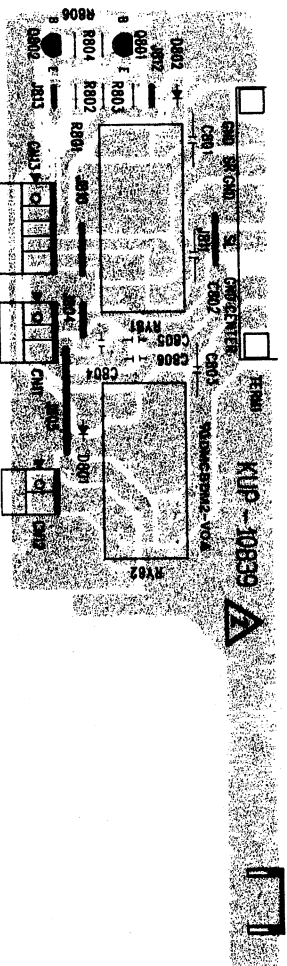


◎ VR PCB

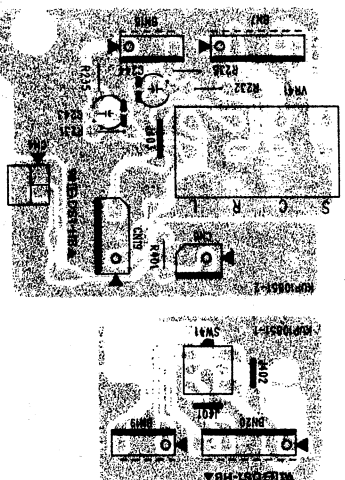

© MAIN PCB

1	2	3	4	5	6	7	8	9	10	11	12
•	•	•	•	•	•	•	•	•	•	•	•
•	•	•	•	•	•	•	•	•	•	•	•
•	•	•	•	•	•	•	•	•	•	•	•
•	•	•	•	•	•	•	•	•	•	•	•
•	•	•	•	•	•	•	•	•	•	•	•

(95)

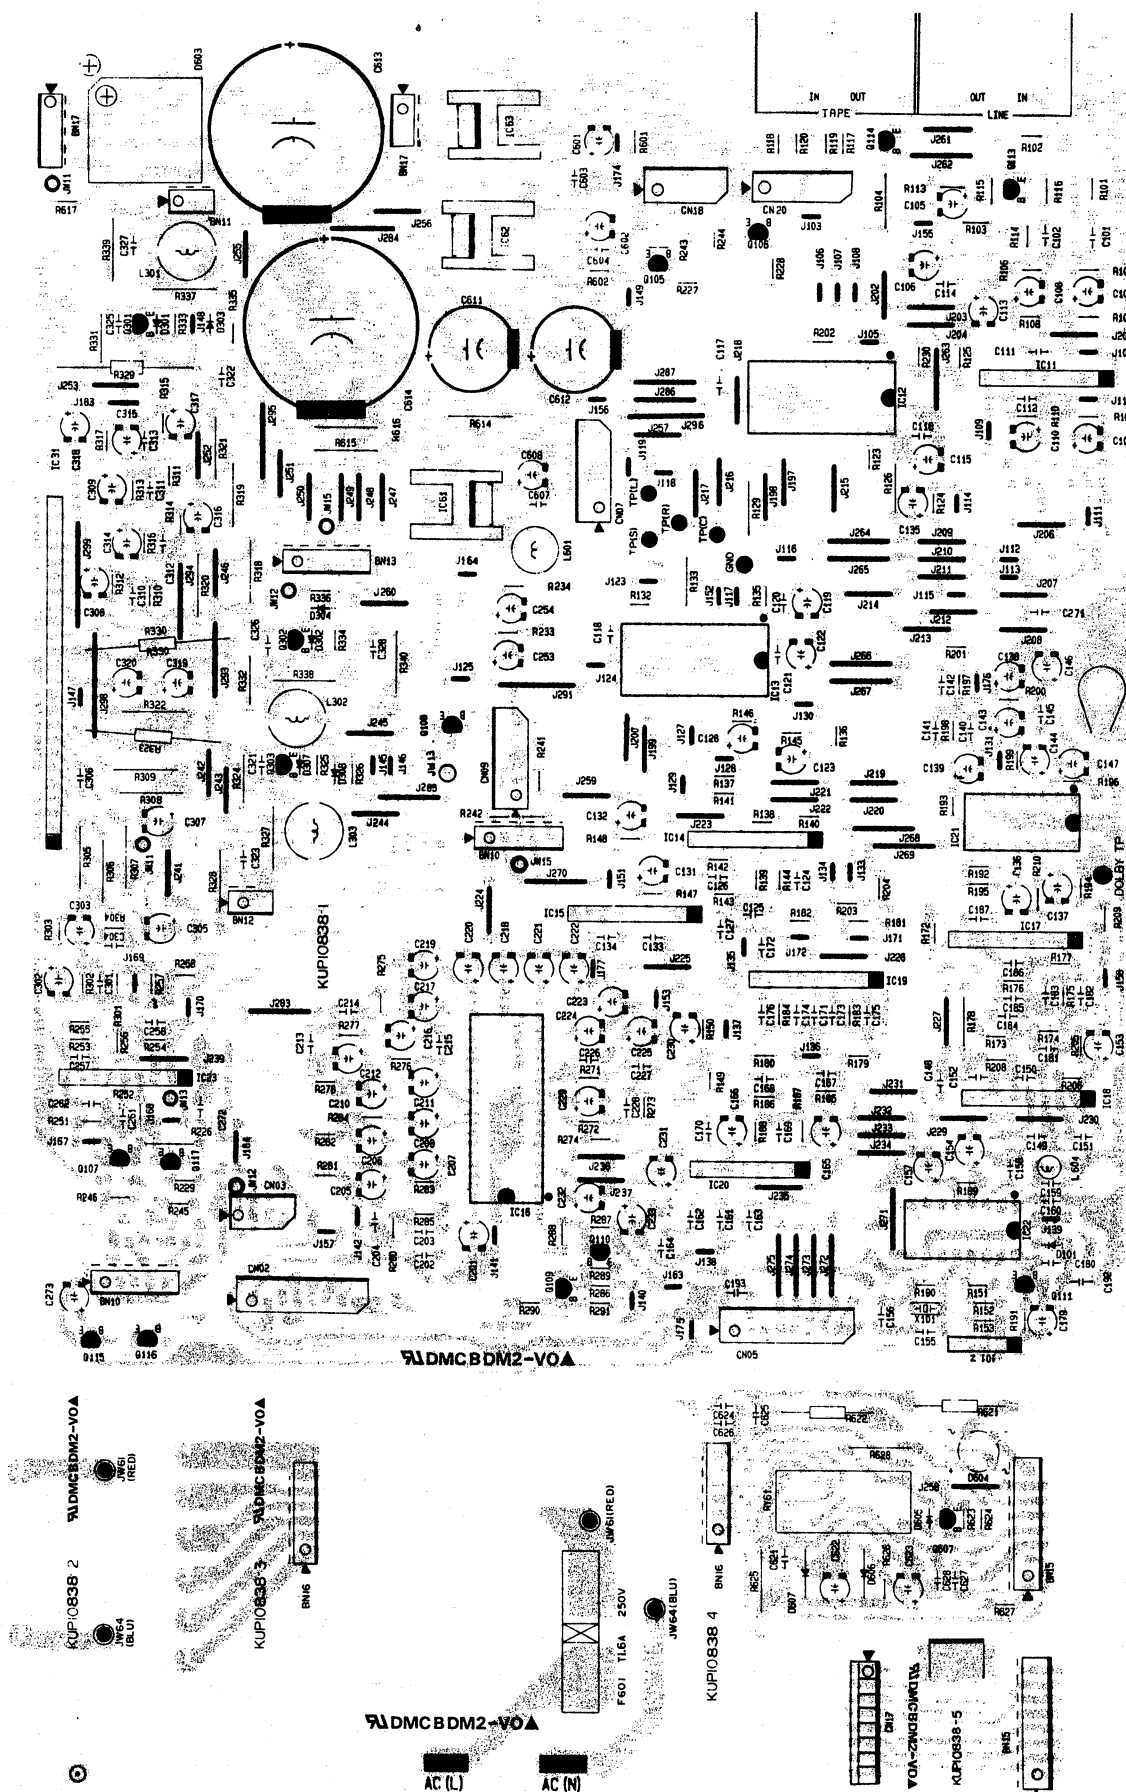

ANAM 1063A(NEC:μ PD75104GF)μ.

NO	SYMBOL	I/O	TEST TONE LED
1	P41	I/O	TEST TONE LED
2	P40	I/O	PHANTOM LED
3	P53	I/O	WIDE LED
4	P52	I/O	NORMAL LED
5	P51	I/O	3 STEREO LED
6	P50	I/O	PRO LOGIC LED
7	RESET	I/O	RESET
8	X2	O	X' TAL OSCILLATOR TERMINAL
9	X1	I	X' TAL OSCILLATOR TERMINAL
10	P63	I/O	
11	P62	I/O	
12	P61	I/O	
13	P60	I/O	
14	P73	I/O	LA 2780 IC CONTROL
15	P72	I/O	
16	P71	I/O	
17	P70	I/O	
18	P83	I/O	SURROUND ON/OFF
19	P82	I/O	POWER MUTE
20	P81	I/O	
21	P80	I/O	MUTE
22	P93	I/O	POWER ON/OFF
23	P92	I/O	
24	P91	I/O	
25	P90	I/O	VOLUME LED
26	Vss		GND
27	P13/INT3	I	
28	P12/INT2	I	
29	P11/INT1	I	PROTECTOR INPUT
30	P10/INT0	I	
31	PTH 03	I	
32	PTH 02	I	
33	PTH 01	I	
34	PTH 00	I	
35	T10	I	
36	T11	I	
37	P23	I/O	
38	P22/PCL	I/O	YM7128 CONTROL, DIN (DATA INPUT)
39	P21/PT01	I/O	YM7128 CONTROL, AO (Address INPUT)
40	P20/PT00	I/O	YM7128 CONTROL, SCI (DATA SHIFT CLOCK INPUT)
41	P03/SI	I	
42	P02/SO	I/O	
43	P01/SCK	I/O	
44	P00/INT4	I	
45	P123	I/O	NJU7312L CONTROL, STROBE 2
46	P122	I/O	NJU7312L CONTROL, STROBE 1
47	P121	I/O	NJU7312L CONTROL, CLOCK
48	P120	I/O	NJU7312L CONTROL, DATA
49	P133	I/O	
50	P132	I/O	
51	P131	I/O	KEY OUTPUT
52	P130	I/O	KEY OUTPUT
53	P143	I/O	KEY INPUT
54	P142	I/O	KEY INPUT
55	P141	I/O	KEY INPUT
56	P140	I/O	KEY INPUT
57	NC		
58	Vcc		+5V POWER SUPPLY
59	P33	I/O	DELAY TIME LED (SHORT)
60	P32	I/O	DELAY TIME LED (MIDDLE)
61	P31	I/O	DELAY TIME LED (LONG)
62	P30	I/O	LIVE LED
63	P43	I/O	DOVE LED
64	P42	I/O	HALL LED

LA2780(SANYO:DOLBY PRO LOGIC DECODER)

LA2780 PIN VOLTAGE

			PIN NO		
			Pin 1	Pin 2	Pin 3
DOLBY PROLOGIC	TEST TONE	OFF	1/2 V _{cc}	H	H
		ON	GND	L	L
				H	H
				L	L
3 STEREO	TEST TONE	OFF	V _{cc}	H	H
		ON	GND	L	L
				H	H
				L	L
OTHER SURROUND			1/2 V _{cc}	L	L
SURROUND OFF			H	L	L


DOLBY PROLOGIC	CENTER MODE	Pin 4	Pin 5
	NORMAL	L	L
	WIDE	L	H
3 STEREO	PHANTOM	H	L
	NORMAL	L	L
	WIDE	L	H

V_{cc}=5V H=5V L=0V


YM7128B (YAMANA:DIGITAL DELAY)

NO	SYMBOL	I/O	
1	V _{cc}		+5V POWER SUPPLY
2	AV _{cc}		+5V POWER SUPPLY
3	CH	O	SAMPLE/HOLD CAPACITOR TERMINAL
4	AIN	I	ANALOG SIGNAL INPUT TERMINAL
5	DV	O	REFERENCE VOLTAGE OUTPUT
6	/TI		
7	LO	O	L CHANNEL OUTPUT
8	RO	O	R CHANNEL OUTPUT
9	AV _{ss}		GND
10	V _{ss}		GND
11	XO	O	X' TAL OSCILLATOR TERMINAL
12	XI	I	X' TAL OSCILLATOR TERMINAL
13	SCI	I	DATA SHIFT CLOCK INPUT
14	AO	I	Address/data INPUT
15	DIN	I	DATA INPUT
16	/IC	I	Initial CLEAR


EXPLOSION

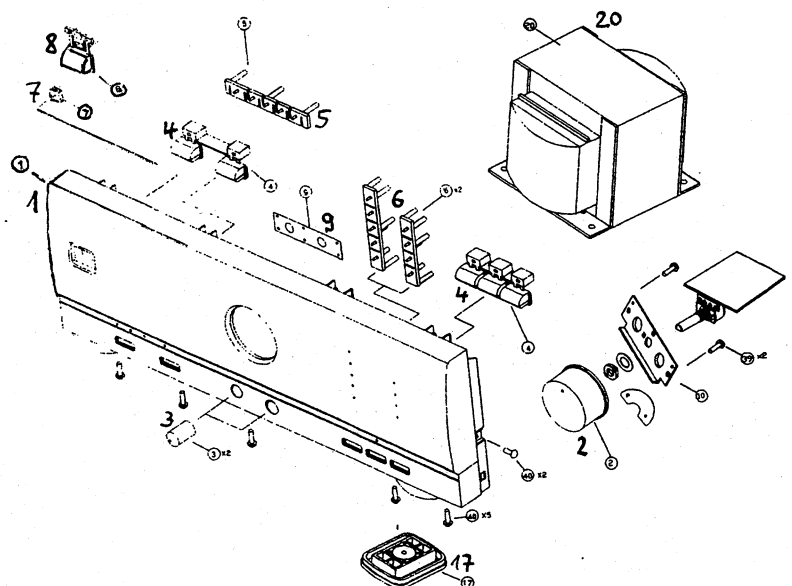

■ WIRING DIAGRAM

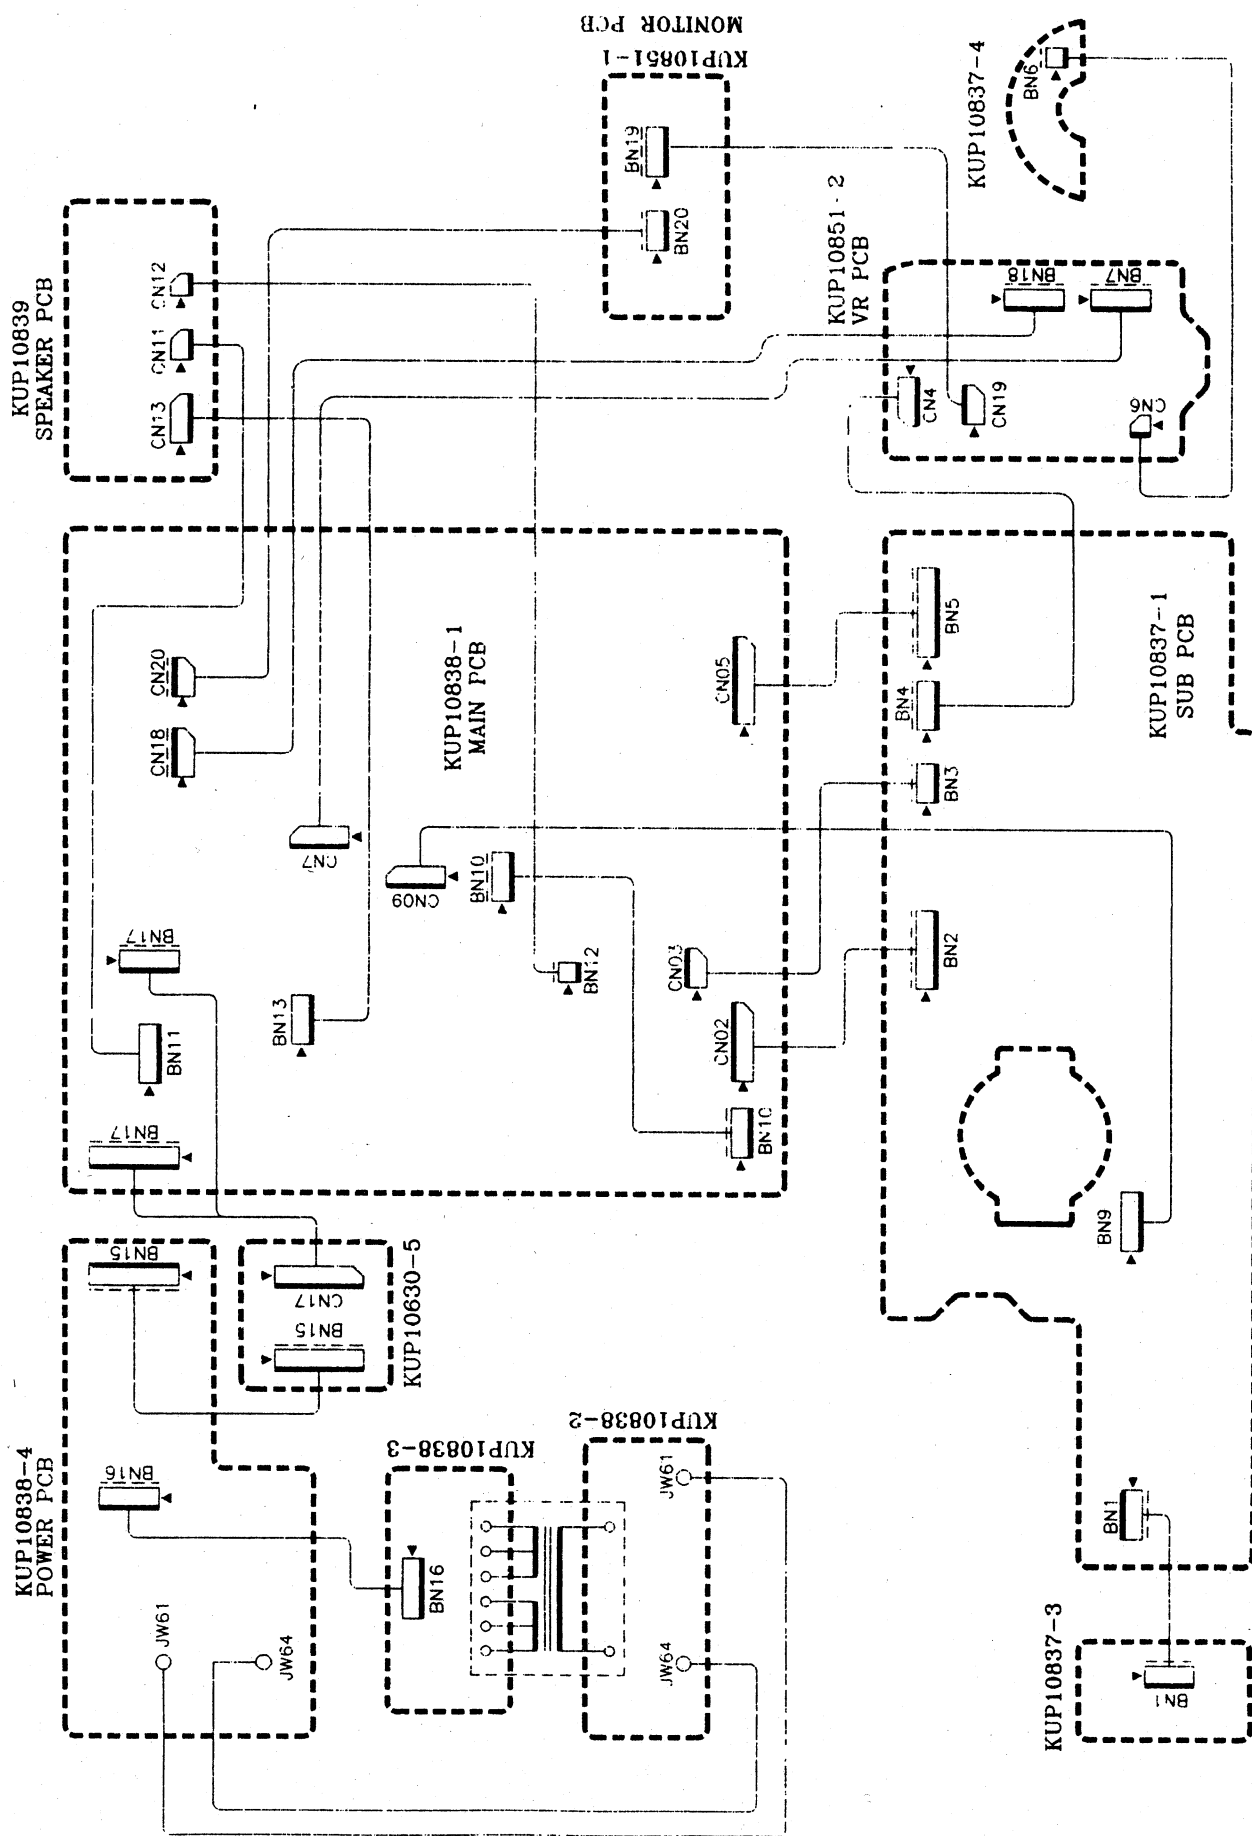

CD-PLATINE

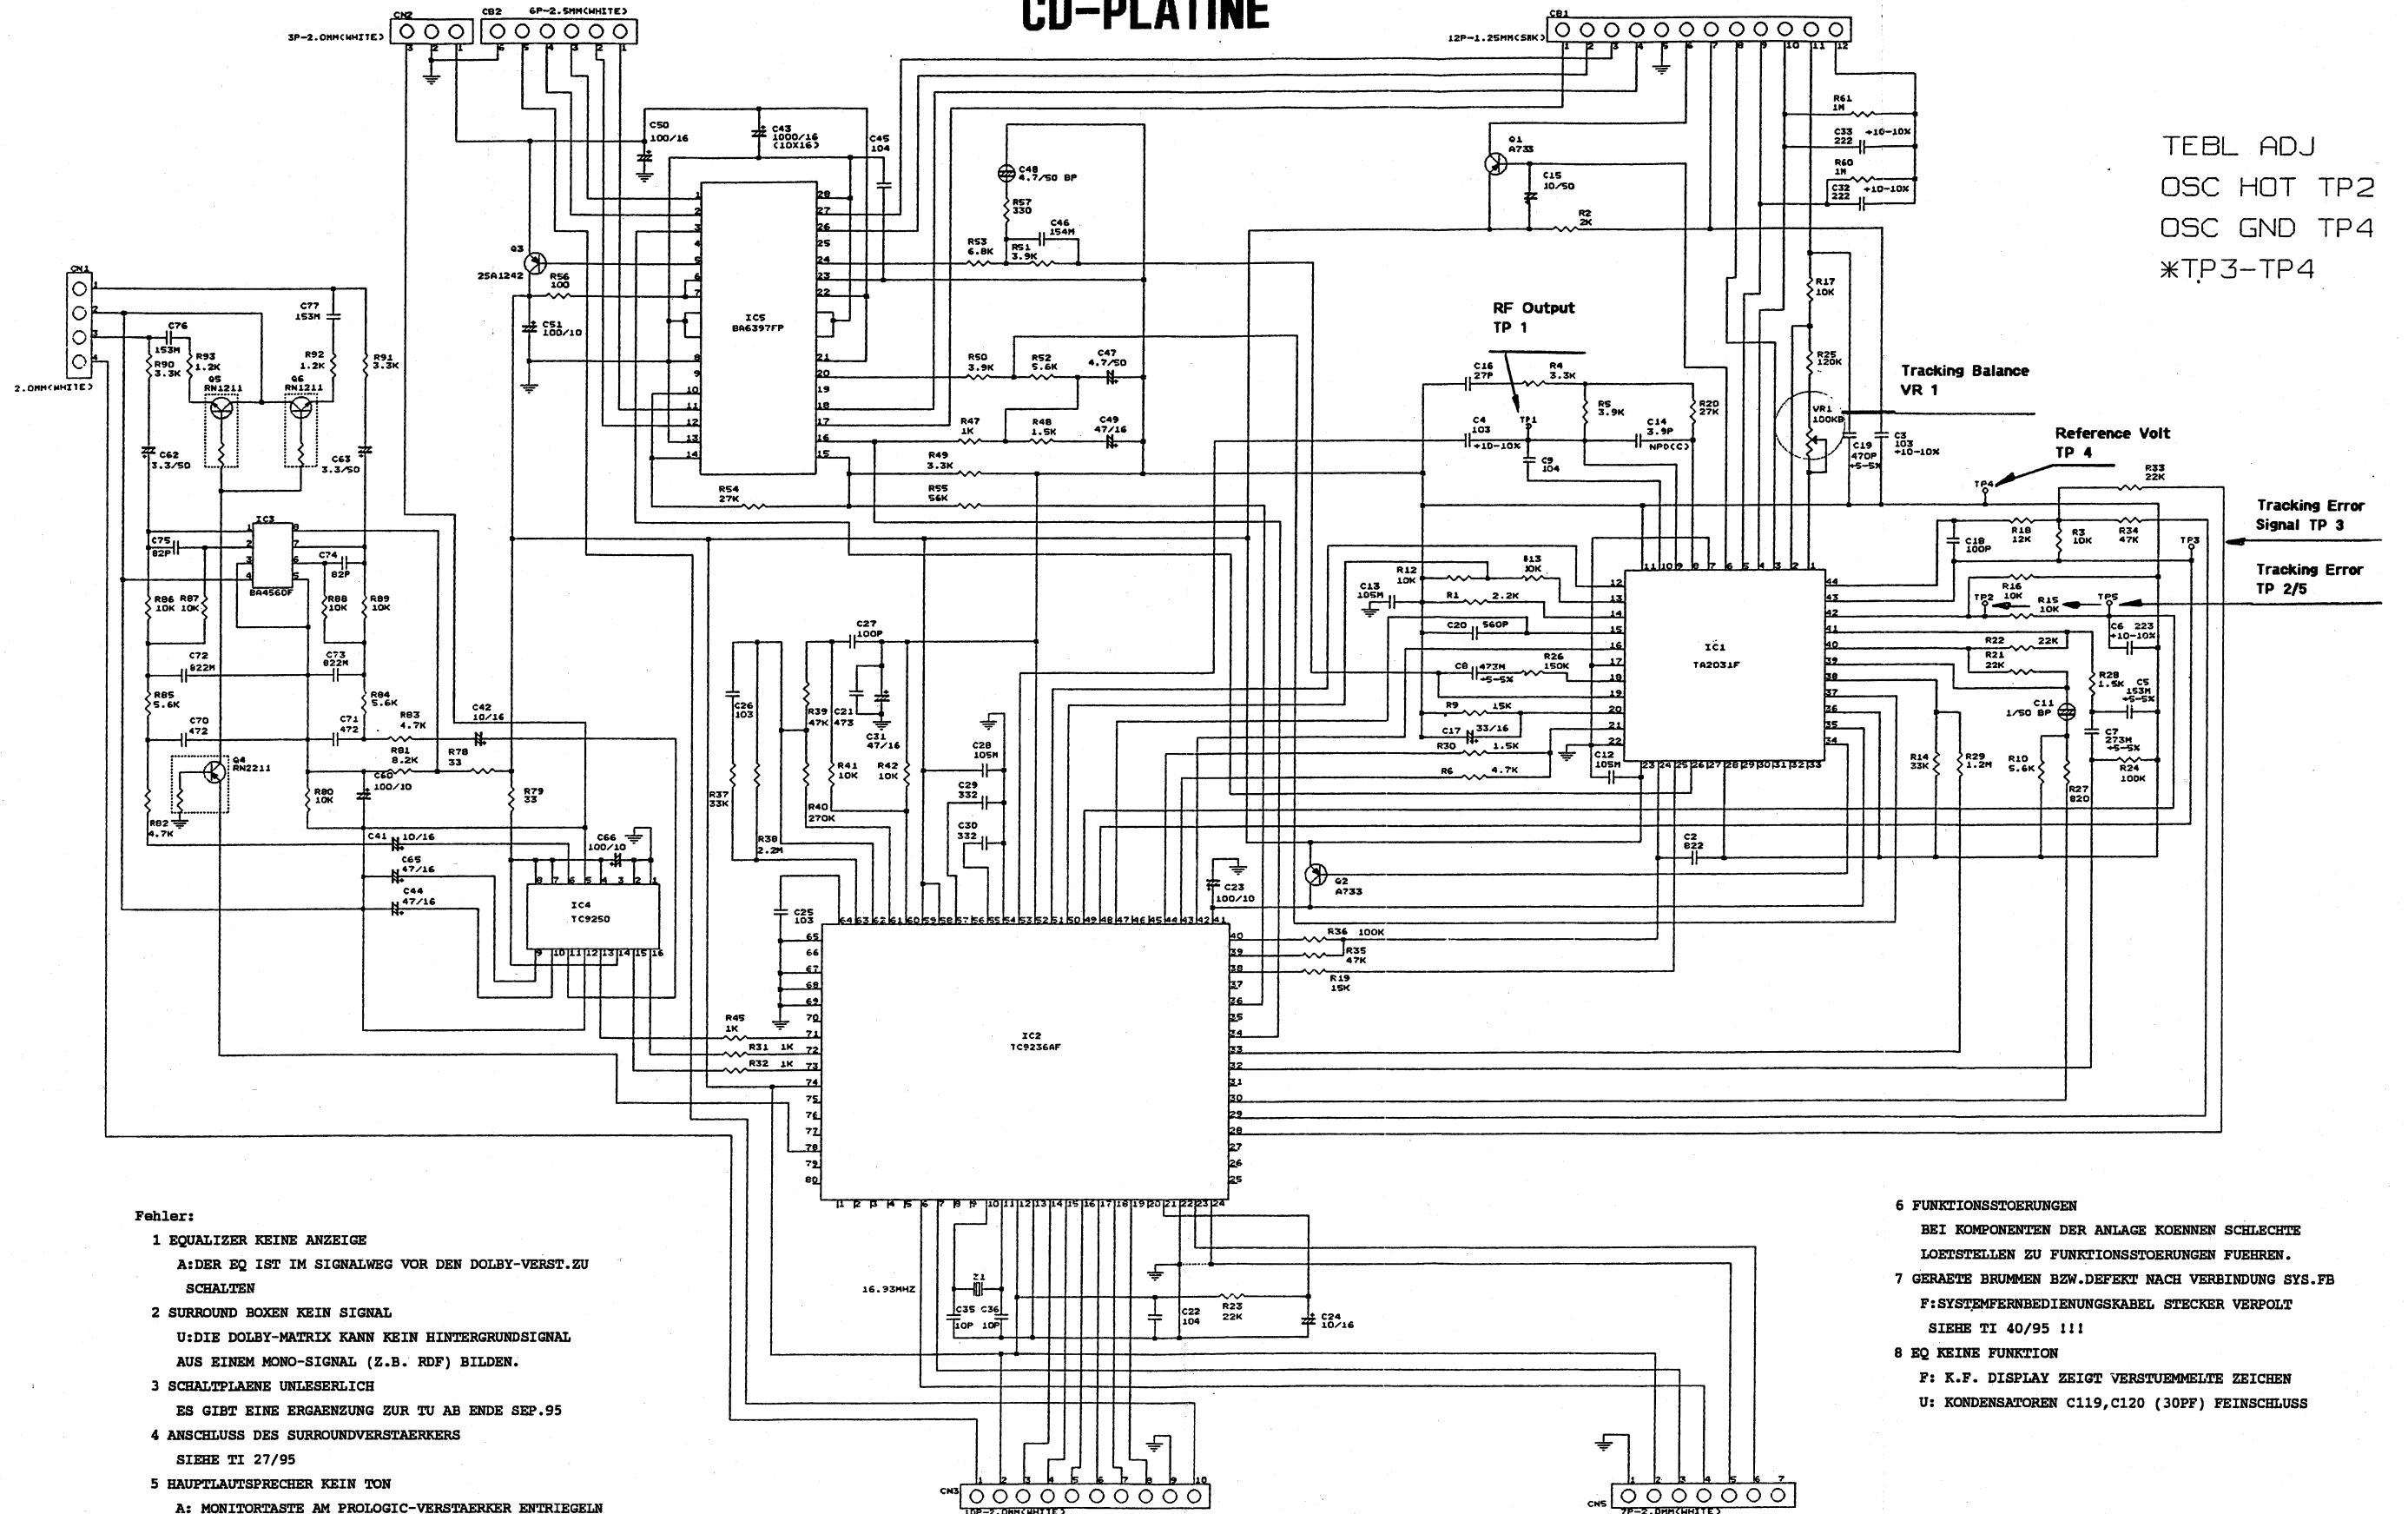

Fehler:

- EQUALIZER KEINE ANZEIGE
A: DER EQ IST IM SIGNALWEG VOR DEN DOLBY-VERST.ZU SCHALTEN
- SURROUND BOXEN KEIN SIGNAL
U: DIE DOLBY-MATRIX KANN KEIN HINTERGRUNDSIGNAL AUS EINEM MONO-SIGNAL (Z.B. RDF) BILDEN.
- SCHALTPLAENE UNLESERLICH
ES GIBT EINE ERGAENZUNG ZUR TU AB ENDE SEP.95
- ANSCHLUSS DES SURROUNDVERSTAEKERS
SIEHE TI 27/95
- HAUPTLAUTSPRECHER KEIN TON
A: MONITORTASTE AM PROLOGIC-VERSTAEKER ENTRIEGELN

6 FUNKTIONSTOERUNGEN

BEI KOMPONENTEN DER ANLAGE KOENNEN SCHLECHTE LOETSTELLEN ZU FUNKTIONSTOERUNGEN FUEHREN.


7 GERAETE BRUMMEN BZW.DEFEKT NACH VERBINDUNG SYS.FB

F: SYSTEMFERNBEDIENUNGSKABEL STECKER VERPOLT
SIEHE TI 40/95 !!!

8 EQ KEINE FUNKTION


F: K.F. DISPLAY ZEIGT VERSTUEMMELTE ZEICHEN
U: KONDENSATOREN C119,C120 (30PF) FEINSCHLUSS

TUNER 2.AUSFÜHRUNG

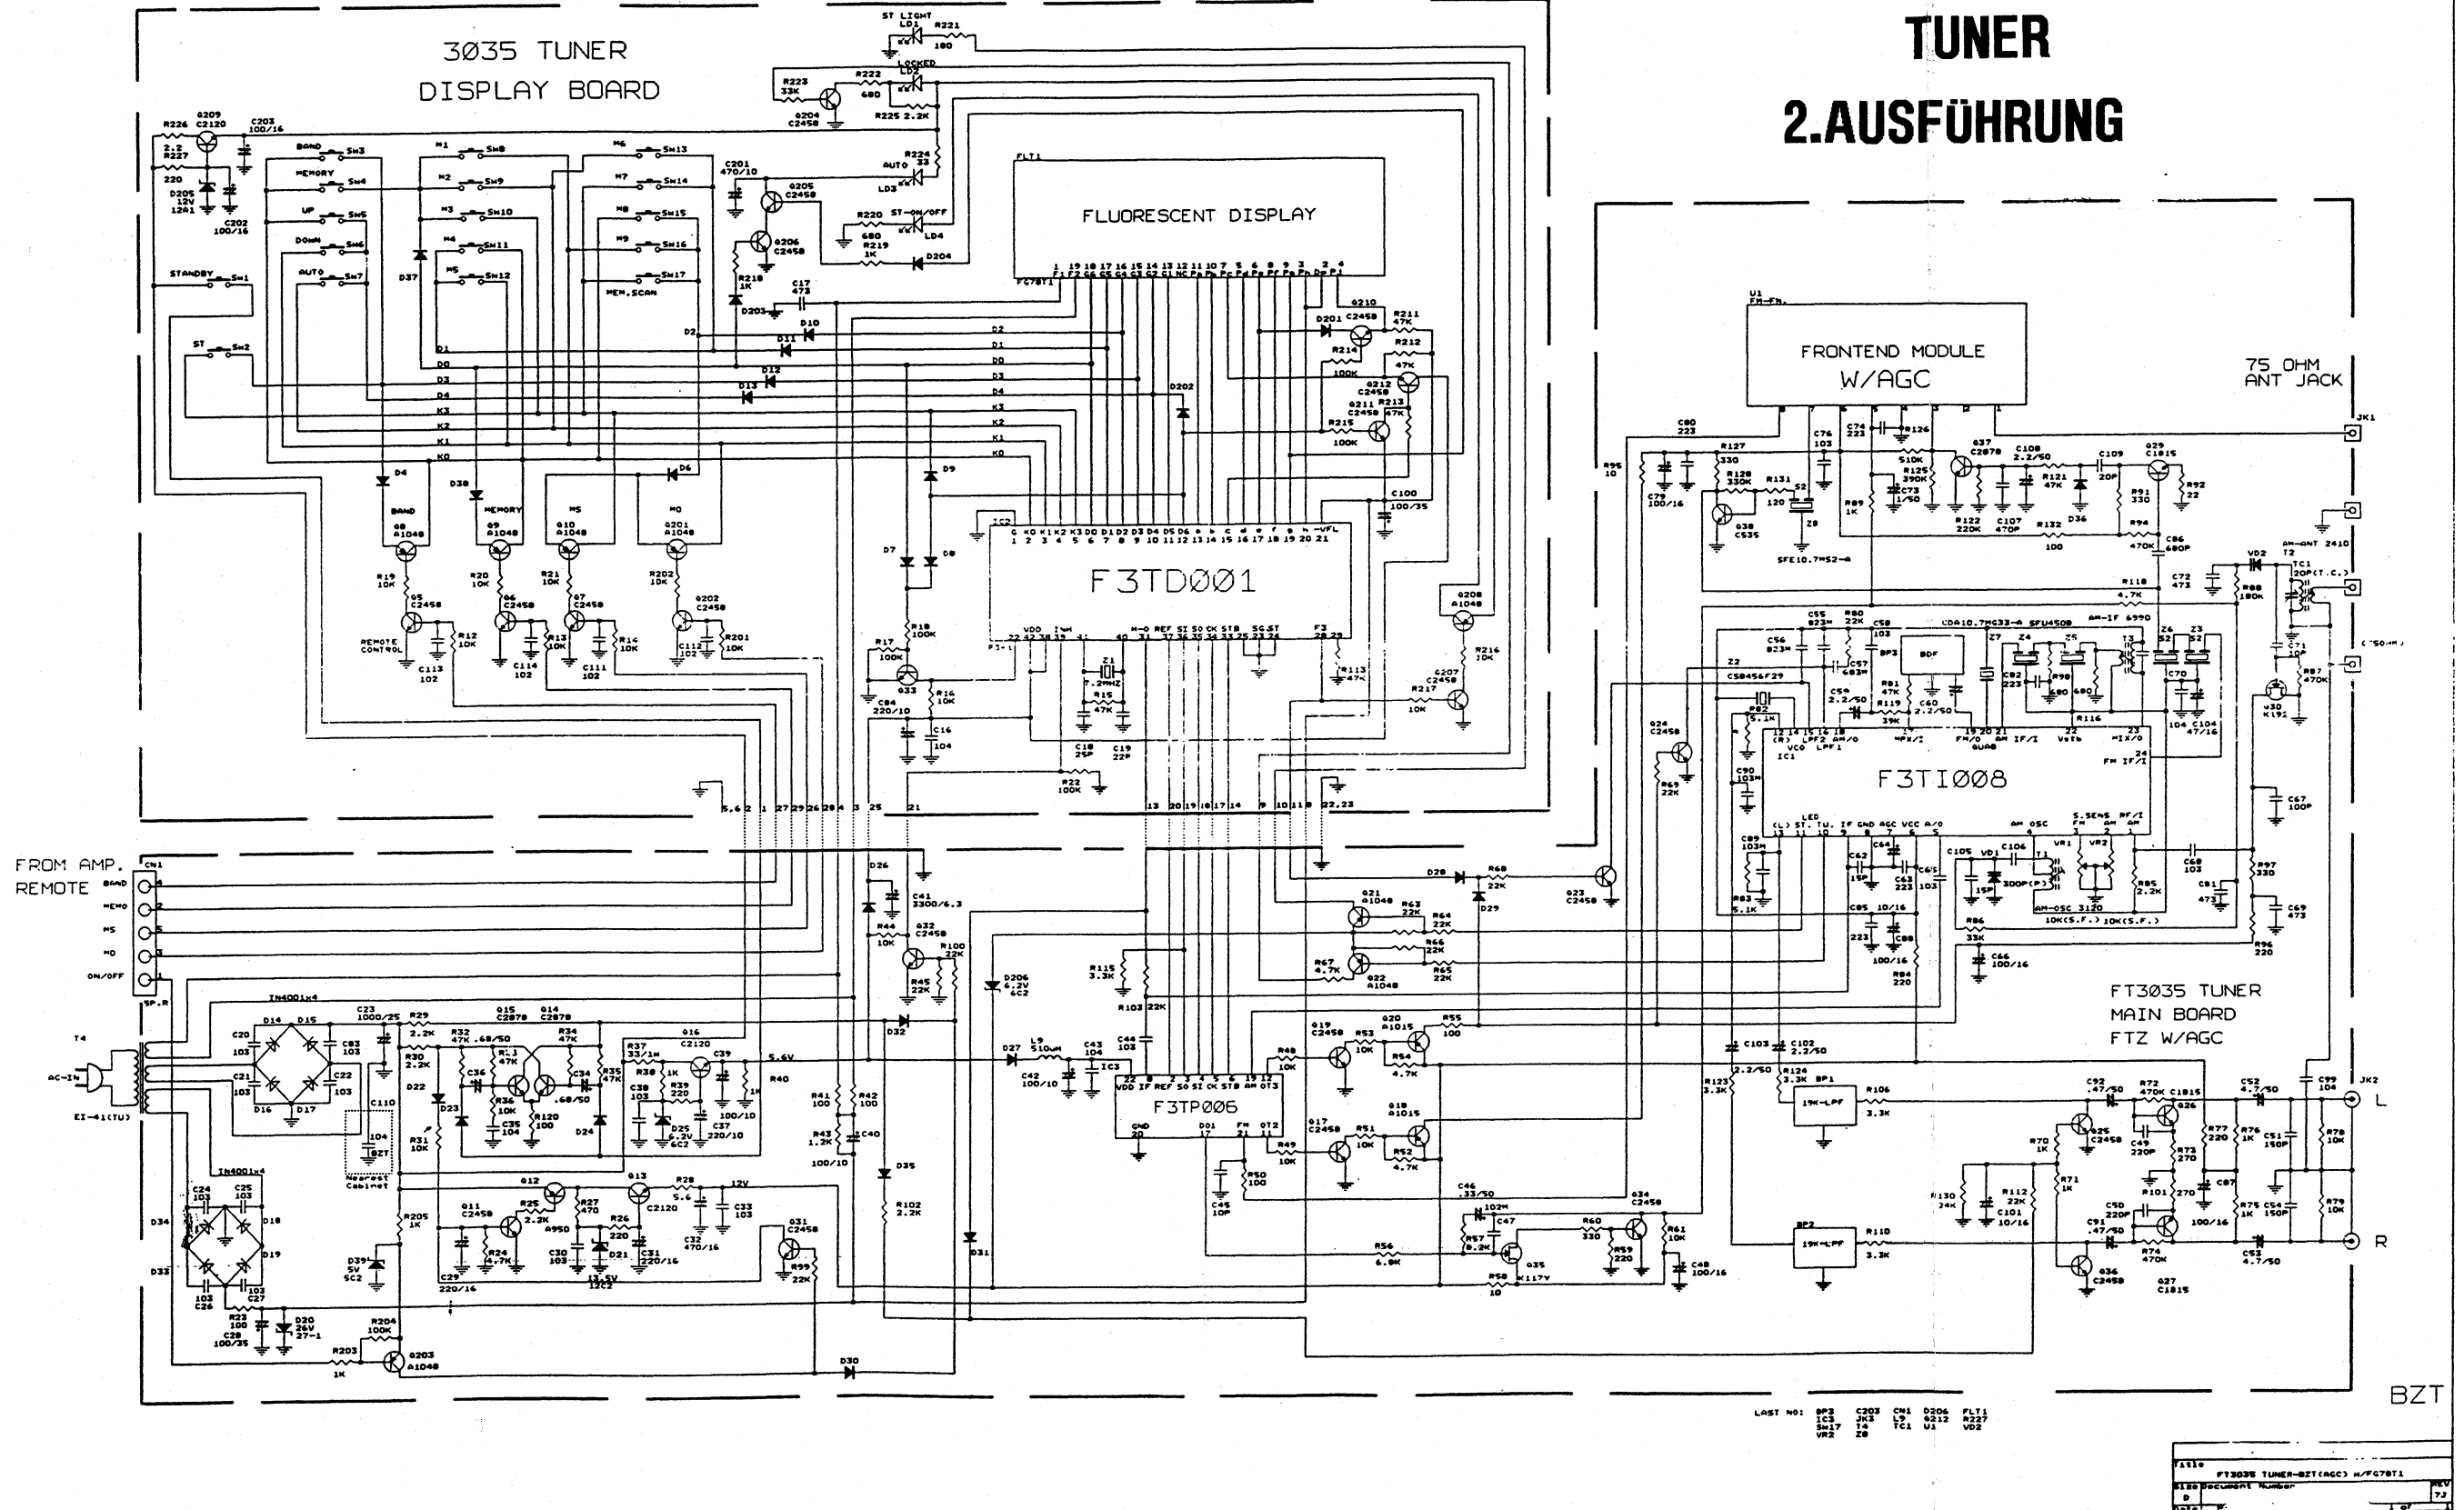


BZT

Title		FT3035 EQUALIZER	
Size	Document Number	RE IN	
D			

 

SCHEMATIC DIAGRAM (MAIN)

Suppl 4

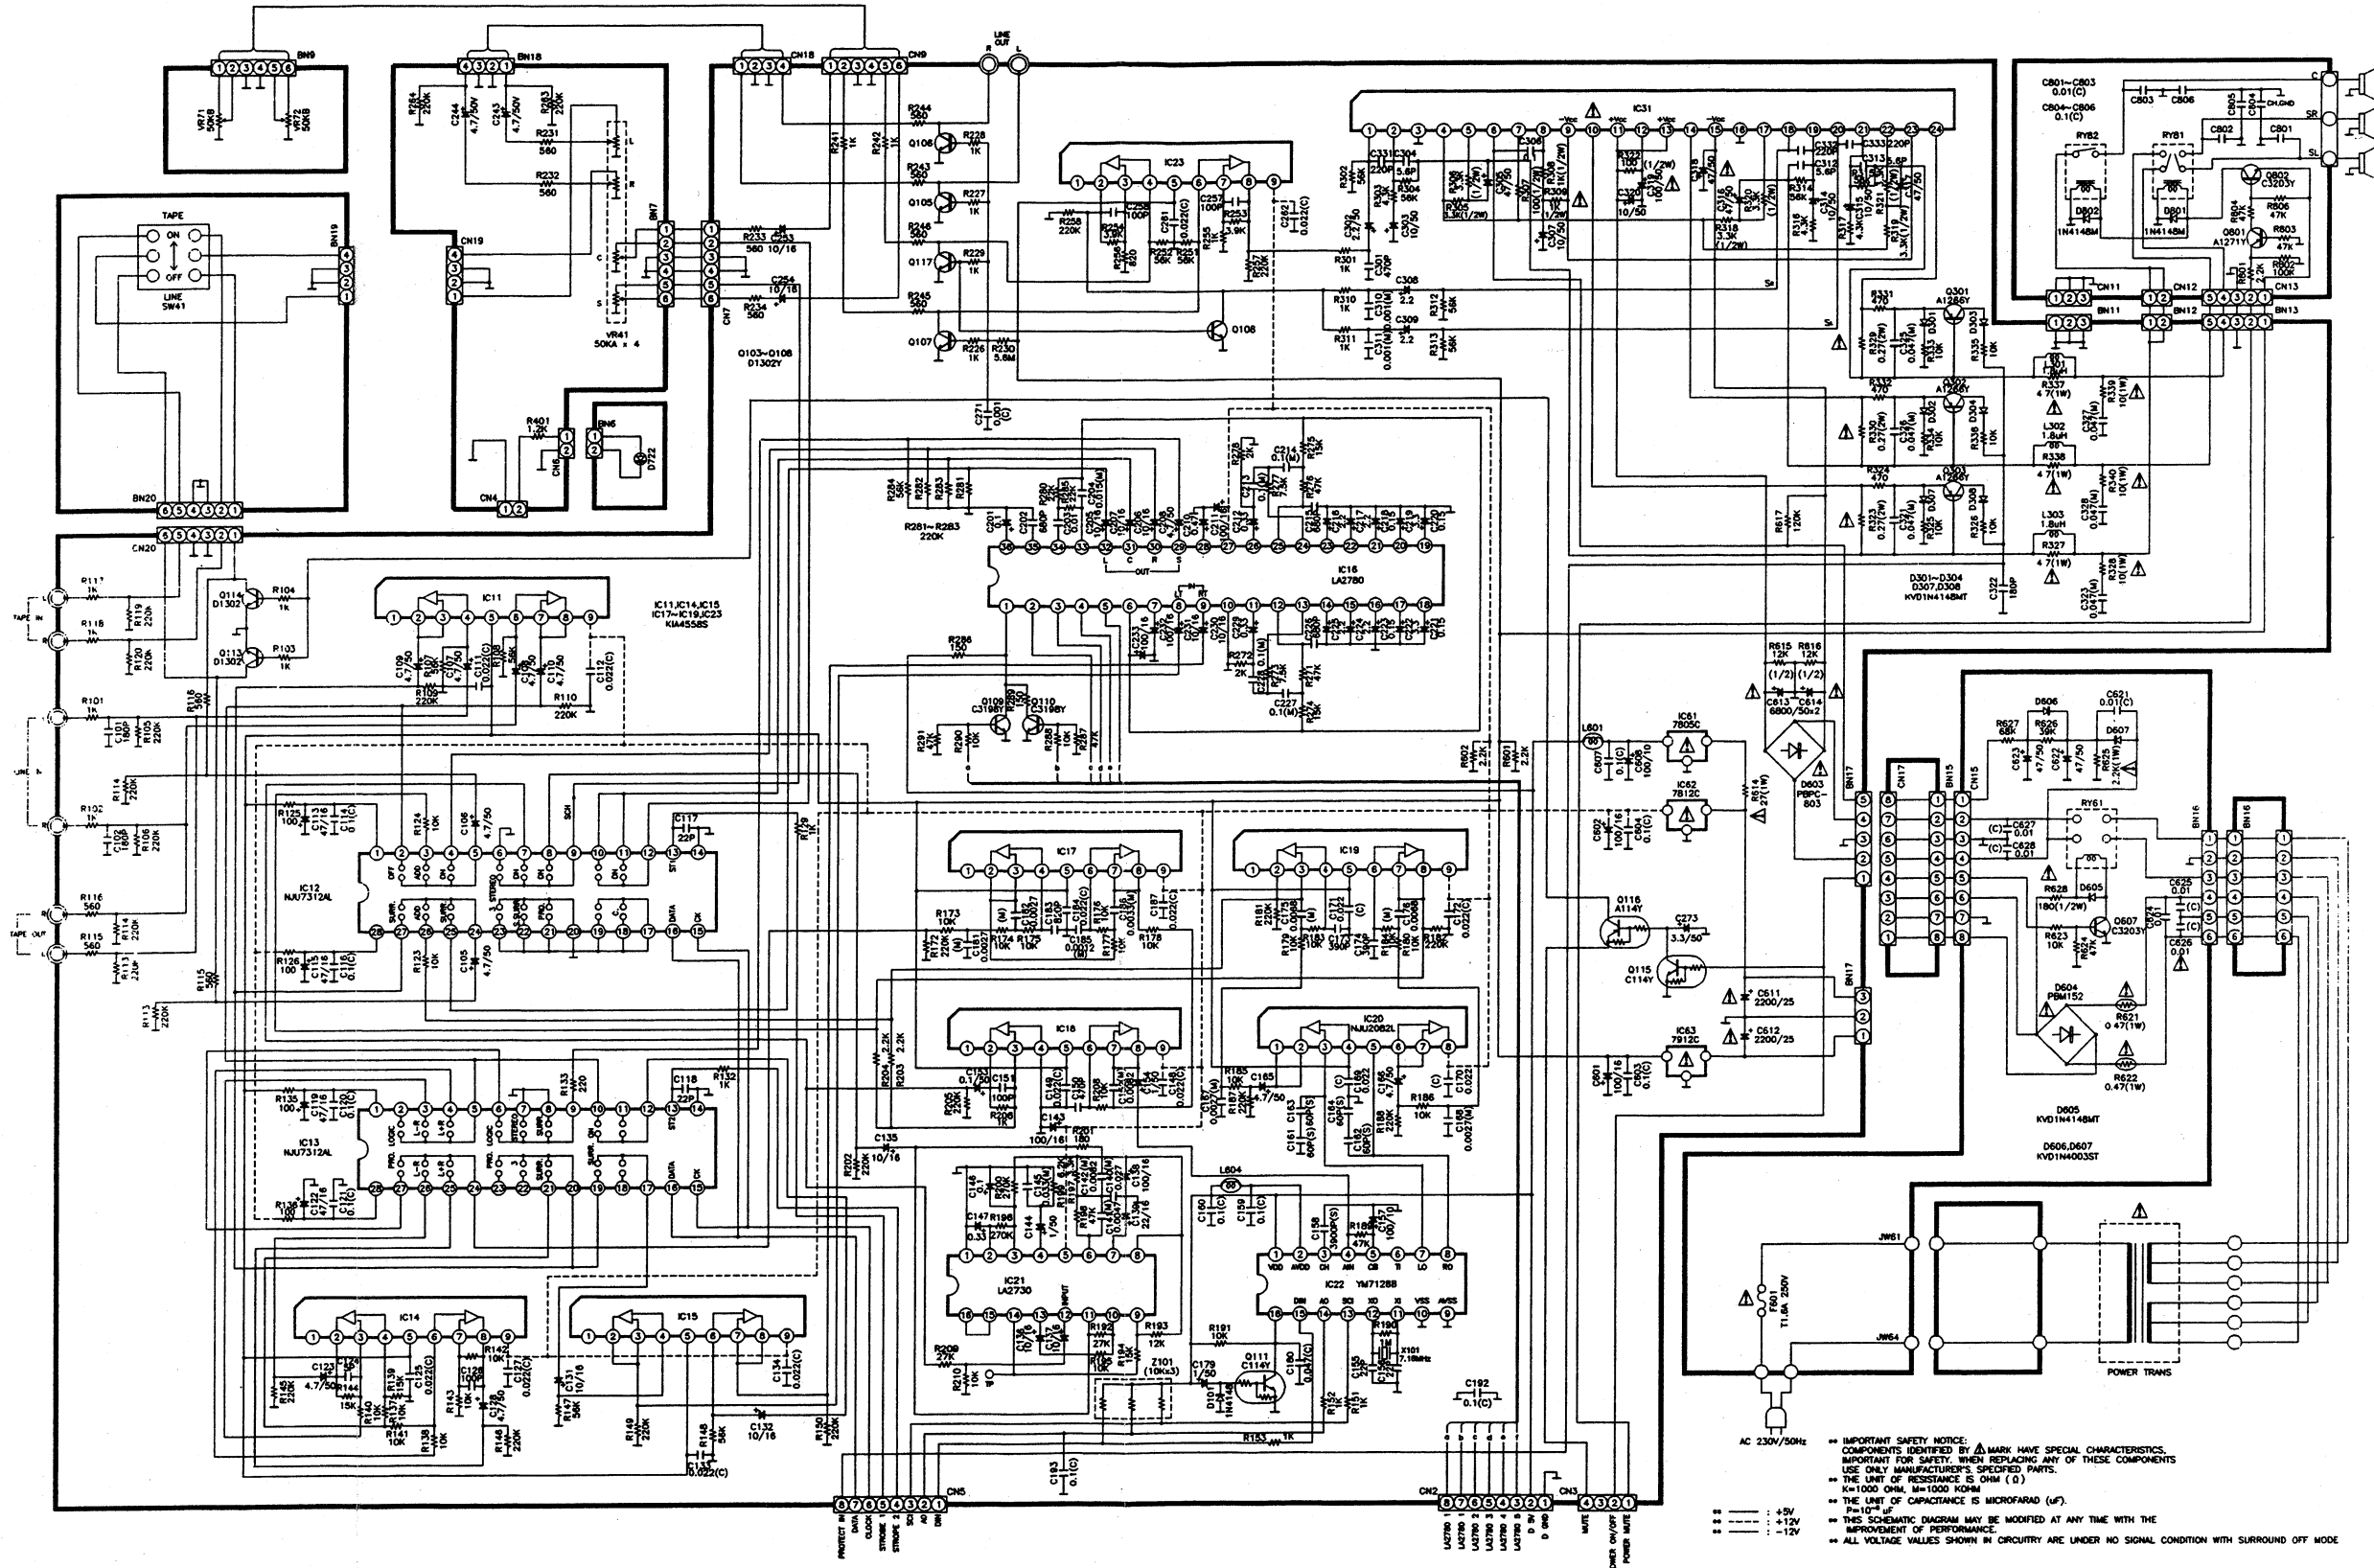

IC11,14,15,17,18,19,23 (OP AMP)

NO	1	2	3	4	5	6	7	8
V	11.8	0	0	0	-12	2.4	2.4	11.8

IC20

NO	1	2	3	4	5	6	7	8
V	2.4	2.4	2.4	-12	2.4	2.4	2.4	11.8

IC21(DOLBY NR IC)

NO	1	2	3	4	5	6	7	8
V	0	8.3	8.3	8.6	11.8	8.3	8.3	8.3
V	8.3	5.8	5.8	8.3	8.3	8.3	5.8	5.8

IC22(TIME DELAY IC)

NO	1	2	3	4	5	6	7	8
V	5	5	5	2.5	2.5	5	2.5	2.5
V	5	10	11	12	13	14	15	16
V	0	0	2	2	5	0	0	5

IC12,13(FUNCTION SELECTOR)

NO	1	2	3	4	5	6	7	8
V	-12	0	0	0	0	0	0	0
V	0	8	9	10	11	12	13	14
V	0	0	0	0	0	0	0	0
V	15	16	17	18	19	20	21	22
V	0	0	0	0	0	0	0	0
V	22	23	24	25	26	27	28	29
V	0	0	0	0	0	0	0	11.8

IC16(DOLBY SURROUND IC)

NO	1	2	3	4	5	6	7	8
V	4.8	0	0	4.8	4.8	5.7	5.7	5.7
V	10	11	12	13	14	15	16	17
V	0	5.7	5.7	5.7	8.2	8.2	5.8	5.8
V	18	20	21	22	23	24	25	26
V	5.7	5.7	5.7	8.2	8.2	5.7	5.4	5.7
V	28	29	30	31	32	33	34	35
V	5.8	5.8	5.8	5.8	5.8	5.8	0	1.8

AC 230V/50Hz

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY Δ MARK HAVE SPECIAL CHARACTERISTICS.
IMPORTANT FOR SAFETY, WHEN REPLACING ANY OF THESE COMPONENTS
USE ONLY MANUFACTURER'S SPECIFIED PARTS.
THE UNIT OF RESISTANCE IS OHM (Ω).
1K=1000 OHM, 1M=1000 K OHM.
THE UNIT OF CAPACITANCE IS MICROFARAD (μF).
P=10⁻¹² W.
THIS SCHEMATIC DIAGRAM MAY BE MODIFIED AT ANY TIME WITH THE
IMPROVEMENT OF PERFORMANCE.
ALL VOLTAGE VALUES SHOWN IN CIRCUITRY ARE UNDER NO SIGNAL CONDITION WITH SURROUND OFF MODE.

■ SCHEMATIC DIAGRAM (SUB)

